



# **FOS-3128 Series**

**28-port L2 Managed Gigabit Fiber Switch**

**Network Management**

**User's Manual**

**Version 1.1**

## Revision History

Version	F/W	Date	Description
0.90	1.00.00	20150319	Fisrt release
0.91	1.00.03	20150707	Add HTTP upgrade, DHCP Option 82 Suboption
0.91	1.00.05	20150721	Add CPU & Memory Statistics status
0.91	1.00.0A	20151228	Revise loop detection (Section 4.4.15) Add port isolation (Section 4.4.12.4) Add Statistics polling port and interval (Section 4.4.1)
0.91	1.00.0F	20160115	Add MAC Limiters (Section 4.4.12.9, 2.6.16) Add ACL Status Overview (Section 4.4.13)
0.92	1.00.0I	20160316	Add TACACS authentication (Section 4.2.1) Add MD5 authentication method (Section 4.2) Add DHCP Option 82 Remote/Circuit ID formatted (Section 4.4.12.2)
0.93	1.00.0R	20161012	Add PPPoE server trust ports (Section 2.6.7, 2.6.25, 4.4.12.4) Add SSH management service (Section 4.3.2) Add terminal length command (Section 2.6.22) Add show MAC address table based on interface, MAC and VLAN (Section 2.6.11) Add ISP port negate command (Section 2.6.24)
1.0	1.00.1N	2018/03/22	Add the description of new functions upon the latest firmware.
1.1	1.00.29	2019/08/13	Add the description about the supplier default CLI commands, CTS branches' contact information and new functions upon the latest firmware. Modify the description of DHCP recycle function both in CLI and Web.

## Trademarks

CTS is a registered trademark of Connection Technology Systems Inc..  
Contents are subject to revision without prior notice.  
All other trademarks remain the property of their owners.

## Copyright Statement

Copyright © Connection Technology Systems Inc..

This publication may not be reproduced as a whole or in part, in any way whatsoever unless prior consent has been obtained from Connection Technology Systems Inc..

## FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limitations are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local distributors or an experienced radio/TV technician for help.
- Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications to the equipment, which are not approved by the party responsible for compliance, could affect the user's authority to operate the equipment.

Copyright © 2019 All Rights Reserved.

Company has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check with your local distributors for the latest information. No part of this document can be copied or reproduced in any form without written consent from the company.

Trademarks:

All trade names and trademarks are the properties of their respective companies.

# CTS Contact Information

---

## ■ Headquarters/Manufacturer:

### **Connection Technology Systems Inc.**

*18F-6, No.79, Sec.1, Xintai 5th Rd.,*

*Xizhi Dist., New Taipei City 221, Taiwan(R.O.C.)*

*Tel: +886-2-2698-9661*

*Fax: +886-2-2698-3960*

*Sales Direct Line: +886-2-2698-9201*

*[www.ctsystem.com](http://www.ctsystem.com)*

## ■ Global Offices:

### **Connection Technology USA**

*40538 La Purissima Way,*

*Fremont, CA 94539, USA*

*Tel: +1-510-509-0304*

*Sales Direct Line: +1-510-509-0305*

*E-mail: [cts\\_us@ctsystem.com](mailto:cts_us@ctsystem.com)*

### **Connection Technology Systems Japan**

*Higobashi Bldg. No.3 R201, 1-23-13,*

*Edobori, Nishi-ku, Osaka 550-0002, Japan*

*Tel: +81-6-6450-8890*

*E-mail: [cts\\_japan@ctsystem.com](mailto:cts_japan@ctsystem.com)*

### **Connection Technology Systems NE AB**

*August Barks Gata 21,*

*421 32 Västra Frölunda, Sweden*

*Tel: +46-31-221980*

*E-mail: [info@ctsystem.se](mailto:info@ctsystem.se)*

### **Connection Technology Systems Central Europe (COMPONET Handels GmbH)**

*Hirschstettner Straße 19-21/Stiege I*

*A-1220 Vienna, Austria*

*Tel: +43-1-235 05 66-0*

*E-mail: [cts\\_ce@ctsystem.com](mailto:cts_ce@ctsystem.com)*



# Table of Content

<b>Chapter 1. INTRODUCTION .....</b>	<b>11</b>
1.1 Management Options .....	11
1.2 Management Software .....	13
1.3 Management Preparations .....	14
<b>Chapter 2. Command Line Interface (CLI).....</b>	<b>16</b>
2.1 Using the Local Console.....	16
2.2 Remote Console Management - Telnet .....	17
2.3 Navigating CLI .....	17
2.3.1 General Commands.....	18
2.3.2 Quick Keys.....	18
2.3.3 Command Format.....	19
2.3.4 Login Username & Password .....	20
2.4 User Mode.....	21
2.4.1 Ping Command .....	21
2.4.2 Traceroute Command .....	21
2.5 Privileged Mode.....	22
2.5.1 Copy-cfg Command .....	22
2.5.2 Firmware Command .....	23
2.5.3 IP Command.....	24
2.5.4 Ping Command .....	24
2.5.5 Reload Command.....	25
2.5.6 Traceroute Command .....	25
2.5.7 Warm-reload Command.....	26
2.5.8 Write Command.....	27
2.5.9 Configure Command.....	28
2.5.10 Show Command .....	28
2.6 Configuration Mode .....	31
2.6.1 Entering Interface Numbers .....	31
2.6.2 No Command.....	32
2.6.3 Show Command .....	32
2.6.4 ACL Command.....	35
2.6.5 Archive Command.....	38
2.6.6 Channel-group Command.....	39
2.6.7 Dot1x Command.....	45
2.6.8 Fast-redundancy Command .....	48

2.6.9 IP Command .....	51
2.6.10 IPv6 Command .....	62
2.6.11 LLDP Command .....	65
2.6.12 Loop Detection Command .....	67
2.6.13 I2protocol-tunnel Command .....	70
2.6.14 MAC Command .....	73
2.6.15 Management Command .....	75
2.6.16 Mirror Command .....	77
2.6.17 NTP Command .....	77
2.6.18 QoS Command .....	79
2.6.19 Security Command .....	88
2.6.20 Sfp Command .....	96
2.6.21 SNMP-Server Command .....	99
2.6.22 Spanning-tree Command .....	105
2.6.23 Switch Command .....	116
2.6.24 Switch-info Command .....	118
2.6.25 Syslog Command .....	120
2.6.26 Terminal Length Command .....	121
2.6.27 User Command .....	121
2.6.28 VLAN Command .....	125
2.6.28.1 Port-Based VLAN .....	125
2.6.28.2 802.1Q VLAN .....	125
2.6.28.3 Introduction to Q-in-Q (DOT1Q-Tunnel) .....	128
2.6.29 Interface Command .....	138
2.6.30 Show interface statistics Command .....	147
2.6.31 Show sfp Command .....	148
2.6.32 Show running-config & start-up-config & default-config Command .....	148
2.6.33 Show arp Command .....	149
2.6.34 Show log Command .....	149
2.6.35 Show log link-flap Command .....	150
<b>Chapter 3. SNMP NETWORK MANAGEMENT .....</b>	<b>151</b>
<b>Chapter 4. WEB MANAGEMENT .....</b>	<b>152</b>
4.1 System Information .....	155
4.2 User Authentication .....	157
4.2.1 RADIUS/TACACS Configuration .....	159
4.3 Network Management .....	162
4.3.1 Network Configuration .....	163

4.3.2 System Service Configuration .....	167
4.3.3 RS232/Telnet/Console Configuration .....	168
4.3.4 Time Server Configuration .....	169
4.3.5 Device Community .....	170
4.3.6 SNMPv3 USM User .....	171
4.3.7 Trap Destination .....	174
4.3.8 Trap Configuration .....	175
4.3.9 Syslog Configuration .....	177
4.4 Switch Management .....	178
4.4.1 Switch Configuration .....	179
4.4.2 Port Configuration .....	181
4.4.3 Link Aggregation .....	182
4.4.3.1 Distribution Rule .....	183
4.4.3.2 Port Trunking .....	183
4.4.3.3 LACP Port Configuration .....	185
4.4.4 Rapid Spanning Tree .....	187
4.4.4.1 RSTP Switch Settings .....	188
4.4.4.2 RSTP Aggregated Port Settings .....	189
4.4.4.3 RSTP Physical Port Settings .....	190
4.4.5 802.1X Configuration .....	193
4.4.5.1 802.1X System Configuration .....	194
4.4.5.2 802.1X Port Admin State .....	195
4.4.5.3 802.1X Port Reauthenticate .....	196
4.4.6 MAC Address Management .....	197
4.4.6.1 MAC Table Learning .....	197
4.4.6.2 Static MAC Table Configuration .....	199
4.4.7 VLAN Configuration .....	201
4.4.7.1 Port-Based VLAN .....	201
4.4.7.2 802.1Q VLAN .....	202
4.4.7.3 Introduction to Q-in-Q (DOT1Q-Tunnel) .....	205
4.4.7.4 IEEE 802.1q Tag VLAN .....	206
4.4.7.4.1 Trunk VLAN Table .....	207
4.4.7.4.2 VLAN Interface .....	208
4.4.7.4.3 Management VLAN .....	209
4.4.7.5 VLAN Translation Configuration .....	210
4.4.8 QoS Configuration .....	212
4.4.8.1 QoS Priority .....	212

4.4.8.2 QoS Rate Limit .....	215
4.4.9 IGMP/MLD Snooping .....	216
4.4.9.1 IGMP/MLD Configure .....	217
4.4.9.2 IGMP/MLD VLAN ID Configuration .....	218
4.4.9.3 IPMC Segment .....	219
4.4.9.4 IPMC Profile .....	220
4.4.9.5 IGMP Filtering .....	221
4.4.10 Static Multicast Configuration .....	223
4.4.11 Port Mirroring .....	224
4.4.12 SFP Port Threshold Configuration .....	225
4.4.13 Security Configuration .....	227
4.4.13.1 DHCP Option 82/DHCPv6 Option 37 Settings .....	229
4.4.13.2 DHCP Option 82 Configuration .....	231
4.4.13.3 DHCP Snooping .....	234
4.4.13.4 PPPoE Configuration .....	235
4.4.13.5 IP Source Guard Settings .....	235
4.4.13.6 Port Isolation .....	236
4.4.13.7 Static IP/IPv6 Table Configuration .....	237
4.4.13.7.1 Configure DHCP Snooping .....	238
4.4.13.8 Storm Control .....	239
4.4.13.9 MAC Limiters .....	241
4.4.13.10 Port Linkup Delay .....	243
4.4.13.10.1 Configure Port Linkup Delay based on “Follow_ Delay_Time” Delay Rule .....	243
4.4.13.10.2 Configure Port Linkup Delay based on “MAC_Limit” Delay Rule .....	244
4.4.13.11 Port Link Flap .....	245
4.4.14 Access Control List (ACL) Configuration .....	246
4.4.15 Layer 2 Protocol Tunnel Configuration .....	249
4.4.16 LLDP Configuration .....	251
4.4.17 Loop Detection Configuration .....	253
4.4.18 Fast Redundancy Configuration .....	255
4.4.18.1 Fast Ring v2 Protocol .....	257
4.4.18.1.1 Configure a Ring Example using the Fast Ring v2 Protocol .....	259
4.4.18.2 Chain Protocol .....	262
4.4.18.2.1 Configure a Chain Example using the Chain Protocol .....	264
4.5 Switch Monitor .....	268
4.5.1 CPU and Memory Statistics .....	270

4.5.2 CPU Temperature Status .....	271
4.5.3 Switch Port Status.....	274
4.5.4 Port Traffic Statistics .....	276
4.5.5 Port Packet Error Statistics .....	278
4.5.6 Port Packet Analysis Statistics .....	280
4.5.7 IEEE 802.1q VLAN Table.....	281
4.5.8 ARP Table .....	281
4.5.9 LACP Monitor.....	282
4.5.9.1 LACP Port Status .....	283
4.5.9.2 LACP Statistics.....	285
4.5.10 RSTP Monitor .....	286
4.5.10.1 RSTP Bridge Overview .....	286
4.5.10.2 RSTP Port Status .....	287
4.5.10.3 RSTP Statistics .....	288
4.5.11 802.1X Monitor.....	290
4.5.11.1 802.1X Port Status .....	290
4.5.11.2 802.1X Statistics.....	291
4.5.12 IGMP/MLD Monitor .....	292
4.5.12.1 IGMP Snooping Status.....	292
4.5.12.2 IGMP Group Table .....	293
4.5.12.3 MLD Snooping Status .....	294
4.5.12.4 MLD Group Table.....	294
4.5.13 SFP Information .....	296
4.5.13.1 SFP Port Info.....	296
4.5.13.2 SFP Port State .....	297
4.5.14 DCHP Snooping.....	299
4.5.15 Storm Control Status .....	300
4.5.16 MAC Limiters Status.....	301
4.5.17 MAC Address Table .....	302
4.5.18 Layer 2 Protocol Tunneling Status .....	303
4.5.19 LLDP Status .....	304
4.5.20 Loop Detection Status.....	305
4.5.21 Fast Redundancy Status.....	306
4.6 System Utility.....	309
4.6.1 Ping.....	310
4.6.2 Event Log.....	310
4.6.3 Port Link Flap Log.....	312

4.6.4 HTTP Upgrade .....	314
4.6.5 FTP/TFTP Upgrade .....	315
4.6.6 Firmware Copy .....	316
4.6.7 Load Factory Settings .....	316
4.6.8 Load Factory Settings Except Network Configuration .....	317
4.6.9 Auto-Backup Configuration .....	318
4.6.10 Warm Reload .....	320
4.6.10.1 Configure Warm Reload via Up-Time .....	321
4.6.10.2 Configure Warm Reload via Ping .....	322
4.7 Save Configuration .....	323
4.8 Reset System .....	323
<b>APPENDIX A: Free RADIUS readme .....</b>	<b>324</b>
<b>APPENDIX B: Set Up DHCP Auto-Provisioning .....</b>	<b>325</b>
<b>APPENDIX C: VLAN Application Note .....</b>	<b>334</b>

# 1. INTRODUCTION

Thank you for using the 24 100/1000Mbps SFP ports plus 4 10/100/1000Mbps combo uplink ports Managed Switch that is specifically designed for FTTx applications. The Managed Switch provides a built-in management module that enables users to configure and monitor the operational status both locally and remotely. This User's Manual will explain how to use command-line interface and Web Management to configure your Managed Switch. The readers of this manual should have knowledge about their network typologies and about basic networking concepts so as to make the best of this user's manual and maximize the Managed Switch's performance for your personalized networking environment.

## 1.1 Management Options

Switch management options available are listed below:

- Local Console Management
- Telnet Management
- SNMP Management
- WEB Management
- SSH Management

### Local Console Management

Local Console Management is done through the RS-232 RJ-45 Console port located on the front panel of the Managed Switch. Direct RS-232 cable connection between the PC and the Managed switch is required for this type of management.

### Telnet Management

Telnet runs over TCP/IP and allows you to establish a management session through the network. Once the Managed switch is on the network with proper IP configurations, you can use Telnet to login and monitor its status remotely.

### SNMP Management

SNMP is also done over the network. Apart from standard MIB (Management Information Bases), an additional private MIB is also provided for SNMP-based network management system to compile and control.

### Web Management

Web Management is done over the network and can be accessed via a standard web browser, such as Microsoft Internet Explorer. Once the Managed switch is available on the network, you can login and monitor the status of it through a web browser remotely or locally. Web management in the local site, especially for the first time use of the Managed Switch to set up the needed IP, can be done through one of the 10/100/1000Base-TX 8-pin RJ-45 ports located at the front panel of the Managed Switch. Direct RJ-45 LAN cable connection between a PC and the Managed Switch is required for Web Management.

## **SSH Management**

SSH Management supports encrypted data transfer to prevent the data from being “stolen” for remote management. You can use PuTTY, a free and open source terminal emulator application which can act as a client for the SSH, to gain access to the Managed Switch.



## 1.2 Management Software

The following is a list of management software options provided by this Managed Switch:

- Managed Switch CLI interface
- SNMP-based Management Software
- Web Browser Application

### Console Program

The Managed Switch has a built-in Command Line Interface called the CLI which you can use to:

- Configure the system
- Monitor the status
- Reset the system

You can use CLI as the only management system. However, other network management options, SNMP-based management system, are also available.

You can access the text-mode Console Program locally by connecting a VT-100 terminal - or a workstation running VT100 emulation software - to the Managed Switch RS-232 RJ-45 Console port directly. Or, you can use Telnet to login and access the CLI through network connection remotely.

### SNMP Management System

Standard SNMP-based network management system is used to manage the Managed Switch through the network remotely. When you use a SNMP-based network management system, the Managed Switch becomes one of the managed devices (network elements) in that system. The Managed Switch management module contains an SNMP agent that will respond to the requests from the SNMP-based network management system. These requests, which you can control, can vary from getting system information to setting the device attribute values.

The Managed Switch's private MIB is provided for you to be installed in your SNMP-based network management system.

### Web Browser Application

You can manage the Managed Switch through a web browser, such as Internet Explorer or Google Chrome, etc.. (The default IP address of the Managed Switch port can be reached at "<http://192.168.0.1>".) For your convenience, you can use either this Web-based Management Browser Application program or other network management options, for example SNMP-based management system as your management system.

## 1.3 Management Preparations

After you have decided how to manage your Managed Switch, you are required to connect cables properly, determine the Managed switch IP address and, in some cases, install MIB shipped with your Managed Switch.

### Connecting the Managed Switch

It is very important that the proper cables with the correct pin arrangement are used when connecting the Managed switch to other switches, hubs, workstations, etc..

#### 1000Base-X / 100Base-FX SFP Port

The small form-factor pluggable (SFP) is a compact optical transceiver used in optical data communication applications. It interfaces a network device mother board (for a switch, router or similar device) to a fiber optic or unshielded twisted pair networking cable. It is a popular industry format supported by several fiber optic component vendors.

SFP transceivers are available with a variety of different transmitter and receiver types, allowing users to select the appropriate transceiver for each link to provide the required optical reach over the available optical fiber type.

SFP slot supports hot swappable SFP fiber transceiver. Before connecting the other switches, workstation or Media Converter, make sure both side of the SFP transfer are with the same media type, for example, 1000Base-SX to 1000Base-SX, 1000Bas-LX to 1000Base-LX, and check the fiber-optic cable type matches the SFP transfer model. To connect to 1000Base-SX transceiver, use the multi-mode fiber cable with male duplex LC connector type for one side. To connect to 1000Base-LX transfer, use the single-mode fiber cable with male duplex LC connector type for one side.

#### 10/100/1000Base-T RJ-45 Auto-MDI/MDIX Port

10/100/1000Base-T RJ-45 Auto-MDI/MDIX ports are located at the front of the Managed Switch. These RJ-45 ports allow user to connect their traditional copper-based Ethernet/Fast Ethernet devices to the network. All these ports support auto-negotiation and MDI/MDIX auto-crossover, i.e. either crossover or straight through CAT-5 UTP or STP cable may be used.

#### RS-232 RJ-45 Port (Console Port)

The RS-232 RJ-45 port is located at the front of the Managed Switch. This RJ-45 port is used for local, out-of-band management. Since this RJ-45 port of the Managed switch is DTE, a null modem is also required to be connected to the Managed Switch and the PC. By connecting this RJ-45 port, it allows you to configure & check the status of Managed Switch even when the network is down.

## IP Addresses

IP addresses have the format n.n.n.n, (The default factory setting is 192.168.0.1).

IP addresses are made up of two parts:

- The first part (for example 192.168.n.n) refers to network address that identifies the network where the device resides. Network addresses are assigned by three allocation organizations. Depending on your location, each allocation organization assigns a globally unique network number to each network which intends to connect to the Internet.
- The second part (for example n.n.0.1) identifies the device within the network. Assigning unique device numbers is your responsibility. If you are unsure of the IP addresses allocated to you, consult with the allocation organization where your IP addresses were obtained.

Remember that an address can be assigned to only one device on a network. If you connect to the outside network, you must change all the arbitrary IP addresses to comply with those you have been allocated by the allocation organization. If you do not do this, your outside communications will not be performed.

A subnet mask is a filtering system for IP addresses. It allows you to further subdivide your network. You must use the proper subnet mask for the proper operation of a network with subnets defined.

## MIB for Network Management Systems

Private MIB (Management Information Bases) is provided for managing the Managed Switch through the SNMP-based network management system. You must install the private MIB into your SNMP-based network management system first.

The MIB file is shipped together with the Managed Switch. The file name extension is “.mib” that allows SNMP-based compiler can read and compile.

## 2. Command Line Interface (CLI)

This chapter introduces you how to use Command Line Interface CLI, specifically in:

- Local Console
- Telnet
- Configuring the system
- Resetting the system

The interface and options in Local Console and Telnet are the same. The major difference is the type of connection and the port that is used to manage the Managed Switch.

### 2.1 Using the Local Console

Local Console is always done through the RS-232 RJ-45 port and requires a direct connection between the switch and a PC. This type of management is useful especially when the network is down and the switch cannot be reached by any other means.

You also need the Local Console Management to setup the Switch network configuration for the first time. You can setup the IP address and change the default configuration to the desired settings to enable Telnet or SNMP services.

Follow these steps to begin a management session using Local Console Management:

**Step 1.** Attach the serial cable to the RS-232 RJ-45 port located at the front of the Switch.

**Step 2.** Attach the other end to the serial port of a PC or workstation.

**Step 3.** Run a terminal emulation program using the following settings:

- **Emulation** VT-100/ANSI compatible
- **BPS** 9600
- **Data bits** 8
- **Parity** None
- **Stop bits** 1
- **Flow Control** None
- **Enable** Terminal keys

**Step 4.** Press Enter to access the CLI (Command Line Interface) mode.

## 2.2 Remote Console Management - Telnet

You can manage the Managed Switch via Telnet session. However, you must first assign a unique IP address to the Switch before doing so. Use the Local Console to login the Managed Switch and assign the IP address for the first time.

Follow these steps to manage the Managed Switch through Telnet session:

**Step 1.** Use Local Console to assign an IP address to the Managed Switch

- IP address
- Subnet Mask
- Default gateway IP address, if required

**Step 2.** Run Telnet

**Step 3.** Log into the Switch CLI

**Limitations:** When using Telnet, keep the following in mind:

**Only 5 active Telnet sessions can access the Managed Switch at the same time.**

## 2.3 Navigating CLI

When you successfully access the Managed Switch, you will be asked for a login username. Enter your authorized username and password, and then you will be directed to User mode. In CLI management, the User mode only provides users with basic functions to operate the Managed Switch. If you would like to configure advanced features of the Managed Switch, such as, VLAN, QoS, Rate limit control, you must enter the Configuration mode. The following table provides an overview of modes available in this Managed Switch.

Command Mode	Access Method	Prompt Displayed	Exit Method
User mode	Login username & password	Switch>	logout, exit
Privileged mode	From User mode, enter the <i>enable</i> command	Switch#	disable, exit, logout
Configuration mode	From Privileged mode, enter the <i>config</i> or <i>configure</i> command	Switch(config)#	exit, Ctrl + Z

---

**NOTE:** By default, the model name will be used for the prompt display. You can change the prompt display to the one that is ideal for your network environment using the *hostname* command. However, for convenience, the prompt display “Switch” will be used throughout this user’s manual.


---



## 2.3.3 Command Format

While in CLI, you will see several symbols very often. As mentioned above, you might already know what “>”, “#” and (config)# represent. However, to perform what you intend the device to do, you have to enter a string of complete command correctly. For example, if you want to assign IP address for the Managed Switch, you need to enter the following command with the required parameter and IP, subnet mask and default gateway:

IP command syntax: Switch(config)#ip address [A.B.C.D] [255.X.X.X] [A.B.C.D]

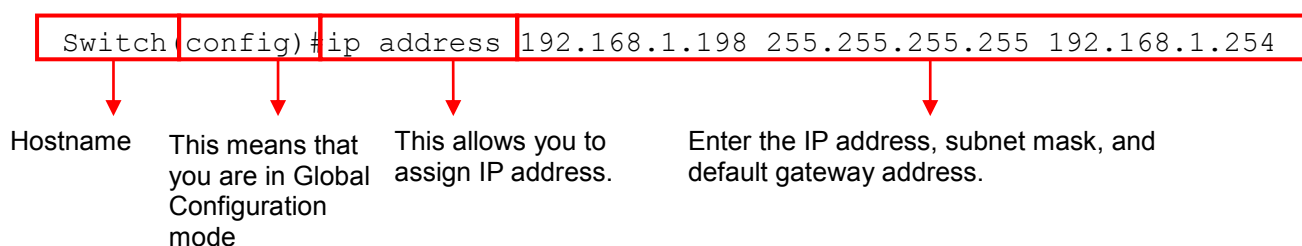

The following table lists common symbols and syntax that you will see very frequently in this User's Manual for your reference:

Symbols	Brief Description
>	Currently, the device is in User mode.
#	Currently, the device is in Privileged mode.
(config)#	Currently, the device is in Global Configuration mode.
Syntax	Brief Description
[ ]	Reference parameter.
[-s size] [-r repeat] [-t timeout]	These three parameters are used in ping command and are optional, which means that you can ignore these three parameters if they are unnecessary when executing ping command.
[A.B.C.D ]	Brackets represent that this is a required field. Enter an IP address or gateway address.
[255.X.X.X]	Brackets represent that this is a required field. Enter the subnet mask.
[port]	Enter one port number. See <a href="#">Section 2.6.29</a> for detailed explanations.
[port_list]	Enter a range of port numbers or several discontinuous port numbers. See <a href="#">Section 2.6.29</a> for detailed explanations.
[forced_true   forced_false   auto]	There are three options that you can choose. Specify one of them.
[1-8191]	Specify a value between 1 and 8191.
[0-7] 802.1p_list [0-63] dscp_list	Specify one value, more than one value or a range of values.  <b>Example 1: specifying one value</b>  Switch(config)#qos 802.1p-map <u>1</u> 0  Switch(config)#qos dscp-map <u>10</u> 3

	<p><b>Example 2: specifying three values (separated by commas)</b></p> <pre>Switch(config)#qos 802.1p-map <u>1,3</u> 0</pre> <pre>Switch(config)#qos dscp-map <u>10,13,15</u> 3</pre> <p><b>Example 3: specifying a range of values (separated by a hyphen)</b></p> <pre>Switch(config)#qos 802.1p-map <u>1-3</u> 0</pre> <pre>Switch(config)#qos dscp-map <u>10-15</u> 3</pre>
--	---

## 2.3.4 Login Username & Password

### Default Login

When you enter Console session, a login prompt for username and password will appear to request a valid and authorized username and password combination. For first-time users, enter the default login username “**admin**” and “**press Enter key**” in password field (no password is required for default setting). When system prompt shows “Switch>”, it means that the user has successfully entered the User mode.

For security reasons, it is strongly recommended that you add a new login username and password using User command in Configuration mode. When you create your own login username and password, you can delete the default username (admin) to prevent unauthorized accesses.

### Privileged Mode Password

Privileged mode is password-protected. When you try to enter Privileged mode, a password prompt will appear to request the user to provide the legitimate passwords. Privileged mode password is the same as the one entered after login password prompt. By default, no password is required. Therefore, press **Enter** key in password prompt.

### Forgot Your Login Username & Password

If you forgot your login username and password, you can use the “reset button” on the front panel to set all configurations back to factory defaults. Once you have performed system reset to defaults, you can login with default username and password. Please note that if you use this method to gain access to the Managed Switch, all configurations saved in Flash will be lost. It is strongly recommended that a copy of configurations is backed up in your local hard-drive or file server from time to time so that previously-configured settings can be reloaded to the Managed Switch for use when you gain access again to the device.



## 2.4 User Mode

In User mode, only a limited set of commands are provided. Please note that in User mode, you have no authority to configure advanced settings. You need to enter Privileged mode and Configuration mode to set up advanced functions of the Switch. For a list of commands available in User mode, enter the question mark (?) or “help” command after the system prompt displays Switch>.

Command	Description
<b>exit</b>	Quit the User mode or close the terminal connection.
<b>help</b>	Display a list of available commands in User mode.
<b>history</b>	Display the command history.
<b>logout</b>	Logout from the Managed Switch.
<b>ping</b>	Test whether a specified network device or host is reachable or not.
<b>traceroute</b>	Trace the route to HOST
<b>enable</b>	Enter the Privileged mode.

### 2.4.1 Ping Command

Ping is used to test the connectivity of end devices and also can be used to self test the network interface card. Enter the **ping** command in User mode. In this command, you can add an optional packet size value and an optional value for the number of counts that PING packets are sent.

Command	Parameter	Description
Switch> ping [A.B.C.D   A:B:C:D:E:F:G:H] [-s 1-65500] [-c 1-99]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address that you would like to ping.
	[-s 1-65500]	Enter the packet size that would be sent. The allowable packet size is from 1 to 65500 bytes. (optional)
	[-c 1-99]	Enter the counts of PING packets that would be transmitted. The allowable value is from 1 to 99. (optional)
Example		
Switch> ping 8.8.8.8 Switch> ping 8.8.8.8 -s 128 -c 10 Switch> ping 2001:4860:4860::8888 Switch> ping 2001:4860:4860::8888 -s 128 -c 10		

### 2.4.2 Traceroute Command

Traceroute is used to trace the path between the local host and the remote host. Enter the **traceroute** command in User mode. In this command, you can add an optional maximum hops value for the number of hops that packets are sent and received, an optional value for the number of counts that PROBE packets are sent, or an optional waiting time value of the remote host response.

Command	Parameter	Description
Switch> traceroute [A.B.C.D   A:B:C:D:E:F:G:H] [-m 1-255] [-p 1-5] [-w 1-5]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the target IPv4/IPv6 address of the host that you would like to trace.
	[-m 1-255]	Specify the number of hops between the local host and the remote host. The allowable number of hops is from 1 to 255. (optional)
	[-p 1-5]	Enter the counts of PROBE packets that would be transmitted. The allowable value is from 1 to 5. (optional)

	[-w 1-5]	Specify the response time from the remote host. The allowable time value is from 1 to 5 seconds. (optional)
<b>Example</b>		
Switch> traceroute 8.8.8.8		
Switch> traceroute 8.8.8.8 -m 30		
Switch> ping 2001:4860:4860::8888		
Switch> ping 2001:4860:4860::8888 -m 30 -p 5 -w 5		

## 2.5 Privileged Mode

The only place where you can enter the Privileged mode is in User mode. When you successfully enter the Privileged mode (this mode is password protected), the prompt will be changed to Switch# (the model name of your device together with a pound sign). Enter the question mark (?) or help command to view a list of commands available for use.

Command	Description
<b>copy-cfg</b>	Restore or backup configuration file via FTP or TFTP server.
<b>disable</b>	Exit Privileged mode and return to User Mode.
<b>exit</b>	Exit Privileged mode and return to User Mode.
<b>firmware</b>	Allow users to update firmware via FTP or TFTP.
<b>help</b>	Display a list of available commands in Privileged mode.
<b>history</b>	Show commands that have been used.
<b>ip</b>	Set up the DHCP recycle.
<b>logout</b>	Logout from the Managed Switch.
<b>ping</b>	Test whether a specified network device or host is reachable or not.
<b>reload</b>	Restart the Managed Switch.
<b>traceroute</b>	Trace the route to HOST.
<b>warm-reload</b>	Warm reload commands
<b>write</b>	Save your configurations to Flash.
<b>configure</b>	Enter Global Configuration mode.
<b>show</b>	Show a list of commands or show the current setting of each listed command.

### 2.5.1 Copy-cfg Command

Use “copy-cfg” command to backup a configuration file via FTP or TFTP server and restore the Managed Switch back to the defaults or to the defaults but keep IP configurations.

#### 1. Restore a configuration file via FTP or TFTP server.

Command	Parameter	Description
Switch# copy-cfg from ftp [A.B.C.D   A:B:C:D:E:F:G:H] [file name] [user_name] [password]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address of your FTP server.
	[file name]	Enter the configuration file name that you would like to restore.
	[user_name]	Enter the username for FTP server login.
	[password]	Enter the password for FTP server login.
Switch# copy-cfg from tftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_name]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address of your TFTP server.
	[file name]	Enter the configuration file name that you would like to restore.

### Example

```
Switch# copy-cfg from ftp 192.168.1.198 HS_0600_file.conf misadmin1 abcxyz  
Switch# copy-cfg from tftp 192.168.1.198 HS_0600_file.conf
```

## 2. Backup configuration file to FTP or TFTP server.

Command	Parameter	Description
Switch# copy-cfg to ftp [A.B.C.D   A:B:C:D:E:F:G:H] [file name] [running   default   startup ] [user_name] [password]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IP address of your FTP server.
	[file name]	Enter the configuration file name that you want to backup.
	[running   default   startup ]	Specify backup config to be running, default or startup
	[user_name]	Enter the username for FTP server login.
	[password]	Enter the password for FTP server login.
Switch# copy-cfg to tftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_name] [running   default   startup ]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IP address of your TFTP server.
	[file name]	Enter the configuration file name that you want to backup.
	[running   default   startup ]	Specify backup config to be running, default or startup
Example		
Switch# copy-cfg to ftp 192.168.1.198 HS_0600_file.conf running misadmin1 abcxyz		
Switch# copy-cfg to tftp 192.168.1.198 HS_0600_file.conf startup		

## 3. Restore the Managed Switch back to default settings.

### Command / Example

```
Switch# copy-cfg from default  
Switch# reload
```

## 4. Restore the Managed Switch back to default settings but keep IP configurations.

### Command / Example

```
Switch# copy-cfg from default keep-ip  
Switch# reload
```

## 2.5.2 Firmware Command

### 1. To upgrade firmware via TFTP or FTP server.

Command	Parameter	Description
Switch# firmware upgrade ftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_name] [Image-1  Image-2] [user_name] [password]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IP address of your FTP server.
	[file name]	Enter the firmware file name that you want to upgrade.
	[Image-1  Image-2]	Choose image-1 or image-2 for the firmware to be upgraded to.
	[user_name]	Enter the username for FTP server login.
	[password]	Enter the password for FTP server login.

Switch# firmware upgrade tftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_name] [Image-1   Image-2]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IP address of your TFTP server.
	[file_name]	Enter the firmware file name that you would like to upgrade.
	[Image-1   Image-2]	Choose image-1 or image-2 for the firmware to be upgraded to.
<b>Example</b>		
Switch# firmware upgrade ftp 192.168.1.198 HS_0600_file.bin Image-1 edgswitch10 abcxyz		
Switch# firmware upgrade tftp 192.168.1.198 HS_0600_file.bin Image-2		

## 2. Copy the currently running firmware image to the other firmware image.

### Command / Example

Switch# firmware copy  
OK ! Current firmware image copy to backup firmware image succeed !

## 2.5.3 IP Command

Command	Parameter	Description
Switch# ip address dhcp recycle		DHCP Release packets and Discover packets will be sent to DHCP server in a manual way. And it will ask for IP address from DHCP server again.  <b>Note 1: Need to enable DHCP mode under the IP global configuration mode before issuing this command. See <a href="#">Section 2.6.9</a> for more details.</b>  <b>Note 2: The command is just one-time command, and the setting will not be saved into the configuration file.</b>

## 2.5.4 Ping Command

Command	Parameter	Description
Switch# ping [A.B.C.D   A:B:C:D:E:F:G:H] [-s 1-65500] [-c 1-99]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address that you would like to ping.
	[-s 1-65500]	Enter the packet size that would be sent. The allowable packet size is from 1 to 65500 bytes. (optional)
	[-c 1-99]	Enter the counts of PING packets that would be transmitted. The allowable value is from 1 to 99. (optional)
<b>Example</b>		
Switch# ping 8.8.8.8		
Switch# ping 8.8.8.8 -s 128 -c 10		
Switch# ping 2001:4860:4860::8888		
Switch# ping 2001:4860:4860::8888 -s 128 -c 10		

## 2.5.5 Reload Command

### 1. To restart the Managed Switch.

Command / Example
Switch# reload

### 2. To specify the image for the next restart before restarting.

Command / Example
Switch# reload Image-2 OK! Switch# reload

## 2.5.6 Traceroute Command

Traceroute is used to trace the path between the local host and the remote host. Enter the **traceroute** command in Privileged mode. In this command, you can add an optional maximum hops value for the number of hops that packets are sent and received, an optional value for the number of counts that PROBE packets are sent, or an optional waiting time value of the remote host response.

Command	Parameter	Description
Switch# traceroute [A.B.C.D   A:B:C:D:E:F:G:H] [- m 1-255] [-p 1-5] [- w 1-5]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the target IPv4/IPv6 address of the host that you would like to trace.
	[-m 1-255]	Specify the number of hops between the local host and the remote host. The allowable number of hops is from 1 to 255. (optional)
	[-p 1-5]	Enter the counts of PROBE packets that would be transmitted. The allowable value is from 1 to 5. (optional)
	[-w 1-5]	Specify the response time from the remote host. The allowable time value is from 1 to 5 seconds. (optional)
Example		
Switch# traceroute 8.8.8.8 Switch# traceroute 8.8.8.8 -m 30 Switch# ping 2001:4860:4860::8888 Switch# ping 2001:4860:4860::8888 -m 30 -p 5 -w 5		

## 2.5.7 Warm-reload Command

In the remote configuration of Managed Switch, **Warm Reload** is supported for the sake of reducing the mistakes due to the human negligence that may result in the risk of the network failure. By means of **Up-Time** or **Ping** two methods of this function, the system will reboot and recover the start-up-config in case either of the following two conditions occur.

One condition is when the system checks the current running-config is different from the start-up-config after the countdown of Up-Time expires (if the system checks the current running-config is the same as the start-up-config, the session of warm reload will be stopped and do nothing.). If the users would like to restart this session of warm reload, they need to issue the command again; the other condition is when the retry times of Ping reach the limit after the consecutive pings failed.

During the execution of this feature, please note that if there is any important configurations made, be sure that these new changes are saved; otherwise, they will be lost after the system reboots. And also note that Warm Reload is the one-time function, its settings are temporarily used and will not be saved into the configuration file of Managed Switch.

Command	Parameter	Description
Switch# warm-reload condition ping [A.B.C.D   A:B:C:D:E:F:G:H] interval [1-60] fail-retry [1-10]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the target IPv4/IPv6 address of the device that the Managed Switch would like to ping.  <b>Note: Make sure that IPv4 (See <a href="#">Section 2.6.9</a> for more details) or IPv6 (See <a href="#">Section 2.6.10</a> for more details) function is enabled, or the user cannot execute the warm reload via the “Ping” method and the system will pop up an error message of “@! FAIL! Invalid input, the IPv4/IPv6 address is not enabled!”</b>
	[1-60]	Specify the time interval of sending the ICMP ping packets. The allowable value is 1~60 (minutes).
	[1-10]	Specify the retry times if the first ping fails. The allowable value is 1~10 (times).
Switch# warm-reload condition uptime [1-1440]	[1-1440]	Configure the up-time that the timer will start to count down when the session of warm reload is activated. The allowable value is 1~1440 (minutes).
Switch# warm-reload stop		End the running session of warm reload.
Show command		Description
Switch# show warm-reload		Show the current warm reload status.
Example		
Switch# warm-reload condition ping 192.168.0.151 interval 5 fail-retry 2		The Managed Switch will ping the device’s IP address 192.168.0.151. If its pings reach 3 consecutive times failed, the system will reboot and recover the start-up-config immediately.
Switch# warm-reload condition uptime 10		Set the up-time of warm reload as 10 minutes. When the countdown of this up-time expires, the system will check that whether the current running-config is different from the start-up-config or not. If they are different, the system will reboot and recover the start-up-config immediately.

## 2.5.8 Write Command

Use “write” command to save the current configurations, backup the supplier default file/restore the Managed Switch back to the supplier defaults via FTP or TFTP server.

1. To save running configurations to startup configurations, please enter the command of “write”. All unsaved configurations will be lost when you restart the Managed Switch.

Command / Example
Switch# write Save Config Succeeded!

2. Save startup configurations to the supplier default file.

Command / Example
Switch# write supplier-d

3. Restore the supplier defaults to the factory defaults.

Command / Example
Switch# write supplier-d from default

4. Restore the supplier default file via FTP or TFTP server.

Command	Parameter	Description
Switch# write supplier-d from ftp [A.B.C.D   A:B:C:D:E:F:G:H] [file name] [user_name] [password]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address of your FTP server.
	[file name]	Enter the supplier default file name that you would like to restore.
	[user_name]	Enter the username for FTP server login.
	[password]	Enter the password for FTP server login.
Switch# write supplier-d from tftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_name]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address of your TFTP server.
	[file name]	Enter the supplier default file name that you would like to restore.
Example		
Switch# write supplier-d from ftp 192.168.1.198 HS_0600_file.conf misadmin1 abcxyz Switch# write supplier-d from tftp 192.168.1.198 HS_0600_file.conf		

## 5. Backup the supplier default file to FTP or TFTP server.

Command	Parameter	Description
Switch# write supplier-d to ftp [A.B.C.D   A:B:C:D:E:F:G:H] [file name] [user_name] [password]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address of your FTP server.
	[file name]	Enter the supplier default file name that you would like to backup.
	[user_name]	Enter the username for FTP server login.
	[password]	Enter the password for FTP server login.
Switch# write supplier-d to tftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_name]	[A.B.C.D   A:B:C:D:E:F:G:H]	Enter the IPv4/IPv6 address of your TFTP server.
	[file name]	Enter the supplier default file name that you would like to backup.
Example		
Switch# write supplier-d to ftp 192.168.1.198 HS_0600_file.conf misadmin1 abcxyz		
Switch# write supplier-d to tftp 192.168.1.198 HS_0600_file.conf		

**Note:** In case the supplier default file does not exist, an error message of “config file open error” will be returned when you issue this command.

## 2.5.9 Configure Command

The only place where you can enter the Global Configuration mode is in Privileged mode. You can type in “configure” or “config” for short to enter the Global Configuration mode. The display prompt will change from “Switch#” to “Switch(config)#” once you successfully enter the Global Configuration mode.

Command / Example
Switch#config Switch(config)#
Switch#configure Switch(config)#

## 2.5.10 Show Command

The “show” command is very important for network administrators to get information about the device, receive outputs to verify a command’s configurations or troubleshoot a network configuration error. It can be used in Privileged or Configuration mode. The following describes different uses of “show” command.

### 1. Display system information

Enter “show switch-info” command in Privileged or Configuration mode, and then the following information will appear.

**Company Name:** Display a company name for this Managed Switch. Use “switch-info company-name [company\_name]” command to edit this field.

**System Object ID:** Display the predefined System OID.



**System Contact:** Display the contact information for this Managed Switch. Use “switch-info system-contact [sys\_contact]” command to edit this field.

**System Name:** Display a descriptive system name for this Managed Switch. Use “switch-info system-name [sys\_name]” command to edit this field.

**System Location:** Display a brief location description for this Managed Switch. Use “switch-info system-location [sys\_location]” command to edit this field.

**DHCP/DHCPv6 Vendor ID:** Display the Vendor Class Identifier used for DHCP/DHCPv6 relay agent function. Use “switch-info dhcp-vendor-id [dhcp\_vendor\_id]” command to edit this field.

**Model Name:** Display the product’s model name.

**Host Name:** Display the product’s host name. Use “switch-info host-name [host\_name]” command to edit this field.

**Current Boot Image:** The image that is currently using.

**Configured Boot Image:** The image you would like to use after rebooting.

**Image-1 Version:** Display the firmware version 1 (image-1) used in this device.

**Image-2 Version:** Display the firmware version 2 (image-2) used in this device.

**M/B Version:** Display the main board version.

**Serial Number:** Display the serial number of this Managed Switch.

**Date Code:** Display the date code of the Managed Switch firmware.

**Up Time:** Display the up time since last restarting.

**Local Time:** Display the local time of the system.

**FAN State:** Display the status of FAN1 and FAN2.

**Power A/B:** Display the installation status, the type of power source and state of Power A and Power B.

**CPU Temperature:** Display the current CPU temperature of this device.

## **2. Display or verify currently-configured settings**

Refer to the following sub-sections. “Interface command”, “IP command”, “MAC command”, “QoS command”, “Security command”, “SNMP-Server command”, “User command”, “VLAN command” sections, etc.

## **3. Display interface information or statistics**

Refer to “Show interface statistics command” and “Show sfp command” sections.

#### **4. Show default, running and startup configurations**

Refer to “Show default-config command”, “Show running-config command” and “Show start-up-config command” sections.

#### **5. Show CPU & Memory Statistics**

Show CPU utilization and memory usage rate. Refer to “Switch-info command” section.

#### **6. Show ARP**

Show ARP information. Refer to “Show arp command” section.

#### **7. Show Event Log**

Show the log of all events information. Refer to “Show log command” section.

#### **8. Show Port Link Flap Log**

Show the log of Port Link Flap information. Refer to “Show log link-flap command” section.

## 2.6 Configuration Mode

When you enter “configure” or “config” and press “Enter” in Privileged mode, you will be directed to the Global Configuration mode where you can set up advanced switching functions, such as QoS, VLAN and storm control security globally. All commands entered will apply to running-configuration and the device’s operation. From this level, you can also enter different sub-configuration modes to set up specific configurations for VLAN, QoS, security or interfaces.

Command	Description
<b>acl</b>	Set up access control entries and lists.
<b>archive</b>	Manage archive configuration files.
<b>channel-group</b>	Configure static link aggregation groups or enable LACP function.
<b>dot1x</b>	IEEE 802.1X global configuration commands.
<b>exit</b>	Exit the global configuration mode.
<b>help</b>	Display a list of available commands in the global configuration mode.
<b>history</b>	Show commands that have been used.
<b>fast-redundancy</b>	Set up Fast Ring v2 and Chain configuration for fast network recovery.
<b>ip</b>	Set up the IPv4 address and enable DHCP mode & IGMP snooping.
<b>ipv6</b>	To enable ipv6 function and set up IP address.
<b>lldp</b>	LLDP global configuration mode.
<b>loop-detection</b>	Configure loop-detection to prevent loop between switch ports by locking them.
<b>l2protocol-tunnel</b>	Set up Layer 2 protocol tunnel function.
<b>mac</b>	Set up MAC learning function of each port.
<b>management</b>	Set up console/telnet/web/SSH access control and timeout value.
<b>mirror</b>	Set up target port for mirroring.
<b>ntp</b>	Set up required configurations for Network Time Protocol.
<b>qos</b>	Set up the priority of packets within the Managed Switch.
<b>security</b>	Configure broadcast, unknown multicast, unknown unicast storm control settings.
<b>sfp</b>	Set up SFP ports’ temperature/voltage/TX power/RX power threshold.
<b>snmp-server</b>	Create a new SNMP community and trap destination and specify the trap types.
<b>spanning-tree</b>	Set up RSTP status of each port and aggregated ports.
<b>switch</b>	Set up acceptable frame size and address learning, etc.
<b>switch-info</b>	Edit the system information.
<b>syslog</b>	Set up required configurations for Syslog server.
<b>terminal</b>	Set up Terminal functions.
<b>user</b>	Create a new user account.
<b>vlan</b>	Set up VLAN mode and VLAN configuration.
<b>no</b>	Disable a command or reset it back to its default setting.
<b>interface</b>	Select a single interface or a range of interfaces.
<b>show</b>	Show a list of commands or show the current setting of each listed command.

### 2.6.1 Entering Interface Numbers

In the Global Configuration mode, you can configure a command that only applies to interfaces specified. For example, you can set up each interface’s VLAN assignment, speeds, or duplex modes. To configure, you must first enter the interface number. There are four ways to enter your interface numbers to signify the combination of different interfaces that apply a command or commands.

Commands	Description
Switch(config)# interface 1 Switch(config-if-1)#	Enter a single interface. Only interface 1 will apply commands entered.
Switch(config)# interface 1,3,5 Switch(config-if-1,3,5)#	Enter three discontinuous interfaces, separated by commas. Interface 1, 3, 5 will apply commands entered.

Switch(config)# interface 1-3 Switch(config-if-1-3)#	Enter three continuous interfaces. Use a hyphen to signify a range of interface numbers. In this example, interface 1, 2, and 3 will apply commands entered.
Switch(config)# interface 1,3-5 Switch(config-if-1,3-5)#	Enter a single interface number together with a range of interface numbers. Use both comma and hyphen to signify the combination of different interface numbers. In this example, interface 1, 3, 4, 5 will apply commands entered.

## 2.6.2 No Command

Almost every command that you enter in Configuration mode can be negated using “no” command followed by the original or similar command. The purpose of “no” command is to disable a function, remove a command, or reset the setting back to the default value. In each sub-section below, the use of no command to fulfill different purposes will be introduced.

## 2.6.3 Show Command

The “show” command is very important for network administrators to get information about the device, receive outputs to verify a command’s configurations or troubleshoot a network configuration error. It can be used in Privileged or Configuration mode. The following describes different uses of “show” command.

### 1. Display system information

Enter “show switch-info” command in Privileged or Configuration mode, and then the following information will appear.

**Company Name:** Display a company name for this Managed Switch. Use “switch-info company-name [company\_name]” command to edit this field.

**System Object ID:** Display the predefined System OID.

**System Contact:** Display the contact information for this Managed Switch. Use “switch-info system-contact [sys\_contact]” command to edit this field.

**System Name:** Display a descriptive system name for this Managed Switch. Use “switch-info system-name [sys\_name]” command to edit this field.

**System Location:** Display a brief location description for this Managed Switch. Use “switch-info system-location [sys\_location]” command to edit this field.

**DHCP/DHCPv6 Vendor ID:** Display the Vendor Class Identifier used for DHCP/DHCPv6 relay agent function. Use “switch-info dhcp-vendor-id [dhcp\_vendor\_id]” command to edit this field.

**Model Name:** Display the product’s model name.

**Host Name:** Display the product’s host name. Use “switch-info host-name [host\_name]” command to edit this field.

**Current Boot Image:** The image that is currently using.

**Configured Boot Image:** The image you would like to use after rebooting.

**Image-1 Version:** Display the firmware version 1 (image-1) used in this device.

**Image-2 Version:** Display the firmware version 2 (image-2) used in this device.

**M/B Version:** Display the main board version.

**Serial Number:** Display the serial number of this Managed Switch.

**Date Code:** Display the date code of the Managed Switch firmware.

**Up Time:** Display the up time since last restarting.

**Local Time:** Display the local time of the system.

**FAN State:** Display the status of FAN1 and FAN2.

**Power A/B:** Display the installation status, the type of power source and state of Power A and Power B.

**CPU Temperature:** Display the current CPU temperature of this device.

## **2. Display or verify currently-configured settings**

Refer to the following sub-sections. “Interface command”, “IP command”, “MAC command”, “QoS command”, “Security command”, “SNMP-Server command”, “User command”, “VLAN command” sections, etc.

## **3. Display interface information or statistics**

Refer to “Show interface statistics command” and “Show sfp command” sections.

## **4. Show default, running and startup configurations**

Refer to “Show default-config command”, “Show running-config command” and “Show start-up-config command” sections.

## **5. Show CPU & Memory Statistics**

Show CPU utilization and memory usage rate. Refer to “Switch-info command” section.

## **6. Show ARP**

Show ARP information. Refer to “Show arp command” section.

## **7. Show Event Log**

Show the log of all events information. Refer to “Show log command” section.

## **8. Show Port Link Flap Log**

Show the log of Port Link Flap information. Refer to “Show log link-flap command” section.

## 2.6.4 ACL Command

Command	Parameter	Description
Switch(config)# acl [1-192]	[1-192]	The total number of ACL rule can be created is 192. Use this command to enter ACL configuration mode for each ACL rule. When you enter each ACL rule, you can further configure detailed settings for this rule.  <b>Note: Only No.1~128 of Rule ID is provided for IPv4 ACL rule settings, and No.129~192 of Rule ID is provided for IPv6 ACL rule settings.</b>
Switch(config-acl-RULE)# action [deny   copy(mirror)   permit   redirect]	[deny   copy(mirror)   permit   redirect]	Specify action to the ACL-matched packet.
Switch(config-acl-RULE)# action-port [port]	[port]	Specify copy(mirror)-to/redirect-to port (1~28).
Switch(config-acl-RULE)# apply		To have the specified rule taken effect.
Switch(config-acl-RULE)# destination-ipv4 any		Specify destination IPv4 address as "ANY".
Switch(config-acl-RULE)# destination-ipv4 address [A.B.C.D] [0-255.X.X.X]	[A.B.C.D]	Specify destination IPv4 address.
	[0-255.X.X.X]	Specify destination IPv4 mask.
Switch(config-acl-RULE)# destination-ipv6 any		Specify destination IPv6 address as "ANY".
Switch(config-acl-RULE)# destination-ipv6 address [A:B:C:D:E:F:G:H] [10~128]	[A:B:C:D:E:F:G:H]	Specify destination IPv6 address.
	[10~128]	Specify destination IPv6 prefix-length.
Switch(config-acl-RULE)# destination-l4-port any		Specify destination Layer4 port as "ANY".
Switch(config-acl-RULE)# destination-l4-port [1-65535] [0xWXYZ]	[1-65535]	Specify destination Layer4 port.
	[0xWXYZ]	Specify destination Layer4 mask. (Range:0x0000~FFFF)
Switch(config-acl-RULE)# destination-mac any		Specify destination MAC as "ANY".
Switch(config-acl-RULE)# destination-mac mac [xx:xx:xx:xx:xx:xx] [ff:ff:ff:00:00:00]	[xx:xx:xx:xx:xx:xx]	Specify destination MAC.
	[ff:ff:ff:00:00:00]	Specify destination MAC mask.
Switch(config-acl-RULE)# ethertype [any   0xWXYZ]	[any   0xWXYZ]	Specify Ethertype (Range: 0x0000~FFFF) or "ANY".
Switch(config-acl-RULE)# ingress-port [any   port-list]	[any   port-list]	Specify ingress port(s) or "ANY".

Switch(config-acl-RULE)# protocol [any   0xWX]	[any   0xWX]	Specify IPv4 protocol and IPv6 next header (Range: 0x00~FF) or "ANY".
Switch(config-acl-RULE)# rate-limit [0,16-1048560]	[0,16-1048560]	Specify rate limitation from 16 to 1048560 kbps. (0:Disable)
Switch(config-acl-RULE)# source-ipv4 any		Specify source IPv4 address as "ANY".
Switch(config-acl-RULE)# source-ipv4 address [A.B.C.D] [0-255.X.X.X]	[A.B.C.D]	Specify source IPv4 address.
	[0-255.X.X.X]	Specify source IPv4 mask.
Switch(config-acl-RULE)# source-ipv6 any		Specify source IPv6 address as "ANY".
Switch(config-acl-RULE)# source-ipv6 address [A:B:C:D:E:F:G:H] [10~128]	[A:B:C:D:E:F:G:H]	Specify source IPv6 address.
	[10~128]	Specify source IPv6 prefix-length.
Switch(config-acl-RULE)# source-l4-port any		Specify source Layer4 port as "ANY".
Switch(config-acl-RULE)# source-l4-port [1-65535] [0xWXYZ]	[1-65535]	Specify source Layer4 port.
	[0xWXYZ]	Specify source Layer4 mask. (Range:0x0000~FFFF)
Switch(config-acl-RULE)# source-mac any		Specify source MAC as "ANY".
Switch(config-acl-RULE)# source-mac mac [xx:xx:xx:xx:xx:xx] [ff:ff:ff:00:00:00]	[xx:xx:xx:xx:xx:xx]	Specify source MAC.
	[ff:ff:ff:00:00:00]	Specify source MAC mask.
Switch(config-acl-RULE)# tos [any   0xWX]	[any   0xWX]	Specify IPv4 TOS and IPv6 traffic class (Range: 0x00~FF) or "ANY".
Switch(config-acl-RULE)# vid [any   1-4094]	[any   1-4094]	Specify 802.1q VLAN ID (Range: 1~4094) or "ANY".
<b>No command</b>		
Switch(config)# no acl [1-192]	[1-192]	Remove the specified ACL rule.
Switch(config-acl-RULE)# no action		Reset action back to the default (permit).
Switch(config-acl-RULE)# no action-port		Reset copy(mirror)-to/redirect-to port back to the default (Port 1).
Switch(config-acl-RULE)# no destination-ipv4		Reset destination IPv4 address back to the default (ANY).
Switch(config-acl-RULE)# no destination-ipv6		Reset destination IPv6 address back to the default (ANY).
Switch(config-acl-RULE)# no destination-l4-port		Reset destination Layer4 port back to the default (ANY).
Switch(config-acl-RULE)# no destination-mac		Reset destination MAC back to the default (ANY).
Switch(config-acl-RULE)# no ingress-port		Reset ingress port(s) back to the default (ANY).



Switch(config-acl-RULE)# no ether-type		Reset Ether-type back to the default (ANY).
Switch(config-acl-RULE)# no protocol		Reset IPv4 protocol and IPv6 next header back to the default "ANY".
Switch(config-acl-RULE)# no rate-limit		Disable rate limitation.
Switch(config-acl-RULE)# no source-ipv4		Reset source IPv4 address back to the default (ANY).
Switch(config-acl-RULE)# no source-ipv6		Reset source IPv6 address back to the default (ANY).
Switch(config-acl-RULE)# no source-l4-port		Reset source Layer4 port back to the default (ANY).
Switch(config-acl-RULE)# no source-mac		Reset source MAC back to the default (ANY).
Switch(config-acl-RULE)# no tos		Reset IPv4 TOS and IPv6 traffic class back to the default (ANY).
Switch(config-acl-RULE)# no vid		Reset 802.1q VLAN ID back to the default (ANY).
Show command		Description
Switch# show acl		Display the valid ACL(s).
Switch# show acl [1-192]	[1-192]	Display the specified ACL rule configuration.
Switch(config)# show acl		Display the valid ACL(s).
Switch(config)# show acl [1-192]	[1-192]	Display the specified ACL rule configuration.
Switch(config-acl-RULE)# show		Display the specified ACL rule configuration.

## 2.6.5 Archive Command

Command	Parameter	Description
Switch(config)# archive auto-backup		Enable the auto-backup configuration files function.
Switch(config)# archive auto-backup path ftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_directory] [user_name] [password]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the IP/ IPv6 address of the FTP server.
	[file_directory]	Specify the file directory of the FTP server to save the start-up configuration files.
	[user_name]	Specify the user name to login the FTP server.
	[password]	Specify the password for FTP server's authentication.
Switch(config)# archive auto-backup path tftp [A.B.C.D   A:B:C:D:E:F:G:H] [file_directory]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the IP/ IPv6 address of the TFTP server.
	[file_directory]	Specify the file directory of the TFTP server to save the start-up configuration files.
Switch(config)# archive auto-backup time [0-23]	[0-23]	Specify the time to begin the automatic backup of the start-up configuration files everyday.
<b>No command</b>		
Switch(config)# no archive auto-backup		Disable the auto-backup function.
Switch(config)# no archive auto-backup path		Remove TFTP / FTP server settings.
Switch(config)# no archive auto-backup time		Reset the Auto-backup time back to the default (0 o'clock).
<b>Show command</b>		<b>Description</b>
Switch# show archive auto-backup		Display the auto-backup configuration.
Switch(config)# show archive auto-backup		Display the auto-backup configuration.

## 2.6.6 Channel-group Command

### 1. Configure a static link aggregation group (LAG).

Command	Parameter	Description
Switch(config)# channel-group trunking [group_name]	[group_name]	Specify a name for this link aggregation group.
Switch(config)# interface [port_list]  Switch(config-if-PORT-PORT)# channel-group trunking [group_name]	[port_list] [group_name]	Use “interface” command to configure a group of ports’ link aggregation link membership.  Assign the selected ports to the specified link aggregation group.
Switch(config)# channel-group distribution-rule destination-ip		Load-balancing depending on destination IP address.
Switch(config)# channel-group distribution-rule source-ip		Load-balancing depending on source IP address.
Switch(config)# channel-group distribution-rule destination-L4-port		Load-balancing depending on destination L4 port.
Switch(config)# channel-group distribution-rule source-L4-port		Load-balancing depending on source L4 port.
Switch(config)# channel-group distribution-rule destination-mac		Load-balancing depending on destination MAC address.
Switch(config)# channel-group distribution-rule source-mac		Load-balancing depending on source MAC address.
<b>No command</b>		
Switch(config)# no channel-group trunking [group_name]	[group_name]	Delete a link aggregation group.
Switch(config)# interface [port_list]  Switch(config-if-PORT-PORT)# no channel-group trunking	[port_list]	Remove the selected ports from a link aggregation group.
Switch(config)# no channel-group distribution-rule destination-ip		Disable load-balancing based on destination IP address.
Switch(config)# no channel-group distribution-rule source-ip		Disable load-balancing based on source IP address.
Switch(config)# no channel-group distribution-rule destination-L4-port		Disable load-balancing based on destination L4 port.
Switch(config)# no channel-group distribution-rule source-L4-port		Disable load-balancing based on source L4 port.
Switch(config)# no channel-group type destination-mac		Disable load-balancing based on destination MAC address.
Switch(config)# no channel-group type source-mac		Disable load-balancing based on source MAC address.

Show command		
Switch(config)# show channel-group trunking		Show link aggregation settings.
Switch(config)# show channel-group trunking [trunk_name]	[trunk_name]	Show a specific link aggregation group's settings including aggregated port numbers and load-balancing status.

Below is an example of creating a static link aggregation group (port trunking group) using Channel-group commands to have the users realize the commands we mentioned above in this section.

	Command	Purpose
STEP1	configure  <b>Example:</b> FOS-3128# config FOS-3128(config)#	Enter the global configuration mode.
STEP2 (Optional)	channel-group distribution-rule source-ip  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule source-ip OK !	Enable Source IP Address in Distribution Rule.
STEP3 (Optional)	channel-group distribution-rule destination-ip  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule destination-ip OK !	Enable Destination IP Address in Distribution Rule.
STEP4 (Optional)	channel-group distribution-rule source-L4-port  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule source-L4-port OK !	Enable Source L4 Port in Distribution Rule.
STEP5 (Optional)	channel-group distribution-rule destination-L4-port  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule destination-L4-port OK !	Enable Destination L4 Port in Distribution Rule.
STEP6 (Optional)	channel-group distribution-rule source-mac  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule source-mac OK !	Enable Source Mac Address in Distribution Rule.
STEP7 (Optional)	channel-group distribution-rule destination-mac  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule destination-mac OK !	Enable Destination Mac Address in Distribution Rule.
STEP8	channel-group trunking <i>group_name</i>  <b>Example:</b> FOS-3128(config)# channel-group trunking CTSGROUP OK !	In this example, it configures the name of the Trunking Group as "CTSGROUP".

STEP9	<p>interface <i>port_list</i></p> <p><b>Example:</b> FOS-3128(config)# interface 1,3 FOS-3128(config-if-1,3)#</p>	Speciy the interface that you would like to set to Trunking Group.
STEP10	<p>channel-group trunking <i>group_name</i></p> <p><b>Example:</b> FOS-3128(config-if-1,3)# channel-group trunking CTSGROUP OK !</p>	In this example, it configures Port 1 and Port 3 as the link membership of "CTSGROUP"Trunking Group
STEP11	<p>exit</p> <p><b>Example:</b> FOS-3128(config-if-1,3)# exit FOS-3128(config)#</p>	Return to the global configuration mode.
STEP12	<p>exit</p> <p><b>Example:</b> FOS-3128(config)# exit FOS-3128#</p>	Return to the Privileged mode.
STEP13	<p>write</p> <p><b>Example:</b> FOS-3128# write Save Config Succeeded! OK !</p>	Save the running configuration into the startup configuration.

## 2. Use “Interface” command to configure link aggregation groups dynamically (LACP).

Channel-group & Interface command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# channel-group lacp		Enable LACP on the selected interfaces.
Switch(config-if-PORT-PORT)# channel-group lacp key [0-255]	[0-255]	Specify a key to the selected interfaces. (0: auto)
Switch(config-if-PORT-PORT)# channel-group lacp role [active]	[active]	Specify the selected interfaces as active LACP role.
<b>No command</b>		
Switch(config-if-PORT-PORT)# no channel-group lacp		Disable LACP on the selected interfaces.
Switch(config-if-PORT-PORT)# no channel-group lacp key		Reset the key value of the selected interfaces back to the default.
Switch(config-if-PORT-PORT)# no channel-group lacp role		Reset the LACP role type of the selected interfaces back to the default (passive mode).
<b>Show command</b>		
Switch(config)# show channel-group lacp		Show each interface's LACP settings including current mode, key value and LACP role type.
Switch(config)# show channel-group lacp [port_list]	[port_list]	Show the selected interfaces' LACP settings.
Switch(config)# show channel-group lacp status		Show each interface's current LACP status.
Switch(config)# show channel-group lacp status [port_list]	[port_list]	Show the selected interfaces' current LACP status.
Switch(config)# show channel-group lacp statistics		Show each interface's current LACP traffic statistics.
Switch(config)# show channel-group lacp statistics [port_list]	[port_list]	Show the selected interfaces' current LACP traffic statistics.
Switch(config)# show channel-group lacp statistics clear		Clear all LACP statistics.

Below is an example of creating a dynamic link aggregation group using Channel-group commands to have the users realize the commands we mentioned above in this section.

	<b>Command</b>	<b>Purpose</b>
STEP1	configure  <b>Example:</b> FOS-3128# config FOS-3128(config)#	Enter the global configuration mode.
STEP2 (Optional)	channel-group distribution-rule source-ip  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule source-ip OK !	Enable Source IP Address in Distribution Rule.
STEP3 (Optional)	channel-group distribution-rule destination-ip  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule destination-ip OK !	Enable Destination IP Address in Distribution Rule.
STEP4 (Optional)	channel-group distribution-rule source-L4-port  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule source-L4-port OK !	Enable Source L4 Port in Distribution Rule.
STEP5 (Optional)	channel-group distribution-rule destination-L4-port  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule destination-L4-port OK !	Enable Destination L4 Port in Distribution Rule.
STEP6 (Optional)	channel-group distribution-rule source-mac  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule source-mac OK !	Enable Source Mac Address in Distribution Rule.
STEP7 (Optional)	channel-group distribution-rule destination-mac  <b>Example:</b> FOS-3128(config)# channel-group distribution-rule destination-mac OK !	Enable Destination Mac Address in Distribution Rule.
STEP8	interface <i>port_list</i>  <b>Example:</b> FOS-3128(config)# interface 5-7 FOS-3128(config-if-5-7)#	Speciy the interfaces that you would like to set to LACP Group.
STEP9	channel-group lacp  <b>Example:</b> FOS-3128(config-if-5-7)# channel-group lacp OK !	Enable Port 5~Port 7 to LACP Port.

STEP10	<p>channel-group lacp role active [no channel-group lacp role]</p> <p><b>Example 1:</b> FOS-3128(config-if-5-7)# channel-group lacp role active OK !</p> <p><b>Example 2:</b> FOS-3128(config-if-5-7)# no channel-group lacp role OK !</p>	<p>In the Example 1, it configures LACP Port 5~7 as “Active” in LACP Role.</p> <p>In the Example 2, it configures LACP Port 5~7 as “Passive” in LACP Role.</p>
STEP11	<p>channel-group lacp key <i>LACP_key</i> [no channel-group lacp key]</p> <p><b>Example 1:</b> FOS-3128(config-if-5-7)# channel-group lacp key 10 OK !</p> <p><b>Example 2:</b> FOS-3128(config-if-5-7)# no channel-group lacp key OK !</p>	<p>In the Example 1, it configures a key value “10” as the LACP Key of LACP Port 5~7.</p> <p>In the Example 2, it configures a key value “0” (default value) as the LACP Key of LACP Port 5~7.</p>
STEP12	<p>exit</p> <p><b>Example:</b> FOS-3128(config-if-5-7)# exit FOS-3128(config)#</p>	Return to the global configuration mode.
STEP13	<p>exit</p> <p><b>Example:</b> FOS-3128(config)# exit FOS-3128#</p>	Return to the Privileged mode.
STEP14	<p>write</p> <p><b>Example:</b> FOS-3128# write Save Config Succeeded!</p>	Save the running configuration into the startup configuration.



## 2.6.7 Dot1x Command

Command	Parameter	Description
Switch(config)# dot1x		Enable IEEE 802.1X function. When enabled, the Managed Switch acts as a proxy between the 802.1X-enabled client and the authentication server. In other words, the Managed Switch requests identifying information from the client, verifies that information with the authentication server, and relays the response to the client.
Switch(config)# dot1x reauth-period [1-3600]	[1-3600] secs	Specify a period of reauthentication time that a client authenticates with the authentication server. The allowable value is between 1 and 3600 seconds.
Switch(config)# dot1x reauthentication		Enable auto reauthentication function of the system.
Switch(config)# dot1x secret [shared_secret]	[shared_secret]	Specify a shared secret of up to 30 characters. This is the identification word or number assigned to each RADIUS authentication server with which the client shares a secret.
Switch(config)# dot1x server [A.B.C.D]	[A.B.C.D]	Specify the RADIUS authentication server IPv4 address.
Switch(config)# dot1x timeout [1-255]	[1-255] secs	Specify EAP authentication timeout value in seconds. The Managed Switch will wait for a period of time for the response from the authentication server to an authentication request before it times out. The allowable value is between 1 and 255 seconds.
<b>No command</b>		
Switch(config)# no dot1x		Disable IEEE 802.1X function.
Switch(config)# no dot1x reauth-period		Reset EAP reauthentication period back to the default. (60 seconds).
Switch(config)# no dot1x reauthentication		Disable auto reauthentication function of the system.
Switch(config)# no dot1x secret		Remove the configured shared secret.
Switch(config)# no dot1x server		Remove the configured RADIUS authentication server IPv4 address.
Switch(config)# no dot1x timeout		Reset EAP authentication timeout value back to the default. (10 seconds).

Show command		
Switch(config)# show dot1x		Show 802.1X system configuration.
Switch(config)# show dot1x interface		Show each interface's 802.1X configuration.
Switch(config)# show dot1x interface [port_list]	[port_list]	Show the specified interfaces' 802.1X configuration.
Switch(config)# show dot1x statistics		Show each port's 802.1X statistics.
Switch(config)# show dot1x statistics [port_list]	[port_list]	Show the specified interfaces' 802.1X statistics.
Switch(config)# show dot1x status		Show all ports' 802.1X status.
Switch(config)# show dot1x status [port_list]	[port_list]	Show the specified interfaces' 802.1X status.
Examples of Dot1x command		
Switch(config)# dot1x		Enable IEEE 802.1X function.
Switch(config)# dot1x reauthentication		Enable auto reauthentication function of the system.
Switch(config)# dot1x secret agagabcxyz		Set up the shared secret to "agagabcxyz".
Switch(config)# dot1x server 192.168.1.10		Set up the RADIUS authentication server IP address to 192.168.1.10.

Use "Interface" command to configure a group of ports' IEEE 802.1x settings.

Dot1x & Interface command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example: 1,3 or 2-4.
Switch(config-if-PORT-PORT)# dot1x port-control [auto   unauthorized]	[auto   unauthorized]	<p>Specify the 802.1X port type "auto", "authorized" or "unauthorized" to the selected ports.</p> <p><b>"auto"</b>: This requires 802.1X-aware clients to be authorized by the authentication server. Accesses from clients that are not dot1x aware will be denied.</p> <p><b>"authorized"</b>: This forces the Managed Switch to grant access to all clients, both 802.1X-aware and 802.1x-unaware. No authentication exchange is required. By default, all ports are set to "authorized".</p> <p><b>"unauthorized"</b>: This forces the Managed Switch to deny access to all clients, neither 802.1X-aware nor 802.1X-unaware.</p>

Switch(config-if-PORT-PORT)# dot1x reauthenticate		Re-authenticate the selected interfaces right now.
<b>No command</b>		
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example: 1, 3 or 2-4.
Switch(config-if-PORT-PORT)# no dot1x port-control		Reset the selected interfaces' 802.1X port type back to the default (authorized state).
<b>Show command</b>		
Switch(config)# show dot1x		Show 802.1X system configuration.
Switch(config)# show dot1x interface		Show each interface's 802.1x settings, including authentication status.
Switch(config)# show dot1x interface [port_list]	[port_list]	Show the specified interfaces' 802.1x settings, including authentication status.
Switch(config)# show dot1x statistics		Show each interface's 802.1x statistics.
Switch(config)# show dot1x statistics [port_list]	[port_list]	Show the specified interfaces' statistics.
Switch(config)# show dot1x status		Show each interface's 802.1x status.
Switch(config)# show dot1x status [port_list]	[port_list]	Show the specified interfaces' 802.1x status.
<b>Examples of Dot1x &amp; interface command</b>		
Switch(config)# interface 1-3		Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example: 1,3 or 2-4
Switch(config-if-1-3)# dot1x port-control auto		Set the selected ports to "auto" state.
Switch(config-if-1-3)# dot1x reauthenticate		Re-authenticate the selected ports immediately.

## 2.6.8 Fast-redundancy Command

Besides RSTP and Ring Detection, the employment of CTS's proprietary fast redundancy on your network will help protect mission-critical links against failures, avoids the occurrence of network loops, and keeps network downtime to a minimum to assure the reliability of the network. With these network redundancy, it allows the user to set up redundant loops in a network to provide a backup data transmission route in the event of the disconnection or damage of the cables. By means of this important feature in the network recovery applications, you can be totally free from any loss resulting from the time spent in locating the cable that fails to connect.

CTS's fast redundancy provides **Fast Ring v2** and **Chain** two redundancy protocols, which allows you to configure 2 rings, 2 chains, or 1 ring & 1 chain at most for a switch.

Please note that all switches on the same ring or chain must be the ones with the same brand and configured using the same redundancy protocol when configuring a redundant ring or chain. You are not allowed to use switches with different brands or mix the Ring Detection, Fast Ring v2 and Chain protocols within the same ring or chain.

In the following table, it lists the difference among forementioned redundancy protocols for your evaluation when employing network redundancy on your network.

	Ring Detection	Fast Ring v2	Chain	RSTP
Topology	Ring	Ring	Ring	Ring
Recovery Time	<30 ms	<50 ms	<1 second (for copper ports) <50 ms (for fiber ports)	Up to 5 seconds

Command	Parameter	Description
Switch(config)# fast-redundancy id [1-2]	[1-2]	Specify the group ID of the fast redundancy.
Switch(config-fr-group-ID)# description [description]	[description]	Specify a description to the selected group. Up to 35 alphanumeric characters can be accepted.
Switch(config-fr-group-ID)# enable		Enable the selected fast redundancy group.
Switch(config-fr-group-ID)# protocol fast-ringv2 role [master slave]	[master slave]	Configure fast redundancy protocol as "fast-ringv2" and specify the role as master or slave for the selected fast redundancy group.

Switch (config-fr-group-ID - ringv2-master)# ring-port1 interface [port_number] ring-port2 interface [port_number]	[port_number] [port_number]	Separately specify the port number as the 1st redundant port and the 2nd redundant port for the specific Fast Ring v2 that plays the role of “Master”.
Switch (config-fr-group-ID - ringv2-slave)# ring-port1 interface [port_number] ring-port2 interface [port_number]	[port_number] [port_number]	Separately specify the port number as the 1st redundant port and the 2nd redundant port for the specific Fast Ring v2 that plays the role of “Slave”.
Switch(config-fr-group-ID)# protocol chain		Configure fast redundancy protocol as “Chain” for the selected fast redundancy group.
Switch (config-fr-group-ID-chain)# chain-port1 interface [port_number] role [head member tail] chain-port2 disable	[port_number] [head member tail]	Specify the port number as the 1st redundant port as well as the role this port plays, and disable the 2nd redundant port for the specific Chain.
Switch (config-fr-group-ID-chain)# chain-port1 interface [port_number] role [head member tail] chain-port2 interface [port_number] role [member]	[port_number] [head member tail] [port_number] [member]	Separately specify the port number as the 1st redundant port and the 2nd redundant port for the specific Chain. Also configure the role of the 1st redundant port as head/member/tail and the role of 2nd redundant port as “member”.
<b>No command</b>		
Switch(config)# no fast-redundancy id [1-2]	[1-2]	Remove the specified group ID of the fast redundancy.
Switch(config-fr-ID)# no description		Remove the description of the selected group.
Switch(config-fr-ID)# no enable		Disable the selected fast redundancy group.
<b>Show command</b>		<b>Description</b>
Switch# show fast-redundancy all		Display all groups’ fast redundancy status, the informaton of topology transformation and the redundant ports’ transmitting/receiving statistics.
Switch# show fast-redundancy id [1-2]	[1-2]	Display the specified group’s fast redundancy status and the informaton of topology transformation.
Switch# show fast-redundancy id [1-2] statistics	[1-2]	Display the specified group’s fast redundancy status, and the redundant ports’ transmitting/receiving statistics at the normal and abnormal status.
Switch# show fast-redundancy id [1-2] statistics clear	[1-2]	Clear the redundant ports’ all transmitting/receiving statistics for the specified group.
Switch(config)# show fast-redundancy all		Display all groups’ fast redundancy status, the informaton of topology transformation and the redundant ports’ transmitting/receiving statistics.

Switch(config)# show fast-redundancy id [1-2]	[1-2]	Display the specified group's fast redundancy status and the informaton of topology transformation.
Switch(config)# show fast-redundancy id [1-2] statistics	[1-2]	Display the specified group's fast redundancy status, and the redundant ports' transmitting/receiving statistics at the normal and abnormal status.
Switch(config)# show fast-redundancy id [1-2] statistics clear	[1-2]	Clear the redundant ports' all transmitting/receiving statistics for the specified group.

## 2.6.9 IP Command

1. Set up an IP address of the Managed Switch or configure the Managed Switch to get an IP address automatically from DHCP server.

IP command	Parameter	Description
Switch(config)# ip enable		Enable IPv4 address processing.
Switch(config)# ip address [A.B.C.D] [255.X.X.X] [A.B.C.D]	[A.B.C.D]	Enter the desired IP address for your Managed Switch.
	[255.X.X.X]	Enter subnet mask of your IP address.
	[A.B.C.D]	Enter the default gateway IP address.
Switch(config)# ip address dhcp		Enable DHCP mode.
Switch(config)# ip dns		Configure IPv4 DNS as “Automatic” mode. A DNS IP address will be automatically assigned by DHCP server for the Managed Switch while DHCP is enabled.
Switch(config)# ip dns server-1 [A.B.C.D]	[A.B.C.D]	Specify the static IPv4 address of DNS1 server.
Switch(config)# ip dns server-2 [A.B.C.D]	[A.B.C.D]	Specify the static IPv4 address of DNS2 server.
Switch(config)# ip dns server-3 [A.B.C.D]	[A.B.C.D]	Specify the static IPv4 address of DNS3 server.
<b>No command</b>		
Switch(config)# no ip enable		Disable IPv4 address processing.
Switch(config)# no ip address		Reset the Managed Switch’s IP address back to the default.(192.168.0.1)
Switch(config)# no ip address dhcp		Disable DHCP mode.
Switch(config)# no ip dns		Configure IPv4 DNS as “Manual” mode. The user can manually specify a DNS IP address to DNS1 server and/or DNS2 server and/or DNS3 server for the Managed Switch
Switch(config)# no ip dns server-1 [A.B.C.D]		Clear the static IPv4 address of DNS1 server.
Switch(config)# no ip dns server-2 [A.B.C.D]		Clear the static IPv4 address of DNS2 server.
Switch(config)# no ip dns server-3 [A.B.C.D]		Clear the static IPv4 address of DNS3 server.
<b>Show command</b>		
Switch(config)# show ip address		Show the IP configuration and the current status of the system.
<b>IP command Example</b>		
Switch(config)# ip address 192.168.1.198 255.255.255.0 192.168.1.254		Set up the Managed Switch’s IP to 192.168.1.198, subnet mask to 255.255.255.0, and default gateway IP address to 192.168.1.254.
Switch(config)# ip address dhcp		The Managed Switch will obtain an IP address automatically.

## 2. Enable IPv4 DHCP Auto Recycle function.

IP command	Parameter	Description
Switch(config)# ip address dhcp auto-recycle [port-list]	[port-list]	Enable IPv4 DHCP Auto Recycle function on the specified ports. Only when one of these specific link-up port is switched from link-down into link-up status, DHCP release packets and Discover packets will be sent to DHCP server automatically. And it will ask for IP address from DHCP server again.
Switch(config)# ip address dhcp auto-recycle		Enable IPv4 DHCP Auto Recycle function globally.
<b>No command</b>		
Switch(config)# no ip address dhcp auto-recycle		Disable IPv4 DHCP Auto Recycle function globally.
Switch(config)# no ip address dhcp auto-recycle [port-list]		Disable IPv4 DHCP Auto Recycle function on the specified ports.

## 3. Enable DHCP/DHCPv6 relay function.

IP DHCP Snooping Command	Parameter	Description
Switch(config)# ip dhcp snooping		Enable DHCP/DHCPv6 snooping function.
Switch(config)# ip dhcp snooping dhcp-server [port_list]	[port_list]	Specify DHCP/DHCPv6 server trust port(s).
Switch(config)# ip dhcp snooping dhcp-server-ip		Globally enable DHCP/DHCPv6 server trust IPv4/IPv6 address.
Switch(config)# ip dhcp snooping dhcp-server-ip [1-4] ip-address [A.B.C.D   A:B:C:D:E:F:G:H]	[1-4]	Specify DHCP/DHCPv6 server trust IPv4/IPv6 address number.
	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify DHCP/ DHCPv6 server trust IP/ IPv6 address.
Switch(config)# ip dhcp snooping initiated [0-9999]	[0-9999]	Specify the DHCP/DHCPv6 snooping Initiated Time value (0~9999 seconds) that packets might be received.
Switch(config)# ip dhcp snooping leased [180-259200]	[180-259200]	Specify the DHCP/DHCPv6 snooping Leased Time for DHCP clients. (Range:180~259200 seconds).
Switch(config)# ip dhcp snooping option		Globally enable DHCPv4 Option 82 / DHCPv6 Option 37 relay agent.
Switch(config)# ip dhcp snooping remote		Enable DHCPv4 Option 82 / DHCPv6 Option 37 Manual Remote Id.
Switch(config)# ip dhcp snooping remote formatted		Enable the Formatted DHCPv4 Option 82 / DHCPv6 Option 37 Remote Id.
Switch(config)# ip dhcp snooping remote id [remote_id]	[remote_id]	You can configure the DHCPv4 Option 82 / DHCPv6 Option 37 remote ID to be a string of up to 63 characters. The default remote ID is the switch's MAC address.



<b>No command</b>		
Switch(config)# no ip dhcp snooping		Disable DHCP/DHCPv6 snooping function.
Switch(config)# no ip dhcp snooping dhcp-server		Remove DHCP/DHCPv6 server trust port(s).
Switch(config)# no ip dhcp snooping dhcp-server-ip		Globally disable DHCP/DHCPv6 server trust IPv4/IPv6 address.
Switch(config)# no ip dhcp snooping dhcp-server-ip [1-4] ip-address		Remove DHCP/DHCPv6 server trust IPv4/IPv6 address from the specified trust IPv4/IPv6 address number.
Switch(config)# no ip dhcp snooping initiated		Reset the initiated time value back to the default setting. (4 seconds)
Switch(config)# no ip dhcp snooping leased		Reset the leased time value back to the default setting.(86400 seconds)
Switch(config)# no ip dhcp snooping option		Disable DHCPv4 Option 82 / DHCPv6 Option 37 relay agent.
Switch(config)# no ip dhcp snooping remote		Disable DHCPv4 Option 82 / DHCPv6 Option 37 Manual Remote Id.
Switch(config)# no ip dhcp snooping remote id		Clear Remote ID description.
Switch(config)# no ip dhcp snooping formatted		Disable the Formatted Option 82 / DHCPv6 Option 37 Remote Id.
<b>Show command</b>		
Switch(config)# show ip dhcp snooping		Show DHCP/DHCPv6 snooping configuration.
Switch(config)# show ip dhcp snooping interface		Show each port's DHCP Snooping Option 82/Option 37 and trust port settings.
Switch(config)# show ip dhcp snooping interface [port_list]	[port_list]	Show the specified port's DHCP Snooping Option 82/Option 37 and trust port settings.
Switch(config)# show ip dhcp snooping opt82 circuit		Show each port's DHCP snooping opt82 Circuit ID.
Switch(config)# show ip dhcp snooping opt82 circuit [port_list]	[port_list]	Show the specified port's DHCP snooping opt82 Circuit ID.
Switch(config)# show ip dhcp snooping opt82 remote		Show DHCP snooping opt82 Remote ID.
Switch(config)# show ip dhcp snooping status		Show DHCP/DHCPv6 snooping current status.
<b>Examples of IP DHCP Snooping</b>		
Switch(config)# ip dhcp snooping		Enable DHCP snooping function.
Switch(config)# ip dhcp snooping dhcp-server 9-10		Configure Port 9 and Port 10 as DHCP/DHCPv6 server trust ports.
Switch(config)# ip dhcp snooping initiated 10		Specify the time value that packets might be received to 10 seconds.
Switch(config)# ip dhcp snooping leased 240		Specify packets' expired time to 240 seconds.
Switch(config)# ip dhcp snooping option		Enable DHCP Option 82 Relay Agent.
Switch(config)# ip dhcp snooping remote id 123		The remote ID is configured as "123".

#### 4. Use “Interface” command to configure a group of ports’ DHCP Snooping settings.

DHCP & Interface Command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# ip dhcp snooping circuit		Enable the selected interfaces’ DHCP Option 82 / DHCPv6 Option 37 Manual Circuit Id.
Switch(config-if-PORT-PORT)# ip dhcp snooping circuit formatted		Enable the Formatted Option 82 / DHCPv6 Option 37 Circuit Id for the selected interfaces.
Switch(config-if-PORT-PORT)# ip dhcp snooping circuit id [circuit_id]	[circuit_id]	Specify the VLAN and port identifier using a VLAN ID in the range of 1 to 4094 as DHCPv4 Option 82 / DHCPv6 Option 37 Circuit ID. Besides, you can configure the circuit ID to be a string of up to 63 characters. The default circuit ID is the port identifier, the format of which is <b>vlan-mod-port</b> .
Switch(config-if-PORT-PORT)# ip dhcp snooping option		Enable the selected interfaces’ DHCP Option 82 / DHCPv6 Option 37 relay agent.
Switch(config-if-PORT-PORT)# ip dhcp snooping trust		Enable the selected interfaces as DHCP Option 82 / DHCPv6 Option 37 trust ports.
Switch(config-if-PORT-PORT)# ip dhcp snooping server-trust		Enable the selected interfaces as DHCP/DHCPv6 server trust ports.  <b>Note : A port / ports cannot be configured as option 82 trust and server trust at the same time.</b>
<b>No command</b>		
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# no ip dhcp snooping circuit		Disable the selected interfaces’ DHCP Option 82 / DHCPv6 Option 37 Manual Circuit Id.
Switch(config-if-PORT-PORT)# no ip dhcp snooping circuit formatted		Disable the Formatted Option 82 / DHCPv6 Option 37 Circuit Id for the selected interfaces.
Switch(config-if-PORT-PORT)# no ip dhcp snooping circuit id		Clear DHCP Option 82 / DHCPv6 Option 37 Circuit Id.
Switch(config-if-PORT-PORT)# no ip dhcp snooping option		Disable the selected interfaces’ DHCP Option 82 / DHCPv6 Option 37 relay agent.
Switch(config-if-PORT-PORT)# no ip dhcp snooping trust		Reset the selected interfaces back to non-DHCP Option 82 / DHCPv6 Option 37 trust ports.
Switch(config-if-PORT-PORT)# no ip dhcp snooping server-trust		Reset the selected interfaces back to non-DHCP/DHCPv6 server trust ports.

Examples of DHCP & Interface	
Switch(config)# interface 1-3	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-1-3)# ip dhcp snooping option	Enable the selected interfaces' DHCP Option 82 / DHCPv6 Option 37 relay agent.
Switch(config-if-1-3)# ip dhcp snooping trust	Configure the selected interfaces as DHCP Option 82 / DHCPv6 Option 37 trust ports.

## 5. Enable or disable IGMP/MLD snooping globally.

IGMP, Internet Group Management Protocol, is a communication protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. It can be used for online streaming video and gaming, and allows more efficient use of resources when supporting these uses.

IGMP Snooping is the process of listening to IGMP traffic. IGMP snooping, as implied by the name, is a feature that allows the switch to "listen in" on the IGMP conversation between hosts and routers by processing the layer 3 packets IGMP packets sent in a multicast network.

When IGMP snooping is enabled in a switch it analyses all the IGMP packets between hosts connected to the switch and multicast routers in the network. When a switch hears an IGMP report from a host for a given multicast group, the switch adds the host's port number to the multicast list for that group. And, when the switch hears an IGMP Leave, it removes the host's port from the table entry.

IGMP snooping can very effectively reduce multicast traffic from streaming and other bandwidth intensive IP applications. A switch using IGMP snooping will only forward multicast traffic to the hosts interested in that traffic. This reduction of multicast traffic reduces the packet processing at the switch (at the cost of needing additional memory to handle the multicast tables) and also reduces the workload at the end hosts since their network cards (or operating system) will not have to receive and filter all the multicast traffic generated in the network.

Multicast Listener Discovery (MLD) is a component of the Internet Protocol Version 6 (IPv6) suite. MLD is used by IPv6 routers for discovering multicast listeners on a directly attached link, much like IGMP is used in IPv4.

Command / Example	Parameter	Description
Switch(config)# ip igmp snooping		Enable IGMP/MLD snooping. When enabled, the Managed Switch will monitor network traffic and determine which hosts to receive multicast traffic. This is for IGMPv1,v2 and MLDv1 only.
Switch(config)# ip igmp snooping version-3		Enable IGMPv3/MLDv2 snooping. When enabled, the Managed Switch will monitor network traffic and determine which hosts to receive multicast traffic. This is for IGMPv3 and MLDv2 only.
Switch(config)# ip igmp snooping flooding		Enable Unregistered IPMC Flooding function. Set forwarding mode for unregistered (not-joined) IP multicast traffic. The traffic will flood when enabled.

		However, the traffic will forward to router-ports only when disabled.
Switch(config)# ip igmp snooping immediate-leave		Enable immediate leave function.
Switch(config)# ip igmp snooping max-response-time [1-255]	[1-255] (Unit:1/10secs)	Specify the IGMP/MLD querier maximum response time. This determines the maximum amount of time can be allowed before sending an IGMP/MLD response report.
Switch(config)# ip igmp snooping mcast-router [port_list]	[port_list]	Specify multicast router ports.
Switch(config)# ip igmp snooping query-interval [1-6000]	[1-6000]	Specify the Query time interval of IGMP/MLD querier. This is used to set up the time interval between transmitting IGMP/MLD queries. (Range:1-6000 seconds)
Switch(config)# ip igmp snooping vlan [1-4094]	[1-4094]	Specify a VLAN ID. This enables IGMP/MLD Snooping for the specified VLAN.
Switch(config)# ip igmp snooping vlan [1-4094] query	[1-4094]	Enable a querier for the specified VLAN.
<b>No command</b>		
Switch(config)# no ip igmp snooping		Disable IGMP/MLD Snooping function.
Switch(config)# no ip igmp snooping flooding		Disable Unregistered IPMC Flooding function. Traffic will forward to router-ports only when disabled.
Switch(config)# no ip igmp snooping immediate-leave		Disable immediate leave function.
Switch(config)# no ip igmp snooping max-response-time		Reset maximum response time back to the default.
Switch(config)# no ip igmp snooping mcast-router [port_list]	[port_list]	Remove the selected port(s) from the router port list.
Switch(config)# no ip igmp snooping query-interval		Reset Query interval value back to the default. (100 seconds)
Switch(config)# no ip igmp snooping vlan [1-4094]	[1-4094]	Disable IGMP/MLD Snooping for the specified VLAN.
Switch(config)# no ip igmp snooping vlan [1-4094] query	[1-4094]	Disable a querier for the specified VLAN.
<b>Show command</b>		
Switch(config)# show ip igmp snooping		Show the current IGMP/MLD snooping configuration.
Switch(config)# show ip igmp snooping groups		Show IGMP snooping groups table.
Switch(config)# show ip igmp snooping status		Show IGMP Snooping status.
Switch(config)# show ip mld snooping groups		Show MLD snooping groups table.
Switch(config)# show ip mld snooping status		Show MLD Snooping status.

## 6. Configure IGMP filtering policies.

IGMP Filtering command	Parameter	Description
Switch(config)# ip igmp filter		Globally enable IGMP filtering function.
Switch(config)# ip igmp profile [profile_name]	[profile_name]	Create or modify a profile for IGMP filter. The maximum length of profile name is 20 characters. Up to 60 profiles can be created.
Switch(config-profile-ID)# segment [1-400]	[1-400]	Specify an existing segment ID to the selected profile.
Switch(config)# ip igmp segment [1-400]	[1-400]	Create or modify a segment ID for IGMP filter.
Switch(config-segment-ID)# name [segment_name]	[segment_name]	Specify a name for the selected segment ID. The maximum is 20 characters.
Switch(config-segment-ID)# range [E.F.G.H] [E.F.G.H]	[E.F.G.H] [E.F.G.H]	Specify Low IP multicast address and High IP multicast address for the selected segment ID.
<b>No command</b>		
Switch(config)# no ip igmp filter		Disable IGMP filtering function.
Switch(config)# no ip igmp profile [profile_name]	[profile_name]	Delete the specified profile.
Switch(config)# no ip igmp segment [1-400]	[1-400]	Delete the specified segment ID. Only the segment that does not belong to any profiles can be deleted.
Switch(config-profile-ID)# no segment		Remove all existing segment IDs from the selected profile.
Switch(config-segment-ID)# no name		Reset a name of the selected segment ID back to the default.
Switch(config-segment-ID)# no range		Reset a multicast IP range of the selected segment ID back to the default.
<b>Show command</b>		
Switch(config)# show ip igmp filter		Show IGMP filter configuration.
Switch(config)# show ip igmp filter interface		Show all ports' IGMP filtering configuration.
Switch(config)# show ip igmp filter interface [port_list]	[port_list]	Show the specified ports' IGMP filtering configuration.
Switch(config)# show ip igmp profile		Show the profile configuration of IGMP filter.
Switch(config)# show ip igmp profile [profile_name]	[profile_name]	Show the specified profile's configuration.
Switch(config)# show ip igmp segment		Show the segment configuration of IGMP filter.
Switch(config)# show ip igmp segment [1-400]	[1-400]	Show the specified segment's configuration.
Switch(config-segment-ID)# show		Show the selected segment's configuration.
Switch(config-profile-ID)# show		Show the selected profile's configuration.

Examples of IGMP Filtering Command	
Switch(config)# ip igmp filter	Enable IGMP filtering function.
Switch(config)# ip igmp segment 50	Create a segment "50".
Switch(config-segment-50)# name Silver	Specify a name "Silver" for this segment 50.
Switch(config-segment-50)# range 224.10.0.2 229.10.0.1	Specify a multicast IP range 224.10.0.2 to 229.10.0.1 to segment 50.
Switch(config)# ip igmp profile Silverprofile	Create or modify a profile named "Silverprofile".
Switch(config-profile-Silverprofile)# segment 50	Assign the segment 50 to the "Silverprofile" profile.

## 7. Use "Interface" command to configure a group of ports' IGMP filtering function.

IGMP & Interface Command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# ip igmp filter		Enable IGMP filter for the selected ports.
Switch(config-if-PORT-PORT)# ip igmp filter profile [profile_name]	[profile_name]	Assign the selected ports to an IGMP filter profile.  <b>Note : Need to create an IGMP filter profile first under the igmp global configuration mode before assigning it.</b>
Switch(config-if-PORT-PORT)# ip igmp max-groups [1-512]	[1-512]	Specify the maximum groups number of multicast streams to the selected ports.
Switch(config-if-PORT)# ip igmp static-multicast-ip [E.F.G.H   E:F:G:H:I:J:K:L] vlan [1-4094]	[E.F.G.H   E:F:G:H:I:J:K:L]	Create/specify a static multicast IP and the specified VLAN entry to the selected port.  <b>Note: Only one port could be assigned at a time.</b>
	[1-4094]	Specify a VLAN ID.
No command		
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# no ip igmp filter		Disable IGMP filter for the selected interfaces.
Switch(config-if-PORT-PORT)# no ip igmp filter profile [profile_name]	[profile_name]	Remove the specified profile from the selected ports.
Switch(config-if-PORT-PORT)#		Reset the maximum number of

no ip igmp max-groups		multicast streams back to the default (512 channels).
Switch(config-if-PORT)# no ip igmp static-multicast-ip [E.F.G.H   E:F:G:H:I:J:K:L] vlan [1-4094]	[E.F.G.H   E:F:G:H:I:J:K:L]	Remove this static multicast IP  <b>Note: Only one port could be assigned at a time.</b>
	[1-4094]	Remove the specified VLAN ID.
<b>Show command</b>		
Switch(config)# show ip igmp filter interface [port_list]	[port_list]	Show the specified ports' IGMP filtering configuration.
Switch(config)# show ip igmp static-multicast-ip		Show the static multicast IP table.
Switch(config)# show ip igmp snooping groups		Show IGMP snooping groups table.
<b>Examples of IGMP &amp; Interface</b>		
Switch(config)# interface1		Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-1)# ip igmp filter		Enable IGMP Filter on port 1.
Switch(config-if-1)# ip igmp filter profile Silverprofile		Assign the selected port to the specified profile "Silverprofile".
Switch(config-if-1)# ip igmp max-groups 400		Set the maximum number of multicast streams to 400.
Switch(config-if-1)# ip igmp static-multicast-ip 224.10.0.5 vlan 50		Create a static multicast IP to VLAN entry.

## 8. Set Up IP Source Binding Function.

Command	Parameter	Description
Switch(config)# ip source binding [1-12] ip-address [A.B.C.D   A:B:C:D:E:F:G:H]	[1-12]	Specify the IPv4/IPv6 address security binding number.
	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify IPv4/IPv6 address.
Switch(config)# ip source binding [1-12]	[1-12]	Enable the IPv4/IPv6 address for the specified number.
Switch(config)# ip source		Globally enable IPv4/IPv6 address security binding.
<b>No Command</b>		
Switch(config)# no ip source		Globally disable IPv4/IPv6 address security binding.
Switch(config)# no ip source binding [1-12]	[1-12]	Disable the IPv4/IPv6 address for the specified number.
Switch(config)# no ip source binding [1-12] ip-address		Remove the IPv4/IPv6 address of the specified number from the IP Source Binding list.
<b>Show command</b>		
Switch(config)# show ip source		Show IPv4/IPv6 Source configuration.

## 9. Use “Interface” command to configure IP Source Guard for Security.

IGMP & Interface Command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# ip sourceguard [dhcp   fixed-ip]	[dhcp   fixed-ip]	Specify the authorized access type for the selected ports.  <b>dhcp:</b> DHCP server assigns IP address.  <b>fixed IP:</b> Only Static IP (Create Static IP table first).  <b>unlimited:</b> Non-Limited (Allows both static IP and DHCP-assigned IP). This is the default setting.
Switch(config-if-PORT)# ip sourceguard static-ip [A.B.C.D   A:B:C:D:E:F:G:H] vlan [1-4094]	[A.B.C.D   A:B:C:D:E:F:G:H]	Add a static IPv4/IPv6 address to static IP address table.  <b>Note: Only one port could be assigned at a time.</b>
	[1-4094]	Specify a VLAN ID.  <b>Note: Static IP can only be configured when IP sourceguard is set to fixed-ip.</b>
<b>No command</b>		
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# no ip sourceguard		Reset IP sourceguard setting back to the default (unlimited).
Switch(config-if- PORT)# no ip sourceguard static-ip [A.B.C.D   A:B:C:D:E:F:G:H] vlan [1-4094]	[A.B.C.D   A:B:C:D:E:F:G:H]	Remove the specified IPv4/IPv6 address.  <b>Note: Only one port could be assigned at a time.</b>
	[1-4094]	Remvoe the specified VLAN ID.
<b>Show command</b>		
Switch# show ip sourceguard interface		Show each interface's IP sourceguard type.
Switch# show ip sourceguard interface [port_list]	[port_list]	Show the specified interface's IP sourceguard type.
Switch# show ip sourceguard static-ip		Show IP souceguard static IP table.
Switch(config)# show ip sourceguard interface		Show each interface's IP sourceguard type.
Switch(config)# show ip	[port_list]	Show the specified interface's IP



sourceguard interface [port_list]		sourceguard type.
Switch(config)# show ip sourceguard static-ip		Show IP sourceguard static IP table.
<b>Examples of IP Source Guard &amp; Interface</b>		
Switch(config)# interface1		Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-1)# ip sourceguard fixed-ip		Set the authorized access type for the selected ports as fixed-ip.
Switch(config-if-1)# ip sourceguard static-ip 192.168.0.100 vlan 20		Create a static IP 192.168.0.100 to VLAN entry 20.

## 10. Use “Interface” command to configure PPPoE-IA for Security.

Only PPPoE server’s packets coming from PPPoE-IA trust port(s) are allowed to be forwarded; otherwise, those packets will be dropped.

Command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT- PORT)# ip pppoe intermediate-agent trust		Configure the selected port(s) as PPPoE-IA trust port(s).
<b>No command</b>		
Switch(config-if-PORT- PORT)# no ip pppoe intermediate-agent trust		Disable the PPPoE-IA trust function on the selected port(s).

## 11. Enable PPPoE-IA for Security.

Before activating the PPPoE-IA function globally, make sure one port at least must be configured as PPPoE-IA trust port.

Command	Parameter	Description
Switch(config)# ip pppoe intermediate-agent		Enable PPPoE-IA function globally.
<b>No command</b>		
Switch(config)# no ip pppoe intermediate-agent		Disable PPPoE-IA function globally.
<b>Show command</b>		<b>Description</b>
Switch# show ip pppoe intermediate-agent		Show the current PPPoE-IA status and PPPoE-IA configuration of each port.
Switch(config)# show ip pppoe intermediate-agent		Show the current PPPoE-IA status and PPPoE-IA configuration of each port.

## 2.6.10 IPv6 Command

### Brief Introduction to IPv6 Addressing

IPv6 addresses are 128 bits long and number about  $3.4 \times 10^{38}$ . IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as

```
2001:0db8:85a3:0000:0000:8a2e:0370:7334
```

IPv6 unicast addresses other than those that start with binary 000 are logically divided into two parts: a 64-bit network prefix and a 64-bit interface identifier.

### Stateless Autoconfiguration

IPv6 lets any host generate its own IP address and check if it's unique in the scope where it will be used. IPv6 addresses consist of two parts. The leftmost 64 bits are the subnet prefix to which the host is connected, and the rightmost 64 bits are the identifier of the host's interface on the subnet. This means that the identifier need only be unique on the subnet to which the host is connected, which makes it much easier for the host to check for uniqueness on its own.

**Autoconfigured address format**

part	Subnet prefix	Interface identifier
bits	64	64

### Link local address

The first step a host takes on startup or initialization is to form a link-local address from its MAC address and the link-local prefix FE80::/10. This is done by putting the prefix into the leftmost bits and the MAC address (in EUI-64 format) into the rightmost bits, and if there are any bits left in between, those are set to zero.

### Global address

This is done in the same fashion as the link-local address, but instead of the link-local prefix FE80:: it will use the prefix supplied by the router and put it together with its identifier (which by default is the MAC address in EUI-64 format).

Some IPv6 addresses are reserved for special purposes, such as loopback, 6to4 tunneling, and Teredo tunneling, as outlined in RFC 5156. Also, some address ranges are considered special, such as link-local addresses for use on the local link only, Unique Local addresses (ULA), as described in RFC 4193, and solicited-node multicast addresses used in the Neighbor Discovery Protocol.

### DHCPv6

IPv6 hosts may automatically generate IP addresses internally using stateless address autoconfiguration, or they may be assigned configuration data with DHCPv6.

**Set up the IPv6 address of the Managed Switch or configure the Managed Switch to get an IP address automatically from DHCPv6 server.**

IPv6 command	Parameter	Description
Switch(config)# ipv6 address autoconfig		Configuration of IPv6 addresses using stateless autoconfiguration.
Switch(config)# ipv6 address dhcp auto		Configure DHCPv6 function into the auto mode.
Switch(config)# ipv6 address dhcp force		Configure DHCPv6 function into the forced mode.
Switch(config)# ipv6 address dhcp rapid-commit		Allow the two-message exchange for address assignment.
<b>“ipv6 address dhcp” commands are functional only when autoconfiguration is enabled.</b>		
Switch(config)# ipv6 address global	[A:B:C:D:E:F:G:H/10~128]	Specify IPv6 global address and prefix-length of the Managed Switch.
[A:B:C:D:E:F:G:H/10~128] [A:B:C:D:E:F:G:H]	[A:B:C:D:E:F:G:H]	Specify IPv6 default gateway IP address of the Managed Switch.
Switch(config)# ipv6 address link-local	[A:B:C:D:E:F:G:H/10~128]	Specify IPv6 link-local address and prefix-length of the Managed Switch.
[A:B:C:D:E:F:G:H/10~128]		
Switch(config)# ipv6 dns		Configure IPv6 DNS as “Automatic” mode. A DNS IP address will be automatically assigned by DHCP server for the Managed Switch while DHCP is enabled.
Switch(config)# ipv6 dns server-1 [A:B:C:D:E:F:G:H]	[A:B:C:D:E:F:G:H]	Specify the static IPv6 address of DNS1 server.
Switch(config)# ipv6 dns server-2 [A:B:C:D:E:F:G:H]	[A:B:C:D:E:F:G:H]	Specify the static IPv6 address of DNS2 server.
Switch(config)# ipv6 dns server-3 [A:B:C:D:E:F:G:H]	[A:B:C:D:E:F:G:H]	Specify the static IPv6 address of DNS3 server.
Switch(config)# ipv6 enable		Enable IPv6 address processing.
<b>No command</b>		
Switch(config)# no ipv6 address autoconfig		Disable IPv6 stateless autoconfig.
Switch(config)# no ipv6 address dhcp		Disable DHCPv6 function.
Switch(config)# no ipv6 address dhcp rapid-commit		Disable rapid-commit feature.
Switch(config)# no ipv6 address global		Clear IPv6 global address entry.
Switch(config)# no ipv6 address link-local		Clear IPv6 link-local address entry.
Switch(config)# no ipv6 dns		Configure IPv6 DNS as “Manual” mode. The user can manually specify a DNS IPv6 address to DNS1 server and/or DNS2 server and/or DNS3 server for the Managed Switch.

Switch(config)# no ipv6 dns server-1 [A:B:C:D:E:F:G:H]		Clear the static IPv6 address of DNS1 server.
Switch(config)# no ipv6 dns server-2 [A:B:C:D:E:F:G:H]		Clear the static IPv6 address of DNS2 server.
Switch(config)# no ipv6 dns server-3 [A:B:C:D:E:F:G:H]		Clear the static IPv6 address of DNS3 server.
Switch(config)# no ipv6 enable		Disable IPv6 processing.
<b>Show command</b>		
Switch# show ipv6 address		Display IPv6 configuraiton and the current IPv6 status of the Managed Switch.
Switch(config)# show ipv6 address		Display IPv6 configuraiton and the current IPv6 status of the Managed Switch.
<b>Examples of IPv6 command</b>		
Switch(config)# ipv6 address autoconfig		Enable IPv6 autoconfiguration.
Switch(config)# ipv6 address dhcp auto		Enable DHCPv6 auto mode.

## 2.6.11 LLDP Command

LLDP stands for Link Layer Discovery Protocol and runs over data link layer. It is used for network devices to send information about themselves to other directly connected devices on the network. By using LLDP, two devices running different network layer protocols can learn information about each other. A set of attributes are used to discover neighbor devices. These attributes contain type, length and value descriptions, and are referred to as TLVs. Details such as port description, system name, system description, system capabilities, and management address can be sent and received on this Managed Switch.

LLDP command	Parameter	Description
Switch(config)# lldp hold-time [1-3600]	[1-3600]	Specify the amount of time in seconds. A receiving device will keep the information sent by your device for a period of time you specify here before discarding it. The allowable hold-time value is between 1 and 3600 seconds.
Switch(config)# lldp interval [1-180]	[1-180]	Specify the time interval for updated LLDP packets to be sent. The allowable interval value is between 1 and 180 seconds.
Switch(config)# lldp packets [1-16]	[1-16]	Specify the amount of packets that are sent in each discovery. The allowable packet value is between 1 and 16 packets.
Switch(config)# lldp tlv-select capability		Enable Capability attribute to be sent.
Switch(config)# lldp tlv-select management-address		Enable Management Address attribute to be sent.
Switch(config)# lldp tlv-select port-description		Enable Port Description attribute to be sent.
Switch(config)# lldp tlv-select system-description		Enable System Description attribute to be sent.
Switch(config)# lldp tlv-select system-name		Enable System Name attribute to be sent.
<b>No command</b>		
Switch(config)# no lldp hold-time		Reset the hold-time value back to the default. (120 seconds)
Switch(config)# no lldp interval		Reset the time interval value of sending updated LLDP packets back to the default.(5 seconds)
Switch(config)# no lldp packets		Reset the amount of packets that are sent in each discover back to the default.(1 packet)
Switch(config)# no lldp tlv-select capability		Disable Capability attribute to be sent.
Switch(config)# no lldp tlv-select management-address		Disable Management Address attribute to be sent.
Switch(config)# no lldp tlv-select port-description		Disable Port Description attribute to be sent.
Switch(config)# no lldp tlv-select system-description		Disable System Description attribute to be sent.
Switch(config)# no lldp tlv-select system-name		Disable System Name attribute to be sent.

<b>Show command</b>	
Switch# show lldp	Show LLDP settings.
Switch# show lldp interface	Show each interface's LLDP configuraiton.
Switch# show lldp interface [port_list]	Show the selected interfaces' LLDP configuration.
Switch# show lldp status	Show the current LLDP status.
Switch(config)# show lldp	Show LLDP settings.
Switch(config)# show lldp interface	Show each interface's LLDP configuraiton.
Switch(config)# show lldp interface [port_list]	Show the selected interfaces' LLDP configuration.
Switch(config)# show lldp status	Show the current LLDP status.
<b>Examples of LLDP command</b>	<b>Description</b>
Switch(config)# lldp hold-time 60	Set the hold-time value to 60 seconds.
Switch(config)# lldp interval 10	Set the updated LLDP packets to be sent in very 10 seconds.
Switch(config)# lldp packets 2	Set the number of packets to be sent in each discovery to 2.
Switch(config)# lldp tlv-select capability	Enable Capability attribute to be sent.
Switch(config)# lldp tlv-select management-address	Enable Management Address attribute to be sent.
Switch(config)# lldp tlv-select port-description	Enable Port Description attribute to be sent.
Switch(config)# lldp tlv-select system-description	Enable System Description to be sent.
Switch(config)# lldp tlv-select system-name	Enable System Name to be sent.

Use “Interface” command to configure a group of ports’ LLDP settings.

<b>LLDP &amp; Interface command</b>	<b>Parameter</b>	<b>Description</b>
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# lldp		Enable LLDP on the selected interfaces.
<b>No command</b>		
Switch(config-if-PORT-PORT)# no lldp		Disable LLDP on the selected interfaces.

## 2.6.12 Loop Detection Command

In a real network, it is possible the people misconnect the network cable to incur loop condition. In a worst case, the network is out of service thereafter. This section gives a guide to configure the Loop Detection function of the system to prevent the system from loop.

After a proper setting of Loop Detection function, the system detects loop condition by periodically sending loop detection packet. Once the system receives the loop detection packet from itself, it is claimed that it detects loop condition. Then, the system takes the following actions

1. It blocks the relevant port to prevent broadcast storms, and send out SNMP trap to inform the network administrator. In other words, the system stops forwarding all the traffic via the looped port. However, the system will process the Loop Detection, RSTP and LLDP packets received on the looped port.
2. It slowly blinks the LED of looped port in orange.
3. It periodically sends loop detection packet to detect the existence of loop condition.

When the system does not receive any loop detection packet from itself for a period of configured **Looped port unlock-interval**. The system claims the loop condition disappears. Then, the system takes the following actions

1. It un-blocks the relevant port. In other words, the system normally forwards all the traffic via the relevant port.
2. It stops slowly blinking the LED of looped port in orange.
3. It periodically sends loop detection packet to detect the existence of loop condition.

---

**Note:** Under loop condition, the LED of looped port continues to slowly blink orange even the connected network cable is unplugged out of looped port.

---

Command	Parameter	Description
Switch(config)# loop-detection		Enable Loop Detection function.
Switch(config)# loop-detection all-vlan		Check All VLAN box to enable loop detection on all trunk-VLAN-vids configured in VLAN Command (See <a href="#">Section 2.6.28</a> ).  <b>NOTE: When All VLAN checkbox is checked, it invalidates the configured "Specific VLAN".</b>
Switch(config)# loop-detection interval [1-180]	[1-180]	This is the time interval (in seconds) that the device will periodically send loop detection packets to detect the presence of looped network. The valid range is from 1 to 180 seconds. The default setting is 1 seconds.
Switch(config)# loop-detection unlock-interval [1-1440]	[1-1440]	This is the time interval for the system to detect the existence of loop condition. System un-blocks the looped port if it does not receive any loop-detection packet when the configured unlock-interval ends. The unlock-interval can be set from 1 to 1440 minutes. The default setting is 1440 minutes.

		<p><b>NOTE:</b></p> <p>1. Be aware that Looped port unlock-interval converted into seconds should be greater than or equal to Detection Interval seconds multiplied by 10. The '10' is a magic number which is for the system to claims the loop detection disappears when the system does not receive the loop-detection packet from itself at least 10 times. In general, it can be summarized by a formula below:</p> $60 * \text{"Looped port unlock-interval"} \geq 10 * \text{"Detection Interval"}$ <p>2. When a port is detected as a looped port, the system keeps the looped port in blocking status until loop situation is gone. In other words, the system stops forwarding all the traffic via the looped port. However, the system will process the loop-detection packet received on the looped port.</p>
Switch(config)# loop-detection vlan-id [1-4094]	[1-4094]	<p>Enable loop detection on specified VLAN. Up to 4 sets of VLAN ID can be assigned.</p> <p><b>NOTE: The configured "Specific VLAN" takes effect when All VLAN check-box is unchecked.</b></p>
<b>No command</b>		
Switch(config)# no loop-detection		Disable Loop Detection function.
Switch(config)# no loop-detection all-vlan		Disable loop detection on all trunk-VLAN-vids.
Switch(config)# no loop-detection interval		Reset Loop Detection time interval back to the default.
Switch(config)# no loop-detection unlock-interval		Reset Loop Detection unlock time interval back to the default.
Switch(config)# no loop-detection vlan-id [1-4094]	[1-4094]	Disable loop detection on a specified VLAN.
<b>Show command</b>		
Switch# show loop-detection		Show Loop Detection configuration.
Switch# show loop-detection status		Show Loop Detection status of all ports.
Switch# show loop-detection status [port_list]	[port_list]	Show Loop Detection status of the specified port(s).
Switch(config)# show loop-detection		Show Loop Detection configuration.
Switch(config)# show loop-detection status		Show Loop Detection status of all ports.



Switch(config)# show loop-detection status [port_list]	[port_list]	Show Loop Detection status of the specified port(s).
<b>Examples of Loop Detection command</b>		
Switch(config)# loop-detection interval 60		Set the Loop Detection time interval to 60 seconds.
Switch(config)# loop-detection unlock-interval 120		Set the Loop Detection unlock time interval to 120 minutes.
Switch(config)# loop-detection vlan-id 100		Enable the Loop Detection on VLAN ID 100.

**Use “Interface” command to configure a group of ports’ Loop Detection settings.**

<b>Dot1x &amp; Interface command</b>	<b>Parameter</b>	<b>Description</b>
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# loop-detection		Enable Loop Detection function on the selected port(s).
<b>No command</b>		
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# no loop-detection		Disable Loop Detection function on the selected port(s).

## 2.6.13 I2protocol-tunnel Command

**L2PT (Layer 2 protocol tunneling)** allows Layer 2 protocol data units (PDUs), including CDP(Cisco Discovery Protocol), LLDP(Link Layer Discovery Protocol), STP(Spanning Tree Protocol), VTP(Vlan Trunking Protocol), LACP(Link Aggregation Control Protocol), PAgP(Port Aggregation Protocol), UDLD(Unidirectional Link Detection), to be tunneled through a network.

GBPT, also referred to as Generic Bridge PDU Tunneling, provides a scalable approach to PDU tunneling by software encapsulating the PDUs in the ingress edge switches and then multicasting them in hardware. All switches inside the service provider network treat these encapsulated frames as data packets and forward them to the other end. The egress edge switch listens for these special encapsulated frames and decapsulates them; they are then forwarded out of the tunnel.

The encapsulation involves the rewriting of the destination media access control (MAC) address in the PDU. An ingress edge switch rewrites the destination MAC address of the PDUs received on a Layer 2 tunnel port with the desired multicast address.

Command	Parameter	Description
Switch(config)# I2protocol-tunnel		Enable Layer 2 protocol tunneling (L2PT) function on the Managed Switch.
Switch(config)# I2protocol-tunnel cos [0-7]	[0-7]	Specify the priority bit value as L2PT Class of Service (CoS).
Switch(config)# I2protocol-tunnel mac [xx:xx:xx:xx:xx:xx]	[xx:xx:xx:xx:xx:xx]	Specify destination MAC address for encapsulating layer 2 protocol packets.
<b>No command</b>		
Switch(config)# no I2protocol-tunnel		Disable Layer 2 protocol tunneling function on the Managed Switch.
Switch(config)# no I2protocol-tunnel cos		Reset priority bit value for L2PT class of service (cos) back to the default (5).
Switch(config)# no I2protocol-tunnel mac		Reset destination MAC address for encapsulating Layer 2 protocol packets back to the default (01:00:0C:CD:CD:D0).
<b>Show command</b>		
Switch(config)# show I2protocol-tunnel		Show the current Layer 2 Protocol Tunneling configuration, the state of PDUs and each PDU's encapsulation as well as decapsulation counters for all ports.
Switch(config)# show I2protocol-tunnel [port_list]	[port_list]	Show the current Layer 2 Protocol Tunneling configuration, the state of PDUs and each PDU's encapsulation as well as decapsulation counters for the specified port.
Switch(config)# show I2protocol-tunnel [port_list] clear	[port_list]	Clear each PDU's encapsulation and decapsulation counters of the specified port.

Switch(config)# show l2protocol-tunnel clear		Clear each PDU's encapsulation and decapsulation counters of all ports.
<b>Examples of L2PT command</b>		
Switch(config)# l2protocol-tunnel		Enable L2PT function.
Switch(config)# l2protocol-tunnel cos 3		Specify the priority bit value "3" to L2PT Class of Service (CoS).

Use "Interface" command to configure Layer 2 protocol data units (PDUs) settings.

<b>L2PT &amp; Interface command</b>	<b>Parameter</b>	<b>Description</b>
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example: 1,3 or 2-4
Switch(config-if-PORT-PORT)# l2protocol-tunnel		Enable layer 2 protocol tunneling for CDP, LLDP, STP and VTP packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel cdp		Enable layer 2 protocol tunneling for CDP packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel lldp		Enable layer 2 protocol tunneling for LLDP packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel point-to-point		Enable point-to-point layer 2 protocol tunneling for LACP, PAgP and UDLD packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel point-to-point lacp		Enable point-to-point layer 2 protocol tunneling for LACP packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel point-to-point pagp		Enable point-to-point layer 2 protocol tunneling for PAgP packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel point-to-point udld		Enable point-to-point layer 2 protocol tunneling for UDLD packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel stp		Enable layer 2 protocol tunneling for STP packets on the selected port(s).
Switch(config-if-PORT-PORT)# l2protocol-tunnel vtp		Enable layer 2 protocol tunneling for VTP packets on the selected port(s).
<b>No command</b>		
Switch(config-if-PORT-PORT)# no l2protocol-tunnel		Disable layer 2 protocol tunneling for CDP, LLDP, STP and VTP packets on the selected port(s).
Switch(config-if-PORT-PORT)# no l2protocol-tunnel cdp		Disable layer 2 protocol tunneling for CDP packets on the selected port(s).
Switch(config-if-PORT-PORT)# no l2protocol-tunnel lldp		Disable layer 2 protocol tunneling for LLDP packets on the selected port(s).
Switch(config-if-PORT-PORT)# no l2protocol-tunnel point-to-point		Disable point-to-point layer 2 protocol tunneling for LACP, PAgP and UDLD packets on the selected port(s).
Switch(config-if-PORT-PORT)# no l2protocol-tunnel point-to-point lacp		Disable point-to-point layer 2 protocol tunneling for LACP packets on the selected port(s).

Switch(config-if-POR-PORT)# no l2protocol-tunnel point-to-point pagp		Disable point-to-point layer 2 protocol tunneling for PAgP packets on the selected port(s).
Switch(config-if-POR-PORT)# no l2protocol-tunnel point-to-point udld		Disable point-to-point layer 2 protocol tunneling for UDLD packets on the selected port(s).
Switch(config-if-POR-PORT)# no l2protocol-tunnel stp		Disable layer 2 protocol tunneling for STP packets on the selected port(s).
Switch(config-if-POR-PORT)# no l2protocol-tunnel vtp		Disable layer 2 protocol tunneling for VTP packets on the selected port(s).

## 2.6.14 MAC Command

Set up MAC address table aging time. Entries in the MAC address table containing source MAC addresses and their associated ports will be deleted if they are not accessed within aging time.

MAC Command	Parameter	Description
Switch(config)# mac address-table aging-time [0-172800s]	[0-172800s]	Enter the aging time for MAC addresses in seconds. 0= never aging out.
<b>No command</b>		
Switch(config)# no mac address-table aging-time		Reset MAC address table aging time back to the default. (300 seconds).
<b>Show command</b>		
Switch(config)# show mac address-table all		Show all of MAC table information.
Switch(config)# show mac address-table all [mac   vid   port]	[mac   vid   port]	Show all learned MAC addresses sorted by specific option.
Switch(config)# show mac address-table clear		Clear MAC address table.
Switch(config)# show mac address-table clear [port_list]	[port_list]	Clear MAC addresses learned by the specified port.
Switch(config)# show mac address-table count		Show the statistics of MAC address table.
Switch(config)# show mac address-table interface [port_list] [mac   vid   port]	[port_list]	Show the MAC addresses learned by the specified port.
	[mac   vid   port]	Show the learned MAC addresses sorted by specific option.
Switch(config)# show mac address-table mac [xx:xx:xx   xx:xx:xx:xx:xx:xx] [mac   vid   port]	[xx:xx:xx ]	Show the MAC addresses that its first 3 bytes starting with the specified MAC.
	[xx:xx:xx:xx:xx:xx]	Show the MAC addresses that its 6 bytes totally meet the specified MAC.
	[mac   vid   port]	Show the matched MAC addresses sorted by specific option.
Switch(config)# show mac address-table static		Show the created static MAC addresses.
Switch(config)# show mac address-table static [mac   vid   port]	[mac   vid   port]	Show the created static MAC addresses sorted by specific option.
Switch(config)# show mac address-table vlan [vlan_id] [mac   vid   port]	[vlan_id]	Show the MAC addresses that belongs to the specified VLAN ID.
	[mac   vid   port]	Show the specified VLAN's MAC addresses sorted by specific option.
Switch(config)# show mac learning		Show MAC learning setting of each interface.
Switch(config)# show mac static-mac all		Show all information of static MAC address table.
Switch(config)# show mac static-mac interface [port_list]	[port_list]	Show the specific port's information of static MAC address table.
Switch(config)# show mac aging-time		Show the current MAC address aging time.

Examples of MAC command	
Switch(config)# mac address-table aging-time 200	Set MAC address aging time to 200 seconds.

Use “Interface” command to configure a group of ports’ MAC Table settings.

MAC & Interface command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT)# mac address-table static-mac [xx:xx:xx:xx:xx:xx] vlan [1-4094]	[xx:xx:xx:xx:xx:xx]	Specify a MAC address to the VLAN entry.  <b>Note: Only one port could be set at a time.</b>
	[1-4094]	Specify the VLAN where the packets with the Destination MAC address can be forwarded to the selected port.
Switch(config-if-PORT-PORT)# mac learning		Enable MAC learning function of the selected port(s).
<b>No command</b>		
Switch(config-if-PORT)# no mac address-table static-mac [xx:xx:xx:xx:xx:xx] vlan [1-4094]	[xx:xx:xx:xx:xx:xx]	Remove the specified MAC address from the MAC address table. <b>Note: Only one port could be set at a time.</b>
	[1-4094]	Remove the VLAN to which the specified MAC address belongs.
Switch(config-if-PORT-PORT)# no mac learning		Disable MAC learning function of the selected port(s).

## 2.6.15 Management Command

Command	Parameter	Description
Switch(config)# management console		Enable Console management. To manage the Managed Switch via Console.
Switch(config)# management console fail-retry [1-10]	[1-10]	Configure the retry times if the console login fails. The allowable value is 1~10 (times).
Switch(config)# management console block-time [1-120]	[1-120]	Configure the console block time of the Managed Switch if the console login retry times are more than the console fail-retry value you set up. The allowable value 1-120 (minutes).
Switch(config)# management console timeout [1-1440]	[1-1440]	To disconnect the Managed Switch when console management is inactive for a certain period of time. The allowable value is from 1 to 1440 (seconds).
Switch(config)# management console timeout [1-1440] min	[1-1440]	To disconnect the Managed Switch when console management is inactive for a certain period of time. The allowable value is from 1 to 1440 (minutes).
Switch(config)# management ssh		Enable SSH management. To manage the Managed Switch via SSH.
Switch(config)# management telnet		Enable Telnet Management. To manage the Managed Switch via Telnet.
Switch(config)# management telnet port [1-65535]	[1-65535]	When telnet is enabled, you can set up the port number that allows telnet access. The default port number is set to 23. However, you can also identify a port number between 1 and 65535.
Switch(config)# management web		Enable Web management by the http method.
Switch(config)# management web [http   https   disable]	[http   https   disable]	Enable or disable Web Management. You can enable this management and manage the Managed Switch via the specified web management method between http and https.
Switch(config)# management web timeout [1-1440]	[1-1440]	To disconnect the Managed Switch when web management is inactive for a certain period of time. The allowable value is from 1 to 1440(minutes).
<b>No command</b>		
Switch(config)# no management console		Disable Console management.
Switch(config)# no management console fail-retry		Reset console fail-retry times back to the default (3 times).
Switch(config)# no management console block-time		Reset console block-time back to the default (20 minutes).
Switch(config)# no management console timeout		Reset console timeout back to the default (300 seconds).

Switch(config)# no management ssh		Disable SSH management.
Switch(config)# no management telnet		Disable Telnet management.
Switch(config)# no management telnet port		Reset Telnet port back to the default. The default port number is 23.
Switch(config)# no management web		Disable Web management.
Switch(config)# no management web timeout		Reset web timeout value back to the default (20 minutes).
<b>Show command</b>		
Switch(config)# show management		Show the current management configuration of the Managed Switch.
<b>Examples of Management command</b>		
Switch(config)# management console timeout 300		The console management will timeout (logout automatically) when it is inactive for 300 seconds.
Switch(config)# management telnet		Enable Telnet management.
Switch(config)# management telnet port 23		Set Telnet port to port 23.
Switch(config)# management web		Enable Web management.



## 2.6.16 Mirror Command

Command	Parameter	Description
Switch(config)# mirror destination [port]	[port]	Specify the preferred target port (1~28) for port mirroring.
Switch(config)# mirror source [port_list]	[port_list]	Specify a source port number or several source port numbers for port mirroring.  <b>NOTE: The port selected as the target port cannot be the source port.</b>
<b>No command</b>		
Switch(config)# no mirror destination		Disable port mirroring function or disable mirroring target port.
Switch(config)# no mirror source		Disable mirroring source ports.
<b>Show command</b>		
Switch(config)# show mirror		Show the current port mirroring configuration.
<b>Example of Mirror command</b>		
Switch(config)# mirror destination 8		The selected source ports' data will mirror to Port 8.
Switch(config)# mirror source 1-7		Port 1 to 7's data will mirror to the target port.

## 2.6.17 NTP Command

Command	Parameter	Description
Switch(config)# ntp		Enable Network Time Protocol to have Managed Switch's system time synchronize with NTP time server.
Switch(config)# ntp daylight-saving [ recurring   date ]	[recurring]	Enable daylight saving function with recurring mode.
	[date]	Enable daylight saving function with date mode.
Switch(config)# ntp offset [Mm,w,d,hh:mm-Mm,w,d,hh:mm]	[Mm,w,d,hh:mm-Mm,w,d,hh:mm]	Specify the offset of daylight saving in recurring mode.  <b>Mm=1-12, w=1-5, d=0-6(0=Sun, 6=Sat) Hh=0-23, mm=0-59, Days=1-365</b>
Switch(config)# ntp offset [Days,hh:mm-Days,hh:mm]	[Days,hh:mm-Days,hh:mm]	Specify the offset of daylight saving in date mode.  <b>Mm=1-12, w=1-5, d=0-6(0=Sun, 6=Sat) Hh=0-23, mm=0-59, Days=1-365</b>
Switch(config)# ntp server1 [A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	[A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	Specify the primary NTP time server's IPv4/IPv6 address or domain name.
Switch(config)# ntp server2 [A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	[A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	Specify the secondary NTP time server's IPv4/IPv6 address or domain name.

Switch(config)# ntp syn-interval [1-8]	[1-8]	Specify the time interval to have Managed Switch synchronize with NTP time server.  <b>1=1hour, 2=2hours, 3=3hours, 4=4hours, 5=6hours, 6=8hours, 7=12hours, 8=24hours</b>
Switch(config)# ntp time-zone [0-135]	[0-135]	Specify the time zone to which the Managed Switch belongs. Use space and a question mark to view the complete code list of 136 time zones. For example, "Switch(config)# ntp time-zone ?"
<b>No command</b>		
Switch(config)# no ntp		Disable Network Time Protocol to stop Managed Switch's system time synchronizing with NTP time server.
Switch(config)# no ntp daylight-saving		Disable the daylight saving function.
Switch(config)# no ntp offset		Reset the offset value back to the default.
Switch(config)# no ntp server1		Delete the primary NTP time server's IPv4/IPv6 address or domain name.
Switch(config)# no ntp server2		Delete the secondary NTP time server's IPv4/IPv6 address or domain name.
Switch(config)# no ntp syn-interval		Reset the synchronization time interval back to the default.
Switch(config)# no ntp time-zone		Reset the time-zone setting back to the default.
<b>Show command</b>		
Switch# show ntp		Show the current NTP time server configuration.
Switch(config)# show ntp		Show the current NTP time server configuration.
<b>Examples of NTP command</b>		
Switch(config)# ntp		Enable NTP function for the Managed Switch.
Switch(config)# ntp daylight-saving date		Enable the daylight saving function in date mode.
Switch(config)# ntp offset [100,12:00-101,12:00]		Daylight saving time date start from the 100 <sup>th</sup> day of the year to the 101 <sup>th</sup> day of the year.
Switch(config)# ntp server1 192.180.0.12		Set the primary NTP time server's IP address to 192.180.0.12.
Switch(config)# ntp server2 192.180.0.13		Set the secondary NTP time server's IP address to 192.180.0.13.
Switch(config)# ntp syn-interval 4		Set the synchronization interval to 4 hours.
Switch(config)# ntp time-zone 3		Set the time zone to GMT-8:00 Vancouver.

## 2.6.18 QoS Command

### 1. Set up QoS

QoS command	Parameter	Description
Switch(config)# qos [802.1p   dscp]	[802.1p   dscp]	Specify QoS mode.
Switch(config)# qos dscp-map [0-63] [0-7]	[0-63]	Specify a DSCP bit value.
	[0-7]	Specify a queue value.
Switch(config)# qos management-priority [0-7]	[0-7]	Specify management default 802.1p bit.
Switch(config)# qos queuing-mode [weight]	[weight]	Specify QoS queuing mode as weight mode.
Switch(config)# qos queue-weighted [1:2:4:8:16:32:64:128]	[1:2:4:8:16:32:64:128]	Specify the queue weighted.
Switch(config)# qos remarking dscp		Globally enable DSCP remarking.
Switch(config)# qos remarking dscp-map [1-8]	[1-8]	Specify the DSCP and priority mapping ID.
Switch (config-dscp-map-ID)# new-dscp [0-63]	[0-63]	Specify the new DSCP bit value for the selected priority mapping ID.
Switch (config-dscp-map-ID)# rx-dscp [0-63]	[0-63]	Specify the received DSCP bit value for the selected priority mapping ID.
Switch(config)# qos remarking 802.1p		Globally enable 802.1p remarking.
Switch(config)# qos remarking 802.1p-map [1-8]	[1-8]	Specify the 802.1p and priority mapping ID.
Switch (config-802.1p-map-ID)# priority [0-7]	[0-7]	Specify the new 802.1p bit value for the selected priority mapping ID.
Switch(config)# qos 802.1p-map [0-7] [0-7]	[0-7]	Specify an 802.1p bit value.
	[0-7]	Specify a queue value.
<b>No command</b>		
Switch(config)# no qos		Disable QoS function.
Switch(config)# no qos dscp-map [0-63]	[0-63]	Reset the specified DSCP bit value back to the default queue value (Q(0)).
Switch(config)# no qos management-priority		Reset management 802.1p bit back to the default (0).
Switch(config)# no qos queuing-mode		Specify QoS queuing mode as strict mode.
Switch(config)# no qos queue-weighted		Reset the queue weighted value back to the default.
Switch(config)# no qos remarking dscp		Globally disable DSCP remarking.
Switch(config)# no qos remarking dscp-map [1-8]	[1-8]	Reset the DSCP remarking for the specified priority mapping ID back to the default.
Switch (config-dscp-map-ID)# no new-dscp		Reset the new DSCP bit value for the selected priority mapping

		ID back to the default.
Switch (config-dscp-map-ID)# no rx-dscp		Reset the received DSCP bit value for the selected priority mapping ID back to the default.
Switch(config)# no qos remarking 802.1p		Globally disable 802.1p remarking.
Switch(config)# no qos remarking 802.1p-map [1-8]	[1-8]	Reset the 802.1p remarking for the specified priority mapping ID back to the default.
Switch (config-802.1p-map-ID)# no priority		Reset the new 802.1p bit value for the selected priority mapping ID back to the default.
Switch(config)# no qos 802.1p-map [0-7]	[0-7]	Reset the specified 802.1p bit value back to the default queue value (Q(0)).
<b>Show command</b>		
Switch(config)# show qos		Show QoS configuration.
Switch(config)# show qos interface		Show QoS interface overall information.
Switch(config)# show qos interface [port-list]	[port-list]	Show the selected QoS interface information.
Switch(config)# show qos remarking		Show QoS remarking information.
Switch (config-dscp-map-ID)# show		Show the DSCP mapping configuration for the selected priority mapping ID.
Switch (config-802.1p-map-ID)# show		Show the 802.1p mapping configuration for the selected priority mapping ID.


## 2. Use “interface” command to configure a group of ports’ QoS settings.

QoS & Interface command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example: 1,3 or 2-4
Switch(config-if-PORT-PORT)# qos rate-limit ingress [0,500-1000000]	[0,500-1000000] kbps	Specify the ingress rate limit value. 0:Disable
Switch(config-if-PORT-PORT)# qos rate-limit egress [0,500-1000000]	[0,500-1000000] kbps	Specify the egress rate limit value. 0:Disable
Switch(config-if-PORT-PORT)# qos user-priority [0-7]	[0-7]	Specify the default priority bit (P-bit) to the selected interfaces.

No command		
Switch(config-if-POR-PORT)# no qos rate-limit ingress		Disable QoS ingress rate limit setting.
Switch(config-if-POR-PORT)# no qos rate-limit egress		Disable QoS egress rate limit setting.
Switch(config-if-POR-PORT)# no qos user-priority		Reset the user priority value setting back to the default.

For QoS configuration via CLI, we take a FOS-3128 Managed Switch for example to let the users have a clear understanding of these QoS commands.

Under this network environment, FOS-3128 will be configured as Table 2-1. Port 1-5 are client ports and Port 25 is the uplink port of the device. Client ports will receive the data traffic with different VLAN P-bit value. Port 3, Port 4 and Port 5 are also limited to specified bandwidth in the different rate limit in ingress and egress.

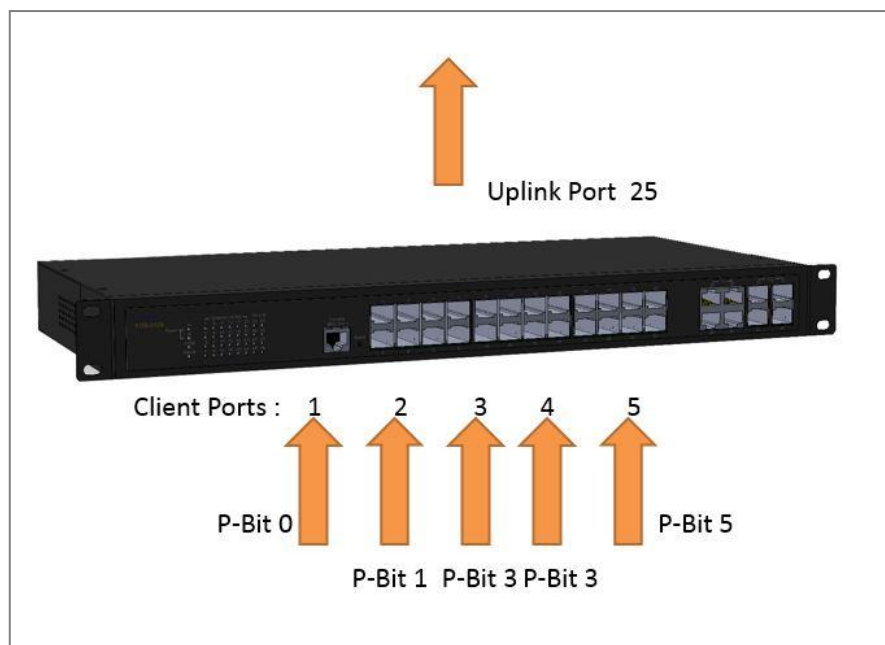

QoS Mode: 802.1p; Egress Mode: Weight; Port 25: Uplink Port. Queue-Weighted: 1(Q0):2(Q1):3(Q2):4(Q3):5(Q4):6(Q5):7(Q6):8(Q7)					
802.1p Priority Map	P-Bit	Queue Mapping	Ingress Rate	Egress Rate	Remark
Port 1	0	Q0	Default	Default	The rest of P-Bits are default value.
Port 2	1	Q1	Default	Default	
Port 3	3	Q2	10000	10000	
Port 4	3	Q2	10000	10000	
Port 5	5	Q3	1G	1G	

Table 2-1

Below is the complete CLI commands applied to FOS-3128 Managed Switch.

	Command	Purpose
STEP1	configure  <b>Example:</b> FOS-3128# config FOS-3128(config)#	Enter the global configuration mode.
STEP2	qos 802.1p  <b>Example:</b> FOS-3128(config)# qos 802.1p OK !	In this example, it configures the QoS Mode to 802.1p.
STEP3	qos queuing-mode weight  <b>Example:</b> FOS-3128(config)# qos queuing-mode weight OK !	In this example, it configures Configure Egress Mode as "Weight".
STEP4	qos queue-weighted <i>weighted</i>  <b>Example:</b> FOS-3128(config)# qos queue-weighted 1:2:3:4:5:6:7:8 OK !	In this example, it configures the Queue Weighted to : 1(Q0):2(Q1):3(Q2):4(Q3): 5(Q4):6(Q5):7(Q6):8(Q7).
STEP5	qos 802.1p-map <i>802.1p_list queue_value</i>  <b>Example:</b> FOS-3128(config)# qos 802.1p-map 0 0 FOS-3128(config)# qos 802.1p-map 1 1 FOS-3128(config)# qos 802.1p-map 3 2 FOS-3128(config)# qos 802.1p-map 5 3	In this example, it configures the P-Bit 0 with Queue Mapping to Q0, the P-Bits 1 with Queue Mapping to Q1, the P-Bits 3 with Queue Mapping to Q2, and the P-Bit 5 with Queue Mapping to Q3.
STEP6	interface <i>port_list</i>  <b>Example:</b> FOS-3128(config)# interface 1 FOS-3128(config-if-1)#	Specify the Port 1 that you would like to configure P-Bit.
STEP7	qos user-priority <i>P-Bit</i>  <b>Example:</b> FOS-3128(config-if-1)# qos user-priority 0	In this example, it configures P-Bit value as 0 for Port 1.
STEP8	exit  <b>Example:</b> FOS-3128(config-if-1)# exit FOS-3128(config)#	Return to the global configuration mode.
STEP9	interface <i>port_list</i>  <b>Example:</b> FOS-3128(config)# interface 2 FOS-3128(config-if-2)#	Specify the Port 2 that you would like to configure P-Bit.
STEP10	qos user-priority <i>P-Bit</i>  <b>Example:</b> FOS-3128(config-if-2)# qos user-priority 1	In this example, it configures P-Bit value as 1 for Port 2.
STEP11	exit  <b>Example:</b> FOS-3128(config-if-2)# exit FOS-3128(config)#	Return to the global configuration mode.

STEP12	<p>interface <i>port_list</i></p> <p><b>Example:</b> FOS-3128(config)# interface 3, 4 FOS-3128(config-if-3,4)#</p>	Specify the Port 3 and Port 4 that you would like to configure QoS Rate limit.
STEP13	<p>qos rate-limit ingress <i>limit_rate(kbps)</i></p> <p><b>Example:</b> FOS-3128(config-if-3,4)# qos rate-limit ingress 10000  OK !</p>	In this example, it configures Port 3 and Port 4 with 10M Ingress Rate.
STEP14	<p>qos rate-limit egress <i>limit_rate(kbps)</i></p> <p><b>Example:</b> FOS-3128(config-if-3,4)# qos rate-limit egress 10000  OK !</p>	In this example, it configures Port 3 and Port 4 with 10M Egress Rate.
STEP15	<p>qos user-priority <i>P-Bit</i></p> <p><b>Example:</b> FOS-3128(config-if-3,4)# qos user-priority 3</p>	In this example, it configures P-Bit value as 3 for Port 3 and Port 4.
STEP16	<p>exit</p> <p><b>Example:</b> FOS-3128(config-if-3,4)# exit FOS-3128(config)#</p>	Return to the global configuration mode.
STEP17	<p>interface <i>port_list</i></p> <p><b>Example:</b> FOS-3128(config)# interface 5 FOS-3128(config-if-5)#</p>	Specify the Port 5 that you would like to configure QoS Rate limit.
STEP18	<p>qos rate-limit ingress <i>limit_rate(kbps)</i></p> <p><b>Example:</b> FOS-3128(config-if-5)# qos rate-limit ingress 1000000 OK !</p>	In this example, it configures Port 5 with 1G Ingress Rate.
STEP19	<p>qos rate-limit egress <i>limit_rate(kbps)</i></p> <p><b>Example:</b> FOS-3128(config-if-5)# qos rate-limit egress 1000000  OK !</p>	In this example, it configures Port 5 with 1G Egress Rate.
STEP20	<p>qos user-priority <i>P-Bit</i></p> <p><b>Example:</b> FOS-3128(config-if-5)# qos user-priority 5</p>	In this example, it configures P-Bit value as 5 for Port 5.
STEP21	<p>exit</p> <p><b>Example:</b> FOS-3128(config-if-5)# exit FOS-3128(config)#</p>	Return to the global configuration mode.

STEP22	<b>exit</b>  <b>Example:</b> FOS-3128(config)# exit FOS-3128#	<b>Return to the Privileged mode.</b>
STEP23	<b>write</b>  <b>Example:</b> FOS-3128# write Save Config Succeeded!	<b>Save the running configuration into the startup configuration.</b>



After completing the QoS settings for your FOS-3128 switches, you can issue the commands listed below for checking your configuration

### Example 1,

**FOS-3128(config)# show qos**

```
=====
QoS Information
=====
```

```
QoS Mode   : 802.1p
Egress Mode : weight
Weight      : 1:2:3:4:5:6:7:8
```

Press Ctrl-C to exit or any key to continue!

```
Tag Priority
```

```
-----
0    Q0
1    Q1
2    Q0
3    Q2
4    Q0
5    Q3
6    Q0
7    Q0
```

Press Ctrl-C to exit or any key to continue!

```
DSCP Priority DSCP Priority DSCP Priority DSCP Priority
```

```
-----
0    Q0      1    Q0      2    Q0      3    Q0
4    Q0      5    Q0      6    Q0      7    Q0
8    Q0      9    Q0     10    Q0     11    Q0
12   Q0     13    Q0     14    Q0     15    Q0
16   Q0     17    Q0     18    Q0     19    Q0
20   Q0     21    Q0     22    Q0     23    Q0
24   Q0     25    Q0     26    Q0     27    Q0
28   Q0     29    Q0     30    Q0     31    Q0
```

Press Ctrl-C to exit or any key to continue!

```
32   Q0     33    Q0     34    Q0     35    Q0
36   Q0     37    Q0     38    Q0     39    Q0
40   Q0     41    Q0     42    Q0     43    Q0
44   Q0     45    Q0     46    Q0     47    Q0
48   Q0     49    Q0     50    Q0     51    Q0
52   Q0     53    Q0     54    Q0     55    Q0
56   Q0     57    Q0     58    Q0     59    Q0
60   Q0     61    Q0     62    Q0     63    Q0
```

## Example 2,

FOS-3128(config)# show vlan interface

```
=====
IEEE 802.1q Tag VLAN Interface :
=====
```

Dot1q-Tunnel EtherType : : 0x9100

Port	Access-vlan	User Priority	Port VLAN Mode	Trunk-vlan
1	1	0	access	1
2	1	1	access	1
3	1	3	access	1
4	1	3	access	1
5	1	5	access	1
6	1	0	access	1
7	1	0	access	1
8	1	0	access	1
9	1	0	access	1
10	1	0	access	1

Press Ctrl-C to exit or any key to continue!

11	1	0	access	1
12	1	0	access	1
13	1	0	access	1
14	1	0	access	1
15	1	0	access	1
16	1	0	access	1
17	1	0	access	1
18	1	0	access	1
19	1	0	access	1
20	1	0	access	1

Press Ctrl-C to exit or any key to continue!

21	1	0	access	1
22	1	0	access	1
23	1	0	access	1
24	1	0	access	1
25	1	0	access	1
26	1	0	access	1
27	1	0	access	1
28	1	0	access	1

FOS-3128(config)#

### Example 3,

#### FOS-3128(config)# show qos interface

```
=====
QoS port Information :
=====
Port          : 1
Ingress Rate Limiter : disable
Egress Rate Limiter : disable

Press Ctrl-C to exit or any key to continue!

Port          : 2
Ingress Rate Limiter : disable
Egress Rate Limiter : disable

Press Ctrl-C to exit or any key to continue!

Port          : 3
Ingress Rate Limiter : 10 Mbps
Egress Rate Limiter : 10 Mbps

Press Ctrl-C to exit or any key to continue!

Port          : 4
Ingress Rate Limiter : 10 Mbps
Egress Rate Limiter : 10 Mbps

Press Ctrl-C to exit or any key to continue!

Port          : 5
Ingress Rate Limiter : 1000 Mbps
Egress Rate Limiter : 1000 Mbps

Press Ctrl-C to exit or any key to continue!

Port          : 6
Ingress Rate Limiter : disable
Egress Rate Limiter : disable

Press Ctrl-C to exit or any key to continue!

      :  :
      :  :
      :  :

Port          : 28
Ingress Rate Limiter : disable
Egress Rate Limiter : disable

FOS-3128(config)#
```

## 2.6.19 Security Command

When a device on the network is malfunctioning or application programs are not well designed or properly configured, broadcast/unknown multicast/unknown unicast storms may occur, network performance may be degraded or, in the worst situation, a complete halt may happen. The Managed Switch allows users to set a threshold rate for broadcast/unknown multicast/unknown unicast traffic on a per port basis so as to protect network from broadcast/unknown multicast/unknown unicast storms. Any broadcast/unknown multicast/unknown unicast packets per second exceeding the specified value will then be dropped or port will be shutdown.

Port Isolation is used to set up port's communication availability that they can only communicate with a given "uplink". Please note that if the port isolation function is enabled, the Port-based VLAN will be invalid automatically.

As to Mac Limit function, it is to set number of threshold within which MAC address can be learned. After it reaches the threshold, any other incoming MAC address would be dropped or port would be shutdown until the recovery mechanism activates. Please note that mac address table will be erased if the Mac Limit function is enabled.

Besides, the Sticky MAC address function is also provided to keep the event that the packets with the same source MAC address are received by different ports from being taken place. In case this function of the specified port is enabled (the port is also known as the sticky MAC port), then, other ports of the switch cannot receive the packets with the same source MAC address learned by this sticky MAC port anymore. If other ports receive the packets with the same source MAC address again, these packets will be dropped by the switch.

Generally, any auto-learned MAC address from the switch will be a dynamic MAC address. Through this Sticky MAC address function, however, the MAC address learned by the sticky MAC port will automatically be turned into a static one in MAC address table. But, this kind of static MAC address is regarded as a "Sticky" type of MAC address, and it still does not write into the running configuration file. To transfer the MAC address type from "Sticky" into "Manual", and write it into the running configuration file, you may refer to [Section 4.4.6.2 "Static MAC Table Configuration"](#).

With the function of Port Linkup Delay, you are allowed to set up a period of time for postponing the specific port(s) to be active in the stage of the system initialization. As for the remaining ports of the switch, they will be normally activated and be able to learn the MAC address first.

Port Link Flap will notify the user the link-down and link-up alarm message of any port via SNMP trap and syslog when its port link flap times exceed the threshold. A port links down or links up, which will be considered as one time of this port's port link flap. Through this function, it will greatly help technicians in the network operations center (NOC) exactly know the last time when the port linked down and linked up, and easily find out the major causes of the network instability.

**Enable or disable broadcast/unknown multicast/unknown unicast storm control, port isolation, MAC Limit, Port Linkup Delay and Port Link Flap.**

Security command	Parameter	Description
Switch(config)# security delay time [0-1200]	[0-1200]	Specify the desired time the designated delay port(s) will delay to be activated. The allowable value is between 0 and 1200 seconds. "0" indicates "Disabled".
Switch(config)# security delay release-delay rule follow-delay-time		Configure the release delay rule as "follow-delay-time".

Switch(config)# security delay release-delay rule mac-limit		Configure the release delay rule as “mac-limit”.
Switch(config)# security link-flap notification threshold [1-20]	[1-20]	Specify the maximum times of the port link flap for sending the alarm trap and syslog message.  <b>Note: A port links down or links up, which will count as one time of this port's port link flap.</b>
Switch(config)# security mac-limit		Globally enable the MAC Limit function on the switch.
Switch(config)# security mac-limit notification threshold interval [120-86400]	[120-86400]	To set up the time interval of sending the alarm trap or system log if the number of source MAC address learned exceeds the limit continuously. The allowable value is between 120 and 86400 seconds.
Switch(config)# security port-isolation		Globally enable the port isolation function. If port isolation is set to enabled, the ports cannot communicate with each other.
Switch(config)# security port-isolation up-link-port [port_list]	[port_list]	Specify the port(s) as uplinks that are allowed to communicate with other ports.
Switch(config)# security storm-protection		Globally enable the storm control function.
Switch(config)# security storm-protection broadcast [1-1024k]	[1-1024k]	Specify the maximum broadcast packets per second (pps) to all ports. Any broadcast packets exceeding the specified threshold will then be dropped or port will be shutdown.  The packet rates that can be specified are listed below:  1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k, 1024k  NOTE: To view a list of allowable values that can be specified you can press “spacebar” and then followed by “?”. For example, “Switch(config)# security storm-protection broadcast ?”
Switch(config)# security storm-protection multicast [1-1024k]	[1-1024k]	Specify the maximum unknown multicast packets per second (pps) to all ports. Any unknown multicast packets exceeding the specified threshold will then be dropped or port will be shutdown.  The packet rates that can be specified are listed below:  1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k,

		1024k  <b>NOTE:</b> To view a list of allowable values that can be specified you can press “spacebar” and then followed by “?”. For example, “Switch(config)# security storm-protection multicast ?”
Switch(config)# security storm-protection unicast [1-1024k]	[1-1024k]	Specify the maximum unknown unicast packets per second (pps) to all ports. Any unknown unicast packets exceeding the specified threshold will then be dropped or port will be shutdown.  The packet rates that can be specified are listed below: 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k, 1024k  <b>NOTE:</b> To view a list of allowable values that can be specified you can press “spacebar” and then followed by “?”. For example, “Switch(config)# security storm-protection unicast ?”
Switch(config)# security storm-protection notification threshold interval [120-86400]	[120-86400]	To set up the time interval of sending the alarm trap or system log if broadcast/unknown multicast/unknown unicast packets flood continuously. The allowable value is between 120 and 86400 seconds.
<b>No command</b>		
Switch(config)# no security link-flap notification threshold		Reset the maximum times of the port link flap for sending the alarm trap and syslog message back to the default. (6 times)
Switch(config)# no security mac-limit		Globally disable MAC Limit function on the switch.
Switch(config)# no security mac-limit notification threshold interval		Reset the time interval of sending the alarm trap or system log back to the default if the number of source MAC address learned exceeds the limit continuously. (120 seconds)
Switch(config)# no security port-isolation		Disable port isolation function globally.
Switch(config)# no security port-isolation up-link-port [port_list]	[port_list]	Disable the specified port(s) as non-up-link-port.
Switch(config)# no security storm-protection broadcast		Disable broadcast storm control of all ports.
Switch(config)# no security storm-protection multicast		Disable multicast storm control of all ports.
Switch(config)# no security storm-protection unicast		Disable unicast storm control of all ports.

Switch(config)# no security storm-protection notification threshold interval		Reset the time interval of sending the alarm trap or system log back to the default if broadcast/unknown multicast/unknown unicast packets flood continuously. (120 seconds)
<b>Show command</b>		
Switch(config)# show security delay		Show the current delay port linkup configuration.
Switch(config)# show security link-flap		Show the current port link flap configuration for sending the alarm trap and syslog message.
Switch(config)# show security mac-limit		Show the current MAC Limit configuration and status of all ports.
Switch(config)# show security mac-limit [port_list]	[port_list]	Show the current MAC Limit configuration and status of specified port(s).
Switch(config)# show security port-isolation		Show the current port isolation configuration.
Switch(config)# show security storm-protection		Show the current global storm control configuration.
Switch(config)# show security storm-protection interface		Show the current storm control configuration and status of all ports.
Switch(config)# show security storm-protection interface [port_list]	[port_list]	Show the current storm control configuration and status of specified port(s).
<b>Examples of Security command</b>		
Switch(config)# security storm-protection broadcast 256k		Set the maximum broadcast packets per second (pps) to 256k for all ports. Any broadcast packets exceeding this specified threshold will then be dropped or port will be shutdown.
Switch(config)# security storm-protection multicast 128k		Set the maximum unknown multicast packets per second (pps) to 128k for all ports. Any unknown multicast packets exceeding this specified threshold will then be dropped or port will be shutdown.
Switch(config)# security storm-protection unicast 32k		Set the maximum unknown unicast packets per second (pps) to 32k for all ports. Any unknown unicast packets exceeding the specified threshold will then be dropped or port will be shutdown.

**Use “Interface” command to configure Mac Limiter settings, Sticky MAC address and the action to be taken when the MAC addresses learned exceeds the limit for security.**

<b>Security &amp; Interface command</b>	<b>Parameter</b>	<b>Description</b>
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# security delay		Specify the selected port(s) as the delay port for the port linkup delay.

Switch(config-if-POR-PORT)# security delay release-delay trigger		Specify the selected port(s) as the trigger port(s) for the port linkup delay.  <b>NOTE: The port(s) selected as the delay port cannot be the trigger port(s).</b>
Switch(config-if-POR-PORT)# security mac-limit		Enable MAC Limit function of the selected port(s).
Switch(config-if-POR-PORT)# security mac-limit action [drop   shutdown]	[drop   shutdown]	Specify the action that would be taken when the number of source MAC address learned exceeds the limit.  <b>Note: If the port acts as the uplink port, it is highly recommended NOT to configure this value as “Shutdown” when its MAC Limit is activated.</b>
Switch(config-if-POR-PORT)# security mac-limit maximum [1-50]	[1-50]	Specify the maximum number of source MAC address that can be learned for each of the selected port(s). This is to set number of threshold within which MAC address can be learned. After it reaches the threshold, any other incoming MAC address would be dropped or port would be shutdown until the recovery mechanism activates.  The valid range of number that can be configured is 1~50.
Switch(config-if-POR-PORT)# security mac-limit sticky		Enable the function of sticky MAC address on the selected port(s).
Switch(config-if-POR-PORT)# security mac-limit unlock		Unlock the selected port(s) that are locked because the number of MAC address learned exceeds the threshold and the port action is set as “Shutdown”.
Switch(config-if-POR-PORT)# security storm-protection broadcast [1-1024k]	[1-1024k]	Specify the maximum broadcast packets per second (pps) for the selected port(s). Any broadcast packets exceeding the specified threshold will then be dropped or the selected port(s) will be shutdown.  The packet rates that can be specified are listed below:  1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k, 1024k  NOTE: To view a list of allowable values that can be specified you can press “spacebar” and then followed by “?”. For example, “Switch(config-if-



		PORT-PORT)# security storm-protection broadcast ?”
Switch(config-if-PORT-PORT)# security storm-protection unknown-multicast [1-1024k]	[1-1024k]	<p>Specify the maximum unknown multicast packets per second (pps) for the selected port(s). Any unknown multicast packets exceeding the specified threshold will then be dropped or the selected port(s) will be shutdown.</p> <p>The packet rates that can be specified are listed below:</p> <p>1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k, 1024k</p> <p><b>NOTE:</b> To view a list of allowable values that can be specified you can press “spacebar” and then followed by “?”. For example, “Switch(config-if-PORT-PORT)# security storm-protection unknown-multicast ?”</p>
Switch(config-if-PORT-PORT)# security storm-protection unknown-unicast [1-1024k]	[1-1024k]	<p>Specify the maximum unknown unicast packets per second (pps) for the selected port(s). Any unknown unicast packets exceeding the specified threshold will then be dropped or the selected port(s) will be shutdown.</p> <p>The packet rates that can be specified are listed below:</p> <p>1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k, 1024k</p> <p><b>NOTE:</b> To view a list of allowable values that can be specified you can press “spacebar” and then followed by “?”. For example, “Switch(config-if-PORT-PORT)# security storm-protection unknown-unicast ?”</p>
Switch(config-if-PORT-PORT)# security storm-protection action [drop   shutdown]	[drop   shutdown]	<p>Either “Drop” or “Shutdown” two types of the action can be chosen. The selected action will be taken when the broadcast/unknown multicast/unknown unicast packets per second exceed the limit of Unknown Unicast Rate/ Unknown Multicast Rate/ Broadcast Rate.</p> <p><b>Note: If the port acts as the uplink port, it is highly recommended NOT to configure this value as</b></p>

		<b>“Shutdown” when its storm control is activated.</b>
Switch(config-if-PORT-PORT)# security storm-protection unlock		Unlock the selected port(s) that are locked because their current broadcast/unknown multicast/unknown unicast packets per second exceed the threshold and the port action is set as “Shutdown”.
<b>No command</b>		
Switch(config-if-PORT-PORT)# no security delay		Remove the selected port(s) from the delay port list.
Switch(config-if-PORT-PORT)# no security delay release-delay trigger		Remove the selected port(s) from the release delay trigger port list.
Switch(config-if-PORT-PORT)# no security mac-limit		Disable MAC Limit function of the selected port(s).
Switch(config-if-PORT-PORT)# no security mac-limit action		Reset the action that would be taken when the number of source MAC address learned exceeds the limit back to the default. (Drop)
Switch(config-if-PORT-PORT)# no security mac-limit maximum		Reset the maximum number of source MAC address that can be learned for each of the selected port(s) back to the default. (1)
Switch(config-if-PORT-PORT)# no security mac-limit sticky		Disable the function of sticky MAC address on the selected port(s).
Switch(config-if-PORT-PORT)# no security storm-protection action		Reset the action that would be taken when if broadcast/unknown multicast/unknown unicast packets per second exceeds the limit back to the default. (Drop)
Switch(config-if-PORT-PORT)# no security storm-protection broadcast		Disable broadcast storm control for the selected port(s).
Switch(config-if-PORT-PORT)# no security storm-protection unknown-multicast		Disable unknown multicast storm control for the selected port(s).
Switch(config-if-PORT-PORT)# no security storm-protection unknown-unicast		Disable unknown unicast storm control for the selected port(s).
<b>Examples of Security command</b>		
Switch(config-if-1-3)# security mac-limit		Enable Port 1~Port 3's MAC Limit function.
Switch(config-if-1-3)# security mac-limit maximum 50		Configure the maximum 50 sets of MAC address that can be learned for Port1~Port 3 respectively.
Switch(config-if-PORT-PORT)# security storm-protection broadcast 256k		Set the maximum broadcast packets per second (pps) to 256k. Any broadcast packets exceeding this specified threshold will then be dropped or the selected port(s) will be shutdown.

Switch(config-if-POR-PORT)# security storm-protection unknown-multicast 256k	Set the maximum unknown multicast packets per second (pps) to 256k. Any unknown multicast packets exceeding this specified threshold will then be dropped or the selected port(s) will be shutdown.
Switch(config-if-POR-PORT)# security storm-protection unknown-unicast 256k	Set the maximum unknown unicast packets per second (pps) to 256k. Any unknown unicast packets exceeding the specified threshold will then be dropped or the selected port(s) will be shutdown.

## 2.6.20 Sfp Command

**SFP Port Threshold Configuration** function not only displays all SFP ports' current temperature, voltage, TX power and RX power information but is capable of detecting whether these SFP ports are at normal status or not.

In the display of the above SFP-related information, you can decide one or all items to be shown at a time by assigning **All/Temperature/Voltage/TX power/RX power** parameter upon your requirements.

Once this function of the specific SFP port is set to "Enabled", the alarm message will be sent via trap and syslog in the event of abnormal situations, including temperature/voltage/TX power/RX power is over the configured **High** value or is under the configured **Low** value. A normal message will also be sent to notify the user when this SFP port's temperature/voltage/TX power/RX power higher or lower the configured threshold returns to the normal status. From these notification, the user can realize the real-time SFP status to prevent the disconnection and packets loss of any fiber ports from being taken place due to the occurrence of abnormal events.

SFP Threshold command	Parameter	Description
Switch(config)# sfp threshold		Globally enable the alarm notification of temperature/voltage/TX power/RX power for SFP ports of the Managed Switch.
Switch(config)# sfp threshold notification continuous-alarm		Enable the continuous alarm message sending function for SFP ports' temperature/voltage/TX power/RX power.
Switch(config)# sfp threshold notification interval [120-86400]	[120-86400]	Specify the time interval of sending SFP ports' temperature/voltage/TX power/RX power alarm message in seconds.
<b>No command</b>		
Switch(config)# no sfp threshold		Globally disable the alarm notification of temperature/voltage/TX power/RX power for SFP ports of the Managed Switch.
Switch(config)# no sfp threshold notification continuous-alarm		Disable the continuous alarm message sending function for SFP ports' temperature/voltage/TX power/RX power.
Switch(config)# no sfp threshold notification interval		Reset the time interval of sending SFP ports' temperature/voltage/TX power/RX power alarm message back to the default. (600 seconds).
<b>Show command</b>		
Switch(config)# show sfp threshold		Show SFP threshold configuration, all SFP ports' current temperature/voltage/TX power/RX power and their threshold information of these parameters.
Switch(config)# show sfp threshold [port_list]	[port_list]	Show SFP threshold configuration, the specific SFP ports' current temperature/voltage/TX power/RX power and their threshold information of these parameters.
Switch(config)# show sfp threshold rx-power		Show SFP threshold configuration, all SFP ports' current RX power and their threshold information of this parameter.

Switch(config)# show sfp threshold rx-power [port_list]	[port_list]	Show SFP threshold configuration, the specific SFP ports' current RX power and their threshold information of this parameter.
Switch(config)# show sfp threshold temperature		Show SFP threshold configuration, all SFP ports' current temperature and their threshold information of this parameter.
Switch(config)# show sfp threshold temperature [port_list]	[port_list]	Show SFP threshold configuration, the specific SFP ports' current temperature and their threshold information of this parameter.
Switch(config)# show sfp threshold tx-power		Show SFP threshold configuration, all SFP ports' current TX power and their threshold information of this parameter.
Switch(config)# show sfp threshold tx-power [port_list]	[port_list]	Show SFP threshold configuration, the specific SFP ports' current TX power and their threshold information of this parameter.
Switch(config)# show sfp threshold voltage		Show SFP threshold configuration, all SFP ports' current voltage and their threshold information of this parameter.
Switch(config)# show sfp threshold voltage [port_list]	[port_list]	Show SFP threshold configuration, the specific SFP ports' current voltage and their threshold information of this parameter.
<b>Example of SFP Threshold</b>		
Switch(config)# sfp threshold notification interval 300		Configure the time interval of sending SFP ports' temperature/voltage/TX power/RX power alarm message as 300 seconds. If their SFP threshold is enabled, the alarm message will be sent in 300 seconds when temperature/voltage/TX power/RX power is higher or lower the threshold.
Switch(config)# show sfp threshold 1-3		Display SFP Port 1~Port 3's current temperature/voltage/TX power/RX power and their threshold information of these parameters.

Use “Interface” command to configure the threshold of Temperature/Voltage/TX power/RX power for SFP ports.

SFP Threshold command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	
Switch(config-if-PORT-PORT)# sfp threshold rx-power high		Enable RX high power threshold for the selected port(s).
Switch(config-if-PORT-PORT)# sfp threshold rx-power high value [-400~100]	[-400~100]	Specify a value of RX high power for the selected port(s). (Unit: 1/10 dBm.)
Switch(config-if-PORT-PORT)# sfp threshold rx-power low		Enable RX low power threshold for the selected port(s).

Switch(config-if-POR- PORT)# sfp threshold rx- power low value [-400~100]	[-400~100]	Specify a value of RX low power for the selected port(s). (Unit: 1/10 dBm)
Switch(config-if-POR- PORT)# sfp threshold temperature high		Enable high temperature threshold for the selected port(s).
Switch(config-if-POR- PORT)# sfp threshold temperature high value [-400~1200]	[-400~1200]	Specify a value of high temperature for the selected port(s). (Unit: 1/10 degree centigrade)
Switch(config-if-POR- PORT)# sfp threshold temperature low		Enable low temperature threshold for the selected port(s).
Switch(config-if-POR- PORT)# sfp threshold temperature low value [-400~1200]	[-400~1200]	Specify a value of low temperature for the selected port(s). (Unit: 1/10 degree centigrade)
Switch(config-if-POR- PORT)# sfp threshold tx- power high		Enable TX high power threshold for the selected port(s).
Switch(config-if-POR- PORT)# sfp threshold tx- power high value [-300~100]	[-300~100]	Specify a value of TX high power for the selected port(s). (Unit: 1/10 dBm)
Switch(config-if-POR- PORT)# sfp threshold tx- power low		Enable TX low power threshold for the selected port(s).
Switch(config-if-POR- PORT)# sfp threshold tx- power low value [-300~100]	[-300~100]	Specify a value of TX low power for the selected port(s). (Unit: 1/10 dBm)
Switch(config-if-POR- PORT)# sfp threshold voltage high		Enable high voltage threshold for the selected port(s).
Switch(config-if-POR- PORT)# sfp threshold voltage high value [260~400]	[260~400]	Specify a value of high voltage for the selected port(s). (Unit: 1/100 V)
Switch(config-if-POR- PORT)# sfp threshold voltage low		Enable low voltage threshold for the selected port(s).
Switch(config-if-POR- PORT)# sfp threshold voltage low value [260~400]	[260~400]	Specify a value of low voltage for the selected port(s). (Unit: 1/100 V)

## 2.6.21 SNMP-Server Command

### 1. Create a SNMP community and set up detailed configurations for this community.

Snmp-server command	Parameter	Description
Switch(config)# snmp-server		Enable SNMP server function globally.
Switch(config)# snmp-server community [community]	[community]	Create/modify a SNMP community name. Up to 20 alphanumeric characters can be accepted.
Switch(config-community-NAME)# active		Enable the specified SNMP community account.
Switch(config-community-NAME)# description [Description]	[Description]	Enter the description for the specified SNMP community. Up to 35 alphanumeric characters can be accepted.
Switch(config-community-NAME)# level [admin   rw   ro]	[admin   rw   ro]	Specify the access privilege level for the specified SNMP account.  <b>admin:</b> Own the full-access right, including maintaining user account, system information, loading factory settings, etc..  <b>rw:</b> Read & Write access privilege. Own the partial-access right, unable to modify user account, system information and load factory settings.  <b>ro:</b> Allow to view only.
<b>No command</b>		
Switch(config)# no snmp-server		Disable SNMP function.
Switch(config)# no snmp-server community [community]	[community]	Delete the specified community.
Switch(config-community-NAME)# no active		Disable the specified SNMP community account.
Switch(config-community-NAME)# no description		Remove the description of SNMP community.
Switch(config-community-NAME)# no level		Reset the access privilege level back to the default. (Read Only)
<b>Show command</b>		
Switch(config)# show snmp-server		Show SNMP server configuration.
Switch(config)# show snmp-server community		Show SNMP server community configuration.
Switch(config)# show snmp-server community [community]		Show the specified SNMP server community's configuration.
Switch(config-community-NAME)# show		Show the selected community's settings.

Exit command	
Switch(config-community-NAME)# exit	Return to the global configuration mode.
Example of Snmp-server	
Switch(config)# snmp-server community mycomm	Create a new community “mycomm” and edit the details of this community account.
Switch(config-community-mycomm)# active	Activate the SNMP community “mycomm”.
Switch(config-community-mycomm)# description rddeptcomm	Add a description for “mycomm” community.
Switch(config-community-mycomm)# level admin	Set the access privilege level of “mycomm” community to admin (full-access privilege).

## 2. Set up a SNMP trap destination.

Trap-destination command	Parameter	Description
Switch(config)# snmp-server trap-destination [1-10]	[1-10]	Specify the index of SNMP trap destination you would like to modify. Up to 10 sets of SNMP trap destination can be set up.
Switch(config-trap-ID)# active		Enable the specified SNMP trap destination.
Switch(config-trap-ID)# community [community]	[community]	Enter the description for the specified trap destination.
Switch(config-trap-ID)# destination [A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	[A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	Specify SNMP server's IPv4/IPv6 address or domain name for the specified trap destination.
No command		
Switch(config)# no snmp-server trap-destination [1-10]	[1-10]	Reset the specified trap destination configuration back to the default.
Switch(config-trap-ID)# no active		Disable the specified SNMP trap destination.
Switch(config-trap-ID)# no community		Delete the description for the specified trap destination.
Switch(config-trap-ID)# no destination		Delete SNMP server's IPv4/IPv6 address or domain name for the specified trap destination.
Show command		
Switch(config)# show snmp-server trap-destination		Show all of SNMP trap destination configurations.
Switch(config)# show snmp-server trap-destination [1-10]	[1-10]	Show the specified SNMP trap destination configuration.
Switch(config-trap-ID)# show		Show the configuration of the selected trap destination.
Exit command		
Switch(config-trap-ID)# exit		Return to the global configuration mode.



Examples of Trap-destination	
Switch(config)# snmp-server trap-destination 1	Specify the trap destination 1 to do the modification.
Switch(config-trap-1)# active	Activate the trap destination ID 1.
Switch(config-trap-1)# community mycomm	Add the description “mycomm” to this trap destination.
Switch(config-trap-1)# destination 192.168.1.254	Set SNMP server’s IP address as “192.168.1.254” for this trap destination.

### 3. Set up SNMP trap types that will be sent.

Trap-type command	Parameter	Description
Switch(config)# snmp-server trap-type [all   auth-fail   auto-backup   case-fan   cold-start   cpu-load   cpu-temperature   fast-redundancy   mac-limit   port-link   port-link-flap   power-down   power-up   sfp-threshold   storm-control   system-up   warm-reload   warm-start   console-port-link]	[all   auth-fail   auto-backup   case-fan   cold-start   cpu-load   cpu-temperature   fast-redundancy   mac-limit   port-link   port-link-flap   power-down   power-up   sfp-threshold   storm-control   system-up   warm-reload   warm-start   console-port-link]	<p>Specify a trap type that will be sent when a certain situation occurs.</p> <p><b>all:</b> A trap will be sent when authentication fails, auto-backup succeeds or fails, FAN1/2 fails, the cold/warm starts of the Managed Switch, port link is up or down, cpu is overloaded, power failure occurs, console port link is up or down, and so on.</p> <p><b>auth-fail:</b> A trap will be sent when any unauthorized user attempts to login.</p> <p><b>auto-backup:</b> A trap will be sent when the auto backup succeeds or fails.</p> <p><b>case-fan:</b> A trap will be sent when FAN 1 or FAN 2 fails.</p> <p><b>cold-start:</b> A trap will be sent when the Managed Switch boots up.</p> <p><b>cpu-load:</b> A trap will be sent when the CPU is overloaded.</p> <p><b>cpu-temperature:</b> A trap will be sent when CPU temperature is over High Temperature Threshold value, CPU temperature returns to the normal status (at or under High Temperature Threshold value), CPU temperature exceeds the range of threshold (0~60 degrees centigrade), or the temperature sensor fails to detect CPU temperature.</p> <p><b>fast-redundancy:</b> A trap will be sent when any specified redundancy port in fast redundancy is link up/link down.</p>

		<p><b>mac-limit:</b> A trap will be sent when any port in which the Mac Limit function is enabled exceeds the specified source MAC address limit. And it will keep sending this trap upon the notification threshold interval setup of MAC Limit function once any port exceeds the specified source MAC address limit continuously.</p> <p><b>port-link:</b> A trap will be sent when the link is up or down.</p> <p><b>port-link-flap:</b> A trap will be sent when a port's port link flap exceeds the threshold.</p> <p><b>power-down:</b> A trap will be sent when the Managed Switch's power is down.</p> <p><b>power-up:</b> A trap will be sent when the system is ready after the cold start.</p> <p><b>sfp-threshold:</b> A trap will be sent when Temperature/Voltage/TX Power/RX Power of any SFP ports is over the configured <b>High</b> value, under the configured <b>Low</b> value, or these abnormal status returns to the normal status.</p> <p><b>storm-control:</b> A trap will be sent when broadcast/unknown multicast/unknown unicast packets flood. And it will keep sending this trap upon the notification threshold interval setup of Storm Control function once these packets flood continuously.</p> <p><b>system-up:</b> A trap will be sent when the system is ready after the warm start.</p> <p><b>warm-reload:</b> A trap will be sent when the system's rebooting is completed because the countdown of Up-Time expires and the current running-config is different from the start-up-config, or the retry times of Ping reached the limit after the consecutive pings failed.</p> <p><b>warm-start:</b> A trap will be sent when the Managed Switch restarts.</p> <p><b>console-port-link:</b> A trap will be sent when console port link up/link down occurs.</p>
--	--	--

No command		
Switch(config)# no snmp-server trap-type [all   auth-fail   auto-backup   case-fan   cold-start   cpu-load   cpu-temperature   fast-redundancy   mac-limit   port-link   port-link-flap   power-down   power-up   sfp-threshold   storm-control   system-up   warm-reload   warm-start   console-port-link]	[all   auth-fail   auto-backup   case-fan   cold-start   cpu-load   cpu-temperature   fast-redundancy   mac-limit   port-link   port-link-flap   power-down   power-up   sfp-threshold   storm-control   system-up   warm-reload   warm-start   console-port-link]	Specify a trap type that will not be sent when a certain situation occurs.
Show command		
Switch(config)# show snmp-server trap-type		Show the current enabled/disabled status of each type of trap.
Examples of Trap-type		
Switch(config)# snmp-server trap-type all		All types of SNMP traps will be sent.

#### 4. Set up detailed configurations for SNMPv3 USM User

Simple Network Management Protocol Version 3, SNMPv3 in short, features stronger security mechanism, including authentication and encryption that helps ensure that the message is from a valid source and scramble the content of a packet, to prevent from being learned by an unauthorized source.

**Note:** The SNMPv3 community user account is generated from “User Command” (See [Section 2.6.27](#))

Snmp-server command	Parameter	Description
Switch(config)# snmp-server user [user_name]	[user_name]	Modify an existing username generated in CLI of “User Command” for a SNMPv3 user.
Switch (config-v3-user-user_name)# authentication [md5   sha]	[md5   sha]	Specify the authentication method for the specified SNMPv3 user.  <b>md5(message-digest algorithm):</b> A widely used <a href="#">cryptographic hash function</a> producing a 128-bit (16-byte) <a href="#">hash value</a> , typically expressed in text format as a 32 digit <a href="#">hexadecimal</a> number.

		<b>sha(Secure Hash Algorithm):</b> A 160-bit hash function which resembles the said <a href="#">MD5</a> algorithm.
Switch (config-v3-user-user_name)# authentication password [password]	[password]	Specify the authentication password for the specified SNMPv3 user. Up to 20 alphanumeric characters can be accepted.
Switch (config-v3-user-user_name)# private [des]	[des]	Specify the method to ensure confidentiality of data.  <b>des(data encryption standard):</b> An algorithm to encrypt critical information such as message text message signatures...etc.
Switch (config-v3-user-user_name)# private password [password]	[password]	Specify the private password for the specified SNMPv3 user. Up to 20 alphanumeric characters can be accepted.
<b>No Command</b>		
Switch (config-v3-user-user_name)# no authentication		Disable the authentication function for the specified SNMPv3 user.
Switch (config-v3-user-user_name)# no authentication password		Delete the configured authentication password.
Switch (config-v3-user-user_name)# no private		Disable data encryption function.
Switch (config-v3-community- user_name)# no private password		Delete the configured private password.
<b>Show Command</b>		
Switch(config)# show snmp-server user		Show SNMPv3 user configuration.
Switch(config)# show snmp-server user [user_name]		Show the specified SNMPv3 user configuration.
Switch(config-v3-user- user_name)# show		Show the specified SNMPv3 user configuration.

A combination of a security event as below indicates which security mechanism is used when handling an SNMP packet.

Authentication	Private	Result
None	None	Uses a username match for authentication
Message Digest Algorithm(MD5) or Secure Hash Algorithm(SHA)	None	Enables authentication based on the Hashed Message Authentication Code(HMAC)-MD5 or HMAC-SHA algorithms.
MD5 or SHA	Data Encryption Standard(DES)	Enables authentication based on the Hashed Message Authentication Code(HMAC)-MD5 or HMAC-SHA algorithms. What's more, enables DES 56-bit encryption based on the Cipher Block Chaining (CBC)-DES standard.

## 2.6.22 Spanning-tree Command

The Spanning Tree Protocol (STP), defined in the IEEE Standard 802.1D, creates a spanning tree within a mesh network of connected layer-2 bridges (typically Ethernet switches) and disables the links which are not part of that tree, leaving a single active path between any two network nodes.

Multiple active paths between network nodes cause a bridge loop. Bridge loops create several problems. First, the MAC address table used by the switch or bridge can fail, since the same MAC addresses (and hence the same network hosts) are seen on multiple ports. Second, a broadcast storm occurs. This is caused by broadcast packets being forwarded in an endless loop between switches. A broadcast storm can consume all available CPU resources and bandwidth.

Spanning tree allows a network design to include spare (redundant) links to provide automatic backup paths if an active link fails, without the danger of bridge loops, or the need for manually enabling/disabling these backup links.

To provide faster spanning tree convergence after a topology change, an evolution of the Spanning Tree Protocol: Rapid Spanning Tree Protocol (RSTP), introduced by IEEE with document 802.1w. RSTP is a refinement of STP; therefore, it shares most of its basic operation characteristics. This essentially creates a cascading effect away from the root bridge where each designated bridge proposes to its neighbors to determine if it can make a rapid transition. This is one of the major elements which allow RSTP to achieve faster convergence times than STP.

Spanning-tree command	Parameter	Description
Switch(config)# spanning-tree aggregated-port		Enable Spanning Tree Protocol function on aggregated ports.
Switch(config)# spanning-tree aggregated-port cost [0-200000000]	[0-200000000]	Specify aggregated ports' path cost.
Switch(config)# spanning-tree aggregated-port priority [0-15]	[0-15]	Specify aggregated ports' priority.  <b>0=0, 1=16, 2=32, 3=48, 4=64, 5=80 6=96, 7=112, 8=128, 9=144, 10=160 11=176, 12=192, 13=208, 14=224, 15=240</b>
Switch(config)# spanning-tree aggregated-port edge		Enable aggregated ports to shift to forwarding state when the link is up.  If you know a port is directly connected to an end device (that doesn't support RSTP) then set it as an edge port to ensure maximum performance. This will tell the switch to immediately start forwarding traffic on the port and not bother trying to establish a RSTP connection. Otherwise, turn it off.
Switch(config)# spanning-tree aggregated-port p2p [forced_true   forced_false   auto]	[forced_true   forced_false   auto]	Set the aggregated ports to point to point ports (forced_true), non-point to point ports (forced_false) or allow the Managed Switch to detect point to point status automatically (auto). By default, aggregated ports are set to non-point to point ports (forced_false).

Switch(config)# spanning-tree delay-time [4-30]	[4-30]	Specify the forward delay time value in seconds. The allowable value is between 4 and 30 seconds.
Switch(config)# spanning-tree hello-time [1-10]	[1-10]	Specify the hello interval value in seconds. The allowable value is between 1 and 10 seconds.
Switch(config)# spanning-tree max-age [6-200]	[6-200]	Specify the maximum age time value in seconds. The allowable value is between 6 and 200 seconds.
Switch(config)# spanning-tree priority [0-15]	[0-15]	Specify a priority value on a per switch basis. The allowable value is between 0 and 15.  <b>0=0, 1=4096, 2=8192, 3=12288, 4=16384, 5=20480, 6=24576, 7=28672, 8=32768, 9=36864, 10=40960, 11=45056, 12=49152, 13=53248, 14=57344, 15=61440</b>
Switch(config)# spanning-tree version [compatible   normal]	[compatible   normal]	Set up RSTP version.  “ <b>compatible</b> ” means that the Managed Switch is compatible with STP.  “ <b>normal</b> ” means that the Managed Switch uses RSTP.
<b>No command</b>		
Switch(config)# no spanning-tree aggregated-port		Disable STP on aggregated ports.
Switch(config)# no spanning-tree aggregated-port cost		Reset aggregated ports' cost back to the default.
Switch(config)# no spanning-tree aggregated-port priority		Reset aggregated ports' priority back to the default.
Switch(config)# no spanning-tree aggregated-port edge		Disable aggregated ports' edge ports status.
Switch(config)# no spanning-tree aggregated-port p2p		Reset aggregated ports back to non-point to point ports (forced_ false).
Switch(config)# no spanning-tree delay-time		Reset the Forward Delay time back to the default.
Switch(config)# no spanning-tree hello-time		Reset the Hello Time back to the default.
Switch(config)# no spanning-tree max-age		Reset the Maximum Age back to the default.
Switch(config)# no spanning-tree priority		Reset the priority value on a per switch basis back to the default.
Switch(config)# no spanning-tree version		Reset the RSTP version back to the default.
<b>Show command</b>		
Switch(config)# show spanning-tree		Show RSTP settings on the per switch basis.
Switch(config)# show spanning-tree aggregated-port		Show RSTP settings on aggregated ports.

Switch(config)# show spanning-tree interface		Show each interface's RSTP information, including port state, path cost, priority, edge port state, and p2p port state.
Switch(config)# show spanning-tree interface [port_list]	[port_list]	Show the specified interfaces' RSTP information, including port state, path cost, priority, edge port state, and p2p port state.
Switch(config)# show spanning-tree statistic		Show each interface and each link aggregation group's statistics information, including the total RSTP packets received, RSTP packets transmitted, STP packets received, STP packets transmitted, TCN (Topology Change Notification) packets received, TCN packets transmitted, illegal packets received, and unknown packets received.
Switch(config)# show spanning-tree statistic [port_list   llag]	[port_list   llag]	Show the specified interfaces or link aggregation groups' statistics information, including the total RSTP packets received, RSTP packets transmitted, STP packets received, STP packets transmitted, TCN (Topology Change Notification) packets received, TCN packets transmitted, illegal packets received, and unknown packets received.
Switch(config)# show spanning-tree status		Show the current RSTP port status.
Switch(config)# show spanning-tree status [port_list   llag]	[port_list   llag]	Show the specified interfaces or link aggregation groups' status.
Switch(config)# show spanning-tree overview		Show the current root-related information.
Examples of Spanning-tree command		Description
Switch(config)# spanning-tree aggregated-port		Enable Spanning Tree on aggregated ports.
Switch(config)# spanning-tree aggregated-port cost 100		Set the aggregated ports' cost to 100.
Switch(config)# spanning-tree aggregated-port priority 0		Set the aggregated ports' priority to 0
Switch(config)# spanning-tree aggregated-port edge		Set the aggregated ports to edge ports.
Switch(config)# spanning-tree aggregated-port p2p forced_true		Set the aggregated ports to P2P ports.
Switch(config)# spanning-tree delay-time 10		Set the Forward Delay time value to 10 seconds.
Switch(config)# spanning-tree hello-time 2		Set the Hello Time value to 2 seconds.
Switch(config)# spanning-tree max-age 15		Set the Maximum Age value to 15 seconds.


Use “Interface” command to configure a group of ports’ Spanning Tree settings.

Spanning tree & Interface command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# spanning-tree		Enable spanning-tree protocol on the selected interfaces.
Switch(config-if-PORT-PORT)# spanning-tree cost [0-200000000]	[0-200000000]	Specify the path cost value on the selected interfaces.
Switch(config-if-PORT-PORT)# spanning-tree priority [0-15]	[0-15]	Specify priority value on the selected interfaces.  <b>0=0, 1=16, 2=32, 3=48, 4=64 5=80, 6=96, 7=112, 8=128 9=144, 10=160, 11=176,12=192 13=208, 14=224, 15=240</b>
Switch(config-if-PORT-PORT)# spanning-tree edge		Set the selected interfaces to edge ports.
Switch(config-if-PORT-PORT)# spanning-tree p2p [forced_true   forced_fasle   auto]	[forced_true   forced_fasle   auto]	Set the selected interfaces to non-point to point ports (forced_false) or allow the Managed Switch to detect point to point status automatically (auto). By default, physical ports are set to point to point ports (forced_true).
<b>No command</b>		
Switch(config-if-PORT-PORT)# no spanning-tree		Disable spanning-tree protocol on the selected interfaces.
Switch(config-if-PORT-PORT)# no spanning-tree cost		Reset the cost value back to the default.
Switch(config-if-PORT-PORT)# no spanning-tree priority		Reset the priority value back to the default.
Switch(config-if-PORT-PORT)# no spanning-tree edge		Reset the selected interfaces back to non-edge ports.
Switch(config-if-PORT-PORT)# no spanning-tree p2p		Reset the selected interfaces back to point to point ports (forced_true).
<b>Show command</b>		
Switch(config)# show spanning-tree		Show RSTP settings on the per switch basis.
Switch(config)# show spanning-tree interface		Show each interface’s RSTP information, including port state, path cost, priority, edge port state, and p2p port state.
Switch(config)# show spanning-tree interface [port_list]	[port_list]	Show the selected interfaces’ RSTP information, including port state, path cost, priority, edge port state, and p2p port state.
Switch(config)# show spanning-tree statistic		Show each interface and each link aggregation group’s statistics



		information, including the total RSTP packets received, RSTP packets transmitted, STP packets received, STP packets transmitted, TCN (Topology Change Notification) packets received, TCN packets transmitted, illegal packets received, and unknown packets received.
Switch(config)# show spanning-tree statistic [port_list   llag]	[port_list   llag]	Show the selected interfaces or link aggregation groups' statistics information, including the total RSTP packets received, RSTP packets transmitted, STP packets received, STP packets transmitted, TCN (Topology Change Notification) packets received, TCN packets transmitted, illegal packets received, and unknown packets received.
Switch(config)# show spanning-tree status		Show the current RSTP port status.
Switch(config)# show spanning-tree status [port_list   llag]	[port_list   llag]	Show the selected interfaces or link aggregation groups' status.
Switch(config)# show spanning-tree overview		Show the current root-related information.

For RSTP configuration via CLI, we take the following ring network topology composed of 3 sets of FOS-3128 Managed Switches, including Switch A, Switch B and Switch C for example to let the users have a clear understanding of these RSTP commands. Under this network environment, Switch A, Switch B and Switch C will be configured as Table 2-2, and the “Root Switch” will automatically be determined by this network.

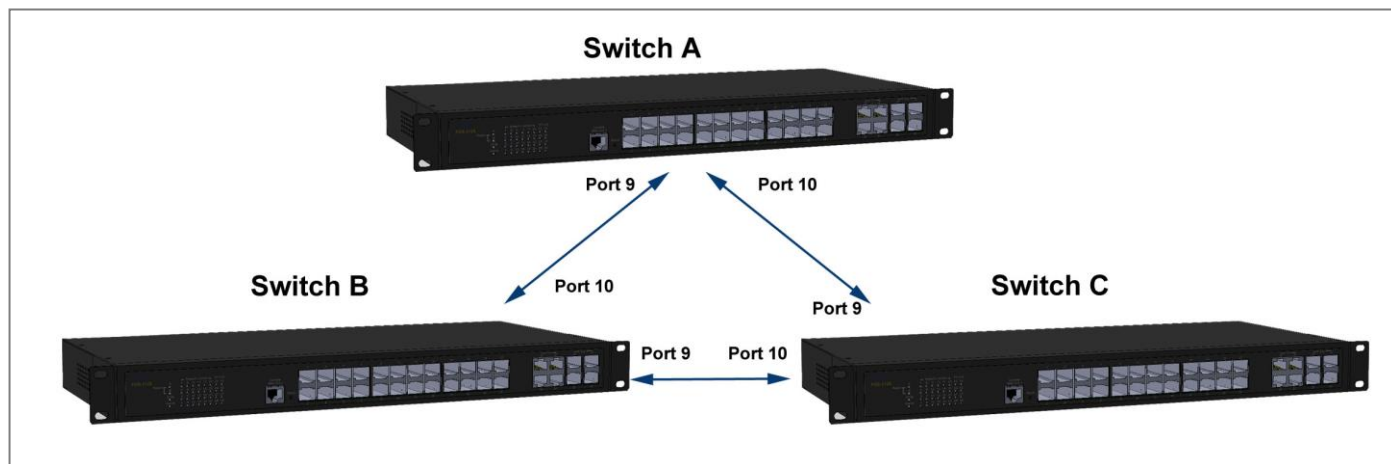

Switch	System Priority	Max Age (Secs)	Hello Time (Secs)	Forward Delay (Secs)	Force Version	State	Path Cost	Priority	Edge	P2P
A	4096	6	1	4	Normal	9,10	default	default	default	default
B	4096	6	1	4	Normal	9,10	default	default	default	default
C	4096	6	1	4	Normal	9,10	default	default	default	default

Table 2-2

Below is the complete CLI commands applied to Switch A. Also issue the same commands to Switch B and Switch C accordingly.

Command		Purpose
STEP1	configure  <b>Example:</b> FOS-3128# config FOS-3128(config)#	Enter the global configuration mode.
STEP2	spanning-tree priority <i>system_priority</i>  <b>Example:</b> FOS-3128(config)# spanning-tree priority 1 OK !	In this example, it configures the System Priority of Switch A as “1”. It means the value of the real priority is 4096.
STEP3	spanning-tree max-age <i>max_age_time</i>  <b>Example:</b> FOS-3128(config)# spanning-tree max-age 6 OK !	In this example, it configures the Max. Age Time of Switch A as “6”.
STEP4	spanning-tree hello-time <i>hello_interval</i>  <b>Example:</b> FOS-3128(config)# spanning-tree hello-time 1 OK !	In this example, it configures the Hello Time of Switch A as “1”.

STEP5	spanning-tree delay-time <i>forward_delay_time</i>  <b>Example:</b> FOS-3128(config)# spanning-tree delay-time 4 OK !	In this example, it configures the Forward Delay Time of Switch A as 4.
STEP6	spanning-tree version <i>stp_version</i>  <b>Example:</b> FOS-3128(config)# spanning-tree version normal OK !	In this example, it configures the STP Version of Switch A as "Normal".
STEP7	interface <i>port_list</i>  <b>Example:</b> FOS-3128(config)# interface 9-10 FOS-3128(config-if-9,10)#	Specify the Port 9 and Port 10 that you would like to configure to RSTP.
STEP8	spanning-tree  <b>Example:</b> FOS-3128(config-if-9,10)# spanning-tree OK !	Enable spanning tree protocol on Port 9 and Port 10.
STEP9	spanning-tree cost <i>path_cost</i>  <b>Example:</b> FOS-3128(config-if-9,10)# spanning-tree cost 0 OK !	In this example, it configure the port path cost for Port 9 and Port 10 as 0.
STEP10	spanning-tree priority <i>bridge_priority</i>  <b>Example:</b> FOS-3128(config-if-9,10)# spanning-tree priority 0 OK !	In this example, it configure the port priority for Port 9 and Port 10 as 0. It means the value of the real priority is "0".
STEP11	spanning-tree edge  <b>Example:</b> FOS-3128(config-if-9,10)# no spanning-tree edge OK !	In this example, it configure Port 9 and Port 10 as the non-edge ports.
STEP12	spanning-tree p2p <i>type</i>  <b>Example:</b> FOS-3128(config-if-9,10)# spanning-tree p2p forced_true OK !	In this example, it configures the type of Port 9 and Port 10 as point to point ports.
STEP13	exit  <b>Example:</b> FOS-3128(config-if-9,10)# exit FOS-3128(config)#	Return to the global configuration mode.
STEP14	exit  <b>Example:</b> FOS-3128(config)# exit FOS-3128#	Return to the Privileged mode.
STEP15	write  <b>Example:</b> FOS-3128# write Save Config Succeeded!	Save the running configuration into the startup configuration.

After completing the RSTP Switch settings for your FOS-3128 switches, you can issue the commands listed below for checking your configuration

**Example 1,**

**FOS-3128(config)# show spanning-tree**

```
=====
RSTP Switch Information
=====
System Priority : 4096
Max Age       : 6
Hello Time    : 1
Forward Delay : 4
Force Version : normal

FOS-3128(config)#
```

**Example 2,**

**FOS-3128(config)# show spanning-tree aggregated-port**

```
=====
RSTP Aggregated Port Information
=====
Aggregated State      : disable
Aggregated Path Cost : 1
Aggregated Priority    : 16
Aggregated Edge       : disable
Aggregated Point2point : forced-false

FOS-3128(config)#
```

### Example 3,

#### FOS-3128(config)# show spanning-tree interface

```
=====
RSTP Port Information
=====
Port  State    Path-Cost  Priority  Edge    Point2point
-----
1     disable    0          128      disable forced-true
2     disable    0          128      disable forced-true
3     disable    0          128      disable forced-true
4     disable    0          128      disable forced-true
5     disable    0          128      disable forced-true
6     disable    0          128      disable forced-true
7     disable    0          128      disable forced-true
8     disable    0          128      disable forced-true

Press Ctrl-C to exit or any key to continue!

9     enable    0          0        disable forced-true
10    enable    0          0        disable forced-true
11    disable    0          128      disable forced-true
12    disable    0          128      disable forced-true

      :      :
      :      :
      :      :

27    disable    0          128      disable forced-true
28    disable    0          128      disable forced-true

FOS-3128(config)#
```

### Example 4,

#### FOS-3128(config)# show spanning-tree overview

```
=====
RSTP overview
=====

=====
Bridge ID   : 4097:00-06-19-12-a7-b0
Max Age     : 6
Hello Time  : 1
Fwd Delay  : 4
Topology    : Steady
Root ID     : 4097:00-06-19-12-a7-b0
Root Port   : 0

FOS-3128(config)#
```

Example 5,

FOS-3128(config)# show spanning-tree statistic

```
=====
RSTP Port Statistics
=====
Port  Rx RSTP  Tx RSTP  Rx STP  Tx STP  Rx TCN  Tx TCN  Rx Ill.  Rx Unk
-----
1      0        0        0        0        0        0        0        0        0
2      0        0        0        0        0        0        0        0        0
3      0        0        0        0        0        0        0        0        0
4      0        0        0        0        0        0        0        0        0
5      0        0        0        0        0        0        0        0        0
6      0        0        0        0        0        0        0        0        0
7      0        0        0        0        0        0        0        0        0
8      0        0        0        0        0        0        0        0        0

Press Ctrl-C to exit or any key to continue!

9      0        0        0        0        0        0        0        0        0
10     0        0        0        0        0        0        0        0        0

      :      :
      :      :
      :      :

27     0        0        0        0        0        0        0        0        0
28     0        0        0        0        0        0        0        0        0

LLAG1 0        0        0        0        0        0        0        0        0
LLAG2 0        0        0        0        0        0        0        0        0
LLAG3 0        0        0        0        0        0        0        0        0
LLAG4 0        0        0        0        0        0        0        0        0
LLAG5 0        0        0        0        0        0        0        0        0

      :      :
      :      :
      :      :

LLAG13 0        0        0        0        0        0        0        0        0
LLAG14 0        0        0        0        0        0        0        0        0

FOS-3128(config)#
```

## Example 6,

### FOS-3128(config)# show spanning-tree status

```

=====
RSTP Port Status
=====

```

Port	PathCost	Edge Port	P2p Port	Protocol	Role	Port State
1	0	no	yes	RSTP	Non-STP	Non-STP
2	0	no	yes	RSTP	Non-STP	Non-STP
3	0	no	yes	RSTP	Non-STP	Non-STP
4	0	no	yes	RSTP	Non-STP	Non-STP
5	0	no	yes	RSTP	Non-STP	Non-STP
6	0	no	yes	RSTP	Non-STP	Non-STP
7	0	no	yes	RSTP	Non-STP	Non-STP
8	0	no	yes	RSTP	Non-STP	Non-STP
Press Ctrl-C to exit or any key to continue!						
9	2000000	no	yes	RSTP	Disable	Disable
10	20000	no	yes	RSTP	Designated	Forwarding
				:	:	
				:	:	
				:	:	
27	0	no	yes	RSTP	Non-STP	Non-STP
28	0	no	yes	RSTP	Non-STP	Non-STP
LLAG1	0	no	no	RSTP	Non-STP	Non-STP
LLAG2	0	no	no	RSTP	Non-STP	Non-STP
LLAG3	0	no	no	RSTP	Non-STP	Non-STP
LLAG4	0	no	no	RSTP	Non-STP	Non-STP
LLAG5	0	no	no	RSTP	Non-STP	Non-STP
				:	:	
				:	:	
				:	:	
LLAG13	0	no	no	RSTP	Non-STP	Non-STP
LLAG14	0	no	no	RSTP	Non-STP	Non-STP

FOS-3128(config)#

## 2.6.23 Switch Command

Switch command	Parameter	Description
Switch(config)# switch bpdv 00-0F [permit]	[permit]	Permit packets from the address ranging from 0180C2000000 to 0180C200000F.
Switch(config)# switch bpdv 20-2F [permit]	[permit]	Permit packets from the address ranging from 0180C2000020 to 0180C200002F.
Switch(config)# switch bpdv 10 [permit]	[permit]	Permit packets from the address 0180C2000010.
Switch(config)# switch mtu [1518-9600]	[1518-9600]	Specify the maximum frame size in bytes. The allowable MTU value is between 1518 and 9600 bytes.
Switch(config)# switch statistics polling port [1-28]	[1-28]	Specify the number of ports for data acquisition in each polling.
Switch(config)# switch statistics polling interval [1-600]	[1-600]	Specify the time interval between each polling. (Unit:1/10 second)
<b>No command</b>		
Switch(config)# no switch bpdv 00-0F		Undo permit packets from the address ranging from 0180C2000000 to 0180C200000F.
Switch(config)# no switch bpdv 20-2F		Undo permit packets from the address ranging from 0180C2000020 to 0180C200002F.
Switch(config)# no switch bpdv 10		Undo permit packets from the address 0180C2000010.
Switch(config)# no switch mtu		Reset MTU size back to the default. (9600 bytes)
Switch(config)# no switch statistics polling port		Reset the number of ports for data acquisition in each polling back to the default. (10 ports)
Switch(config)# no switch statistics polling interval		Reset the time interval between each polling back to the default. (60 in 1/10 seconds)
<b>Show command</b>		
Switch(config)# show switch bpdv		Show the current BPDU configuration.
Switch(config)# show switch mtu		Show the current the maximum frame size configuration.
Switch(config)# show switch statistics		Show the current configuration of polling port number and time interval between each polling.



**Examples of Switch command**

Switch(config)# switch bpdu 00-0F permit

Permit packets from the address ranging from 0180C2000000 to 0180C200000F.

Switch(config)# switch bpdu 20-2F permit

Permit packets from the address ranging from 0180C2000020 to 0180C200002F.

Switch(config)# switch bpdu 10 permit

Permit packets from the address 0180C2000010.

Switch(config)# switch mtu 9600

Set the maximum transmission unit to 9600 bytes.

## 2.6.24 Switch-info Command

1. Set up the Managed Switch's basic information, including company name, hostname, system name, etc..

Switch-info Command	Parameter	Description
Switch(config)# switch-info company-name [company_name]	[company_name]	Enter a company name, up to 55 alphanumeric characters, for this Managed Switch.
Switch(config)# switch-info cpu-loading-threshold [10-3000]	[10-3000] (Unit: 1/100)	Specify CPU loading threshold.
Switch(config)# switch-info cpu-temperature notification continuous-alarm		Enable the continuous alarm message sending function for CPU temperature of the system.
Switch(config)# switch-info cpu-temperature notification threshold [0-60]	[0-60]	Specify a value as CPU temperature threshold (Valid Range: 0~60 degrees centigrade).
Switch(config)# switch-info cpu-temperature notification interval [120-86400]	[120-86400]	Specify the time interval of sending cpu-temperature alarm message in seconds.
Switch(config)# switch-info dhcp-vendor-id [dhcp_vendor_id]	[dhcp_vendor_id]	Enter the user-defined DHCP vendor ID, and up to 55 alphanumeric characters can be accepted. Please make sure you have an exact DHCP Vendor ID with the value specified in "vendor-classes" in your dhcpd.conf file. For detailed information, see <a href="#">Appendix B</a> .
Switch(config)# switch-info host-name [host_name]	[host_name]	Enter a new hostname, up to 30 alphanumeric characters, for this Managed Switch. By default, the hostname prompt shows the model name of this Managed Switch. You can change the factory-assigned hostname prompt to the one that is easy for you to identify during network configuration and maintenance.
Switch(config)# switch-info system-contact [sys_contact]	[sys_contact]	Enter the contact information, up to 55 alphanumeric characters, for this Managed switch.
Switch(config)# switch-info system-location [sys_location]	[sys_location]	Enter a brief description of the Managed Switch location, up to 55 alphanumeric characters, for this Managed Switch. Like the name, the location is for reference only, for example, "13th Floor".
Switch(config)# switch-info system-name [sys_name]	[sys_name]	Enter a unique name, up to 55 alphanumeric characters, for this Managed Switch. Use a descriptive name to identify the Managed Switch in relation to your network, for example, "Backbone 1". This name is mainly used for reference only.

<b>No command</b>	
Switch(config)# no switch-info company-name	Reset the entered company name back to the default.
Switch(config)# no switch-info cpu-loading-threshold	Reset CPU loading threshold back to the default.
Switch(config)# no switch-info cpu-temperature notification continuous-alarm	Disable the continuous alarm message sending function for CPU temperature of the system.
Switch(config)# no switch-info cpu-temperature notification threshold	Reset CPU temperature threshold back to the default. (40 degrees centigrade)
Switch(config)# no switch-info cpu-temperature notification interval	Reset the time interval of sending cpu-temperature alarm message back to the default. (600 seconds)
Switch(config)# no switch-info dhcp-vendor-id	Reset the entered DHCP vendor ID information back to the default.
Switch(config)# no switch-info system-contact	Reset the entered system contact information back to the default.
Switch(config)# no switch-info system-location	Reset the entered system location information back to the default.
Switch(config)# no switch-info system-name	Reset the entered system name information back to the default.
Switch(config)# no switch-info host-name	Reset the hostname back to the default.
<b>Show command</b>	
Switch(config)# show switch-info	Show the switch-related information including company name, system contact, system location, system name, model name, firmware version and so on.
Switch(config)# show switch-info cpu-mem-statistics	Show the current CPU & memory usage rate of the switch.
Switch(config)# show switch-info cpu-temperature	Show the current cpu-temperature alarm notification configuration and CPU temperature status.
<b>Examples of Switch-info</b>	
Switch(config)# switch-info company-name telecomxyz	Set the company name to “telecomxyz”.
Switch(config)# switch-info system-contact info@company.com	Set the system contact field to “info@compnay.com”.
Switch(config)# switch-info system-location 13thfloor	Set the system location field to “13thfloor”.
Switch(config)# switch-info system-name backbone1	Set the system name field to “backbone1”.
Switch(config)# switch-info host-name edgswitch10	Change the Managed Switch’s hostname into “edgswitch10”.

## 2.6.25 Syslog Command

Syslog command	Parameter	Description
Switch(config)# syslog		Enable the system log function.
Switch(config)# syslog facility [0-7]	[0-7]	Specify a facility code (Local 0~Local 7) to a specific device for classifying the syslog message provided by different devices.
Switch(config)# syslog logging-type terminal-history		Enable Terminal-history log function.
Switch(config)# syslog server1 [A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	[A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	Specify the primary system log server's IPv4/IPv6 address or domain name.
Switch(config)# syslog server2 [A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	[A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	Specify the secondary system log server's IPv4/IPv6 address or domain name.
Switch(config)# syslog server3 [A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	[A.B.C.D   A:B:C:D:E:F:G:H   Domain Name]	Specify the third system log server's IPv4/IPv6 address or domain name.
<b>No command</b>		
Switch(config)# no syslog		Disable System log function.
Switch(config)# no syslog facility		Reset the facility code back to the default. (Local 0)
Switch(config)# no syslog logging-type terminal-history		Disable Terminal-history log function.
Switch(config)# no syslog server1		Delete the primary system log server IPv4/IPv6 address or domain name.
Switch(config)# no syslog server2		Delete the secondary system log server IPv4/IPv6 address or domain name.
Switch(config)# no syslog server3		Delete the third system log server IPv4/IPv6 address or domain name.
<b>Show command</b>		
Switch(config)# show syslog		Show the current system log configuration.
<b>Examples of Syslog command</b>		
Switch(config)# syslog		Enable System log function.
Switch(config)# syslog server1 192.180.2.1		Set the primary system log server IP address to 192.168.2.1.
Switch(config)# syslog server2 192.168.2.2		Set the secondary system log server IP address to 192.168.2.2.
Switch(config)# syslog server3 192.168.2.3		Set the third system log server IP address to 192.168.2.3.

## 2.6.26 Terminal Length Command

Command	Parameter	Description
Switch(config)# terminal length [0-512]	[0-512]	Specify the number of event lines that will show up each time on the screen for “show running-config”, “show default-config” and “show start-up-config” commands. (“0” stands for no pausing.)
<b>No Command</b>		
Switch(config)# no terminal length		Reset terminal length back to the default (20).
<b>Show Command</b>		
Switch(config)# show terminal		Show the current configuration of terminal length.

## 2.6.27 User Command

### 1. Create a new login account.

User command	Parameter	Description
Switch(config)# user password-encryption md5		Enable MD5(Message-Digest Algorithm). It is a widely used cryptographic hash function producing a 128-bit (16-byte) hash value, typically expressed in text format as a 32 digit hexadecimal number. The default setting is disabled.  <b>NOTE:</b> 1. The acquired hashed password from backup config file is not applicable for user login on CLI/Web interface. 2. We strongly recommend not to alter off-line Auth Method setting in backup configure file. 3. If Auth-Method is enabled and do firmware downgrade, users must reset default config.
Switch(config)# user name [user_name]	[user_name]	Create/modify a user account. The authorized user login name is up to 20 alphanumeric characters. Only 5 login accounts can be registered in this device at the same time.
Switch(config-user-NAME)# active		Activate the specified user account.
Switch(config-user-NAME)# description [description]	[description]	Enter the brief description for the specified user account. Up to 35 alphanumeric characters can be accepted.
Switch(config-user-NAME)# level [admin   rw   ro]	[admin   rw   ro]	Specify this user’s access privilege level.  <b>admin (administrator):</b> Own the full-access right, including maintaining user account & system information, loading factory settings, etc..

		<b>rw (read &amp; write):</b> Own the partial-access right, unable to modify user account & system information and load factory settings.  <b>ro (read only):</b> Read-Only access privilege.
Switch(config-user-NAME)# password [password]	[password]	Enter the password, up to 20 alphanumeric characters, for the specified user account.
<b>No command</b>		
Switch(config)# no user password-encryption		Disable MD5(Message-Digest Algorithm).
Switch(config)# no user name [user_name]	[user_name]	Delete the specified user account.
Switch(config-user-NAME)# no active		Deactivate the selected user account.
Switch(config-user-NAME)# no description		Remove the configured description for the specified user account.
Switch(config-user-NAME)# no password		Remove the configured password for the specified user account.
Switch(config-user-NAME)# no level		Reset the access privilege level back to the default (Read Only).
<b>Show command</b>		
Switch(config)# show user		Show user authentication configuration.
Switch(config)# show user name		List all user accounts.
Switch(config)# show user name [user_name]	[user_name]	Show the specific account's configuration.
Switch(config-user-NAME)# show		Show the specific account's configuration.
<b>Examples of User command</b>		
Switch(config)# user name miseric		Create a new login account "miseric".
Switch(config-user-miseric)# description misengineer		Add a description to this new account "miseric".
Switch(config-user-miseric)# password mis2256i		Set up a password for this new account "miseric"
Switch(config-user-miseric)# level rw		Set this user account's privilege level to "read and write".

## 2. Configure RADIUS server settings.

User command	Parameter	Description
Switch(config)# user radius		Enable RADIUS authentication.
Switch(config)# user radius radius-port [1025-65535]	[1025-65535]	Specify RADIUS server port number.
Switch(config)# user radius retry-time [0-2]	[0-2]	Specify the retry time value. This is the number of times that the Managed Switch will try to reconnect if the RADIUS server is not reachable.
Switch(config)# user radius secret [secret]	[secret]	Specify a secret, up to 30 alphanumeric characters, for RADIUS server. This secret key is used to validate communications between RADIUS servers.
Switch(config)# user radius server1 [A.B.C.D   A:B:C:D:E:F:G:H]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the primary RADIUS server IPv4/IPv6 address.
Switch(config)# user radius server2 [A.B.C.D   A:B:C:D:E:F:G:H]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the secondary RADIUS server IPv4/IPv6 address.
<b>No command</b>		
Switch(config)# no user radius		Disable RADIUS authentication.
Switch(config)# no user radius radius-port		Reset the radius port setting back to the default. (1812 port)
Switch(config)# no user radius retry-time		Reset the retry time setting back to the default.
Switch(config)# no user radius secret		Remove the configured secret value.
Switch(config)# no user radius server1		Delete the IPv4/IPv6 address of the primary RADIUS server.
Switch(config)# no user radius server2		Delete the IPv4/IPv6 address of the secondary RADIUS server.
<b>Show command</b>		
Switch(config)# show user radius		Show the current RADIUS configuration.
<b>Examples of User command</b>		
Switch(config)# user radius		Enable RADIUS authentication.
Switch(config)# user radius radius-port 1812		Set RADIUS server port number to 1812.
Switch(config)# user radius retry-time 2		Set the retry time value to 2. The Managed Switch will try to reconnect twice if the RADIUS server is not reachable.
Switch(config)# user radius secret abcxyzabc		Set up a secret for validating communications between RADIUS clients.
Switch(config)# user radius server1 192.180.3.1		Set the primary RADIUS server address to 192.180.3.1.
Switch(config)# user radius server2 192.180.3.2		Set the secondary RADIUS server address to 192.180.3.2.

### 3. Configure TACACS server settings.

User command	Parameter	Description
Switch(config)# user tacacs		Enable TACACS authentication.
Switch(config)# user tacacs tacacs-port [49, 1025-65535]	[49, 1025-65535]	Specify TACACS server port number. The default setting is at 49 port.
Switch(config)# user tacacs retry-time [0-2]	[0-2]	Specify the retry time value. This is the number of times that the Managed Switch will try to reconnect if the TACACS server is not reachable.
Switch(config)# user tacacs secret [secret]	[secret]	Specify a secret, up to 30 alphanumeric characters, for TACACS server. This secret key is used to validate communications between TACACS servers.
Switch(config)# user tacacs server1 [A.B.C.D   A:B:C:D:E:F:G:H]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the primary TACACS server IPv4/IPv6 address.
Switch(config)# user tacacs server2 [A.B.C.D   A:B:C:D:E:F:G:H]	[A.B.C.D   A:B:C:D:E:F:G:H]	Specify the secondary TACACS server IPv4/IPv6 address.
<b>No command</b>		
Switch(config)# no user tacacs		Disable TACACS authentication.
Switch(config)# no user tacacs tacacs-port		Reset the tacacs port setting back to the default.(49 port)
Switch(config)# no user tacacs retry-time		Reset the retry time setting back to the default.
Switch(config)# no user tacacs secret		Remove the configured secret value.
Switch(config)# no user tacacs server1		Delete the IPv4/IPv6 address of the primary TACACS server.
Switch(config)# no user tacacs server2		Delete the IPv4/IPv6 address of the secondary TACACS server.
<b>Show command</b>		
Switch(config)#show user tacacs		Show the current TACACS configuration.



## **2.6.28 VLAN Command**

A Virtual Local Area Network (VLAN) is a network topology configured according to a logical scheme rather than the physical layout. VLAN can be used to combine any collections of LAN segments into a group that appears as a single LAN. VLAN also logically segments the network into different broadcast domains. All broadcast, multicast, and unknown packets entering the Switch on a particular VLAN will only be forwarded to the stations or ports that are members of that VLAN.

VLAN can enhance performance by conserving bandwidth and improve security by limiting traffic to specific domains. A VLAN is a collection of end nodes grouped by logics instead of physical locations. End nodes that frequently communicate with each other are assigned to the same VLAN, no matter where they are physically located on the network. Another benefit of VLAN is that you can change the network topology without physically moving stations or changing cable connections. Stations can be 'moved' to another VLAN and thus communicate with its members and share its resources, simply by changing the port VLAN settings from one VLAN to another. This allows VLAN to accommodate network moves, changes and additions with the greatest flexibility.

### **2.6.28.1 Port-Based VLAN**

Port-based VLAN can effectively segment one network into several broadcast domains. Broadcast, multicast and unknown packets will be limited to within the VLAN. Port-Based VLAN is uncomplicated and fairly rigid in implementation and is useful for network administrators who wish to quickly and easily set up VLAN so as to isolate the effect of broadcast packets on their network.


Since source addresses of the packets are listed in MAC address table of specific VLAN (except broadcast/multicast packets), in every VLAN the traffic between two ports will be two-way without restrictions.

### **2.6.28.2 802.1Q VLAN**

#### **802.1Q VLAN Concept**

Port-Based VLAN is simple to implement and use, but it cannot be deployed cross switches VLAN. The 802.1Q protocol was developed in order to provide the solution to this problem. By tagging VLAN membership information to Ethernet frames, the IEEE 802.1Q can help network administrators break large switched networks into smaller segments so that broadcast and multicast traffic will not occupy too much available bandwidth as well as provide a higher level security between segments of internal networks.

## Introduction to 802.1Q frame format:

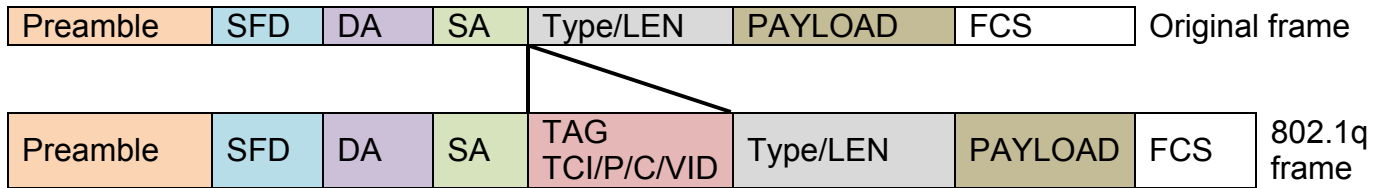

PRE	Preamble	62 bits	Used to synchronize traffic
SFD	Start Frame Delimiter	2 bits	Marks the beginning of the header
DA	Destination Address	6 bytes	The MAC address of the destination
SA	Source Address	6 bytes	The MAC address of the source
TCI	Tag Control Info	2 bytes set to 8100 for 802.1p and Q tags	
P	Priority	3 bits	Indicates 802.1p priority level 0-7
C	Canonical Indicator	1 bit	Indicates if the MAC addresses are in Canonical format - Ethernet set to "0"
VID	VLAN Identifier	12 bits	Indicates the VLAN (0-4095)
T/L	Type/Length Field	2 bytes	Ethernet II "type" or 802.3 "length"
Payload	< or = 1500 bytes User data		
FCS	Frame Check Sequence	4 bytes	Cyclical Redundancy Check

## Important VLAN Concepts for 802.1Q VLAN Configuration:

There are two key concepts to understand.

- **Access-VLAN** specifies the VLAN ID to the switch port that will assign the VLAN ID to **untagged** traffic from that port. A port can only be assigned to one Access-VLAN at a time. When the port is configured as **Access Mode**, the port is called an **Access Port**, the link to/from this port is called an **Access Link**. The VLAN ID assigned is called **PVID**.
- **Trunk-VLAN** specifies the set of VLAN IDs that a given port is allowed to receive and send **tagged** packets. A port can be assigned to multiple Trunk-VLANs at a time. When the port is configured as **Trunk Mode**, the port is called a **Trunk Port**, the link to/from this port is called a **Trunk Link**. The VLAN ID assigned is called **VID**.

A port can be configured as below 802.1q VLAN modes :

- **Access Mode :**  
Access Links (the link to/from access ports) are the most common type of links on any VLAN switch. All **network hosts (such as PCs)** connect to the switch's Access Links in order to gain access to the local network. We configure only one **Access-VLAN** per port, that is, the **network hosts** will be allowed to access.

It is important to note at this point that any **network host** connected to an Access Port is totally unaware of the VLAN assigned to the port. The **network host** simply assumes it is part of a single broadcast domain, just as it happens with any normal switch. During data transfers, any VLAN information or data from other VLANs is removed so the recipient has no information about them.

- **Trunk Mode :**  
Trunk Links (the link to/from trunk ports) is configured to carry packets for multiple VLANs. These types of ports are usually found in connections between switches. These links require the ability to carry packets from multiple VLANs because VLANs span over multiple switches.

- **Trunk Native Mode :**

A Trunk-native port can carry untagged packets simultaneously with the 802.1Q tagged packets. When you assign a default Access-VLAN to the trunk-native port, all untagged traffic travels on the default Access-VLAN for the trunk-native port, and all untagged traffic is assumed to belong to this Access-VLAN. This Access-VLAN is referred to as the native VLAN ID for a Trunk-native Port. The native VLAN ID is the VLAN ID that carries untagged traffic on trunk-native ports.

- **DOT1Q-Tunnel Mode :**

Business customers of service providers often have specific requirements for VLAN IDs and the number of VLANs to be supported. The VLAN ranges required by different customers in the same service-provider network might overlap, and traffic of customers through the infrastructure might be mixed. Assigning a unique range of VLAN IDs to each customer would restrict customer configurations and could easily exceed the VLAN limit (4096) of the IEEE 802.1Q specification.

Using the IEEE 802.1Q tunneling feature, service providers can use a single VLAN to support customers who have multiple VLANs. Customer VLAN IDs are preserved, and traffic from different customers is segregated within the service-provider network, even when they appear to be in the same VLAN. Using IEEE 802.1Q tunneling expands VLAN space by using a VLAN-in-VLAN hierarchy and retagging the tagged packets. A port configured to support IEEE 802.1Q tunneling is called a *tunnel port*. When you configure tunneling, you assign a tunnel port to a VLAN ID that is dedicated to tunneling. Each customer requires a separate service-provider VLAN ID, but that VLAN ID supports all of the customer's VLANs.


- Customer traffic tagged in the normal way with appropriate VLAN IDs comes from an IEEE 802.1Q trunk port on the customer device and into a tunnel port on the service-provider edge switch. The link between the customer device and the edge switch is asymmetric because one end is configured as an IEEE 802.1Q trunk port, and the other end is configured as a tunnel port. You assign the tunnel port interface to an access VLAN ID that is unique to each customer.

**Example : PortX configuration**

Configuration	Result
Trunk-VLAN = 10, 11, 12 Access-VLAN = 20 <b>Mode = Access</b>	PortX is an <b>Access Port</b> PortX's <b>VID</b> is ignored PortX's <b>PVID</b> is 20 PortX sends <b>Untagged</b> packets (PortX takes away VLAN tag if the PVID is 20) PortX receives <b>Untagged</b> packets only
Trunk-VLAN = 10,11,12 Access-VLAN = 20 <b>Mode = Trunk</b>	PortX is a <b>Trunk Port</b> PortX's <b>VID</b> is 10,11 and 12 PortX's <b>PVID</b> is ignored PortX sends and receives <b>Tagged</b> packets VID 10,11 and 12
Trunk-VLAN = 10,11,12 Access-VLAN = 20 <b>Mode = Trunk-native</b>	PortX is a <b>Trunk-native Port</b> PortX's <b>VID</b> is 10,11 and 12 PortX's <b>PVID</b> is 20 PortX sends and receives <b>Tagged</b> packets VID 10,11 and 12 PortX receives <b>Untagged</b> packets and add PVID 20
Trunk-VLAN = 10,11,12 Access-VLAN = 20 <b>Mode = Dot1q-tunnel</b>	PortX is a <b>Dot1q-tunnel Port</b> PortX's <b>VID</b> is ignored. PortX's <b>PVID</b> is 20 PortX sends <b>Untagged</b> or <b>Tagged</b> packets VID 20 PortX receives <b>Untagged</b> and <b>Tagged</b> packets and add PVID 20(outer tag)


### 2.6.28.3 Introduction to Q-in-Q (DOT1Q-Tunnel)

The IEEE 802.1Q double tagging VLAN is also referred to as Q-in-Q or VLAN stacking (IEEE 802.1ad). Its purpose is to expand the 802.1q VLAN space by tagging the inner tagged packets. In this way, a “double-tagged” frame is created so as to separate customer traffic within a service provider network. As shown below in “Double-Tagged Frame” illustration, an outer tag is added between source destination and inner tag at the provider network’s edge. This can support C-VLAN (Customer VLAN) over Metro Area Networks and ensure complete separation between traffic from different user groups. Moreover, the addition of double-tagged space increases the number of available VLAN tags which allow service providers to use a single SP-VLAN (Service Provider VLAN) tag per customer over the Metro Ethernet network.

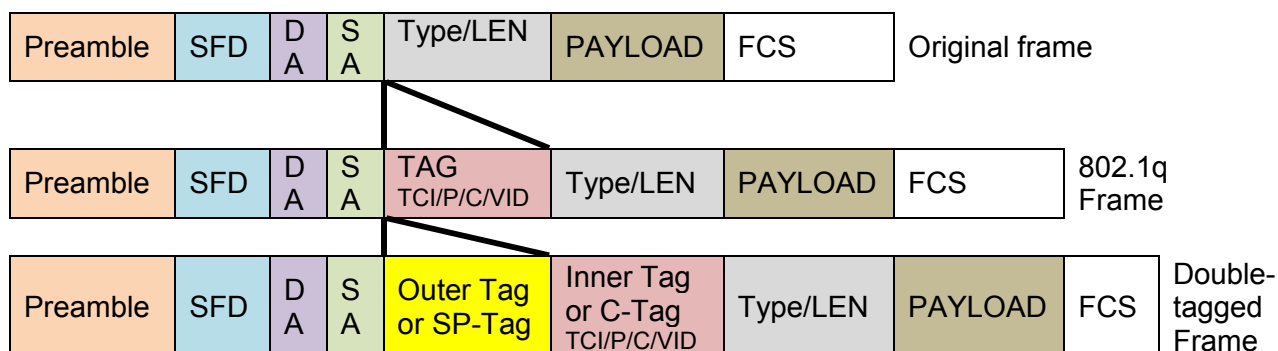

**Double-Tagged Frame Format**

As shown below in “Q-in-Q Example” illustration, Headquarter A wants to communicate with Branch 1 that is 1000 miles away. One common thing about these two locations is that they have the same VLAN ID of 20, called C-VLAN (Customer VLAN). Since customer traffic will be routed to service provider’s backbone, there is a possibility that traffic might be forwarded insecurely, for example due to the same VLAN ID used. Therefore, in order to get the information from Headquarter to Branch 1, the easiest way for the carrier to ensure security to customers is to encapsulate the original VLAN with a second VLAN ID of 100. This second VLAN ID is known as SP-VLAN (Service Provider VLAN) that is added as data enters the service provider’s network and then removed as data exits. Eventually, with the help of SP-Tag, the information sent from Headquarter to Branch 1 can be delivered with customers’ VLANs intactly and securely.

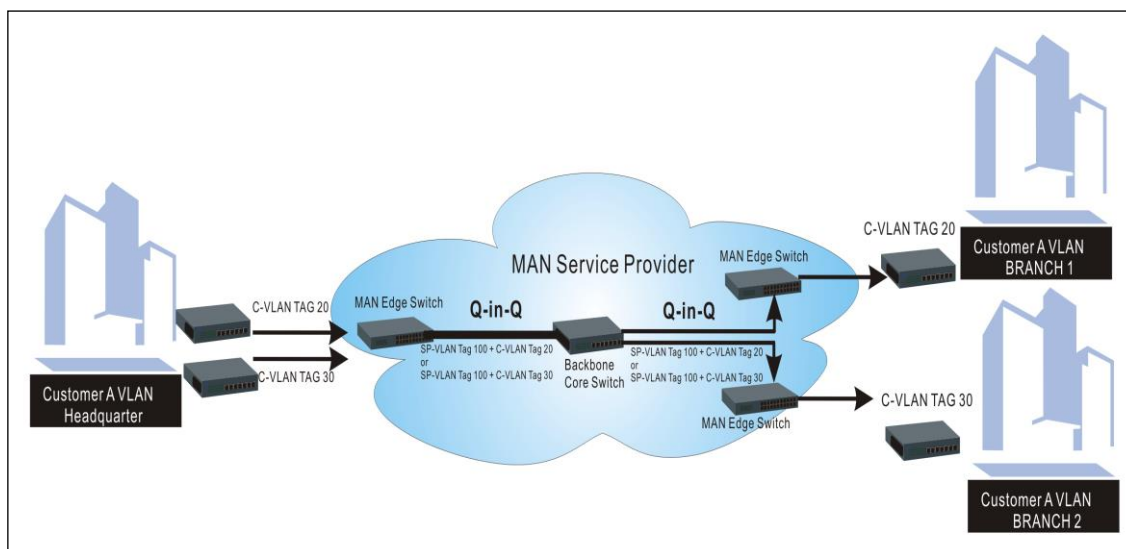

**Q-in-Q Example**

1. Use “Interface” command to configure a group of ports’ 802.1q/Port-basedVLAN settings.

VLAN & Interface command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several discontinuous port numbers separated by commas or a range of ports with a hyphen. For example:1,3 or 2-4
Switch(config-if-PORT-PORT)# vlan dot1q-vlan access-vlan [1-4094]	[1-4094]	Specify the selected ports’ Access-VLAN ID (PVID).
Switch(config-if-PORT-PORT)# vlan dot1q-vlan trunk-vlan [1-4094]	[1-4094]	Specify the selected ports’ Trunk-VLAN ID (VID).
Switch(config-if-PORT-PORT)# vlan dot1q-vlan mode access		Set the selected ports to the access mode (untagged).
Switch(config-if-PORT-PORT)# vlan dot1q-vlan mode trunk		Set the selected ports to the trunk mode (tagged).
Switch(config-if-PORT-PORT)# vlan dot1q-vlan mode trunk native		Enable native VLAN for untagged traffic on the selected port. (Tagged and untagged)  <b>Note : When you assign a default Access-VLAN to the trunk-native port, all untagged traffic travels on the default Access-VLAN for the trunk-native port, and all untagged traffic is assumed to belong to this Access-VLAN.</b>
Switch(config-if-PORT-PORT)# vlan dot1q-vlan mode dot1q-tunnel		Set the selected ports to dot1q-tunnel (Q-in-Q) mode. (Tagged and untagged)
Switch(config-if-PORT-PORT)# vlan port-based [name]	[name]	Set the selected ports to a specified port-based VLAN.  <b>Note : Need to create a port-based VLAN group under the VLAN global configuration mode before joining it.</b>
<b>No command</b>		
Switch(config-if-PORT-PORT)# no vlan dot1q-vlan access-vlan		Reset the selected ports’ PVID back to the default setting.
Switch(config-if-PORT-PORT)# no vlan dot1q-vlan mode		Reset the selected ports’ 802.1q VLAN mode back to the default setting (Access Mode).
Switch(config-if-PORT-PORT)# no vlan dot1q-vlan trunk-vlan [1-4094]	[1-4094]	Remove the specified trunk VLAN ID from the selected ports.
Switch(config-if-PORT-PORT)# no vlan port-based [name]	[name]	Remove the selected ports from the specified port-based VLAN.

2. Create/Modify an 802.1q VLAN and a management VLAN rule or create a port-based VLAN group.

VLAN dot1q command	Parameter	Description
Switch(config)# vlan dot1q-vlan [1-4094]	[1-4094]	Enter a VLAN ID number to create a new 802.1q VLAN or modify an existing 802.1q VLAN.
Switch(config-vlan-ID)# name [vlan_name]	[vlan_name]	Specify a descriptive name for the created VLAN ID, maximum 15 characters.
Switch(config)# vlan isolation up-link-port [port_list]	[port_list]	To assign uplink ports which will form a port-based VLAN group with all other downlink ports separately so as to isolate downlink ports from each other except from uplink ports.
Switch(config)# vlan isolation		Enable the port isolation function. If the port isolation is set to "Enabled", the ports cannot communicate with each other.
Switch(config)# vlan management-vlan [1-4094] management-port [port_list] mode [access   trunk   trunk-native]	[1-4094]	Enter the management VLAN ID.
	[port_list]	Specify the management port number.
	[access   trunk   trunk-native]	Specify whether the management port is in trunk or access mode.  <b>"trunk" mode:</b> Set the selected ports to tagged.  <b>"access" mode:</b> Set the selected ports to untagged.  <b>"trunk-native" mode:</b> Set the selected ports to tagged or untagged.
Switch(config)# vlan port-based [name]	[name]	Specify a descriptive name for the port-based VLAN you would like to create, maximum 15 characters.
Switch(config)# vlan dot1q-tunnel ether-type [0xWXYZ]	[0xWXYZ]	Configure outer VLAN's ether-type. (Range: 0x0000~FFFF)
<b>No command</b>		
Switch(config-vlan-ID)# no name		Remove the descriptive name for the specified VLAN ID.
Switch(config)# no vlan port-based [name]	[name]	Delete the specified port-based VLAN.
Switch(config)# no vlan dot1q-tunnel ether-type		Reset outer VLAN's ether-type back to the default setting (9100).
Switch(config)# no vlan dot1q-vlan [1-4094]	[1-4094]	Remove the specified VLAN ID from the Trunk VLAN table.
Switch(config)# no vlan isolation up-link-port [port_list]		Remove the specified up link port for port VLAN isolation.

Switch(config)# no vlan isolation		Disable port isolation mode.
<b>Show command</b>		
Switch(config)# show vlan		Show IEEE 802.1q VLAN table.
Switch(config-vlan-ID)# show		Show the membership status of this VLAN ID
Switch(config)# show vlan interface		Show all ports' VLAN assignment and VLAN mode.
Switch(config)# show vlan interface [port_list]	[port_list]	Show the selected ports' VLAN assignment and VLAN mode.
Switch(config)# show vlan port-based		Show port-based VLAN table.
Switch(config)# show vlan isolation		Show the status of port isolation and the up link port configuration for port VLAN isolation.
<b>Exit command</b>		
Switch(config-vlan-ID)# exit		Return to Global Configuration mode.
<b>Examples of Port-based VLAN</b>		
Switch(config)# vlan port-based MKT_Office		Create a port-based VLAN "MKT_Office".
Switch(config)# vlan management-vlan 1 management-port 1-3 mode access		Set VLAN 1 to management VLAN (untagged) and Port 1~3 as management ports.

### 3. Set up VLAN ID translation (or VLAN mapping).

VLAN Mapping command	Parameter	Description
Switch(config)# vlan mapping		Enable VLAN Translation function globally.
Switch(config)# vlan mapping name [name] interface [port_number] original-vid [1-4094] mapped-vid [1-4094]	[name]	Specify a descriptive name for the VLAN mapping rule. Up to 32 alphanumeric characters can be accepted.
	[port_number]	Specify one preferred trunk port used for the VLAN ID translation.  <b>Note: For more details on trunk port settings, see <a href="#">Section 2.6.28</a>.</b>
	[1-4094]	Specify the original VLAN ID entering the switch from the customer network for the VLAN ID translation. Valid range: 1-4094.  <b>Note: Different original VLANs belonging to the specific port cannot be translated into the same Mapped VID.</b>

	[1-4094]	Specify the preferred VLAN ID that the assigned original VID will be translated. Valid range: 1-4094.  <b>Note: Different Mapped VLANs cannot be assigned to the trunk port with the same original VID.</b>
<b>No command</b>		
Switch(config)# no vlan mapping		Disable VLAN Translation function globally.
Switch(config)# no vlan mapping name [name]	[name]	Remove the specified mapping rule by name from the VLAN mapping rule table.
<b>Show command</b>		
Switch(config)# show vlan mapping		Show the current VLAN Translation configuration.

For 802.1q VLAN configuration via CLI, we will demonstrate the following two examples to have the users realize the commands we mentioned above.

### Example 1,

We will configure FOS-3128 Managed Switch via CLI as the Table 2-3 listed.



Name	Ports	Mode	PVID	VID
Sales	1-2	Trunk	Default	10,20
RD	3-4	Trunk-native	50	30,40
SQA	5-6	Access	60	N/A
PME	7-8	Access	70	N/A

Table 2-3

### 1. Create 802.1q VLAN IDs.

FOS-3128(config)# interface 1-2	Enter port 1 to port 2's interface mode.
FOS-3128(config-if-1,2)# vlan dot1q-vlan trunk-vlan 10, 20	Set port 1 to port 2's Trunk-VLAN ID (VID) to 10 and 20.
FOS-3128(config-if-1,2)# vlan dot1q-vlan mode trunk	Set the selected ports to Trunk Mode (tagged).
FOS-3128(config-if-1,2)# exit	Exit current ports interface mode.
FOS-3128 (config)# interface 3-4	Enter port 3 to 4's interface mode.
FOS-3128(config-if-3,4)# vlan dot1q-vlan	Set port 3 to port 4's Access-VLAN ID



access-vlan 50	(PVID) to 50.
FOS-3128(config-if-3,4)# vlan dot1q-vlan trunk-vlan 30,40	Set port 3 to port 4's Trunk-VLAN ID (VID) to 30 and 40.
FOS-3128(config-if-3,4)# vlan dot1q-vlan mode trunk native	Set the selected ports to Trunk-native Mode (tagged and untagged).
FOS-3128(config-if-3,4)# exit	Exit current ports interface mode.
FOS-3128 (config)# interface 5-6	Enter port 5 to port 6's interface mode.
FOS-3128(config-if-5,6)# vlan dot1q-vlan access-vlan 60	Set port 5 to port 6's Access-VLAN ID (PVID) to 60.
FOS-3128(config-if-5,6)# vlan dot1q-vlan mode access	Set the selected ports to Access Mode (untagged).
FOS-3128(config-if-5,6)# exit	Exit current ports interface mode.
FOS-3128(config)# interface 7-8	Enter port 7 to port 8's interface mode.
FOS-3128(config-if-7,8)# vlan dot1q-vlan access-vlan 70	Set port 7 to port 8's Access-VLAN ID (PVID) to 70.
FOS-3128(config-if-7,8)# vlan dot1q-vlan mode access	Set the selected ports to Access Mode (untagged).
FOS-3128(config-if-7,8)# exit	Exit current ports interface mode.

## 2. Modify 802.1q VLAN IDs' names.

FOS-3128(config)# vlan dot1q-vlan 10	Enter VLAN 10.
FOS-3128 (config-vlan-10)# name Sales	Specify "Sales" as the name for VLAN 10.
FOS-3128 (config-vlan-10)# exit	Exit VLAN 10.
FOS-3128(config)# vlan dot1q-vlan 20	Enter VLAN 20.
FOS-3128(config-vlan-20)# name Sales	Specify "Sales" as the name for VLAN 20.
FOS-3128(config-vlan-20)# exit	Exit VLAN 20.
FOS-3128(config)# vlan dot1q-vlan 30	Enter VLAN 30.
FOS-3128(config-vlan-30)# name RD	Specify "RD" as the name for VLAN 30.
FOS-3128(config-vlan-30)# exit	Exit VLAN 30.
FOS-3128(config)# vlan dot1q-vlan 40	Enter VLAN 40.
FOS-3128(config-vlan-40)# name RD	Specify "RD" as the name for VLAN 40.
FOS-3128(config-vlan-40)# exit	Exit VLAN 40.
FOS-3128(config)# vlan dot1q-vlan 50	Enter VLAN 50.
FOS-3128(config-vlan-50)# name RD	Specify "RD" as the name for VLAN 50.
FOS-3128(config-vlan-50)# exit	Exit VLAN 50.
FOS-3128(config)# vlan dot1q-vlan 60	Enter VLAN 60.
FOS-3128(config-vlan-60)# name SQA	Specify "SQA" as the name for VLAN 60.
FOS-3128(config-vlan-60)# exit	Exit VLAN 60.
FOS-3128 (config)# vlan dot1q-vlan 70	Enter VLAN 70.
FOS-3128 (config-vlan-70)# name PME	Specify "PME" as the name for VLAN 70.
FOS-3128 (config-vlan-70)# exit	Exit VLAN 70.

## Example 2,

We will configure two sets of FOS-3128 Managed Switch( including #1 FOS-3128 and #2 FOS-3128) via CLI as theTable 2-4 listed.

Port No.	Mode	Access-VLAN (PVID)	Trunk-VLAN (VID)	EtherType
1	Dot1q-tunnel	10	1	9100
2	Trunk	1	10	9100
3	Dot1q-tunnel	20	1	9100
4	Dot1q-tunnel	20	1	9100

Table 2-4

Below is the complete CLI commands applied to #1 FOS-3128. Also issue the same commands to #2 FOS-3128.

Command		Purpose
STEP1	<code>configure</code>  <b>Example:</b> FOS-3128# config FOS-3128(config)#	Enter the global configuration mode.
STEP2	<code>vlan dot1q-tunnel ethertype 0xWXYZ</code>  <b>Example:</b> FOS-3128(config)# vlan dot1q-tunnel ethertype 9100 OK !	In this example, it configures the dot1q-tunnel ethertype value as “9100”
STEP3	<code>interface port_list</code>  <b>Example:</b> FOS-3128(config)# interface 1 FOS-3128 (config-if-1)#	Specify Port 1 that you would like to configure it as dot1q-tunnel port.
STEP4	<code>vlan dot1q-vlan access-vlan vlan_id</code>  <b>Example:</b> FOS-3128(config-if-1)# vlan dot1q-vlan access-vlan 10 OK !	In this example, it configures Access-VLAN ID “10” to Port 1.
STEP5	<code>vlan dot1q-vlan mode dot1q-tunnel</code>  <b>Example:</b> FOS-3128(config-if-1)# vlan dot1q-vlan mode dot1q-tunnel OK !	Configure Port 1’s VLAN mode as “dot1q-tunnel” mode.
STEP6	<code>exit</code>  <b>Example:</b> FOS-3128(config-if-1)# exit FOS-3128(config)#	Return to the global configuration mode.
STEP7	<code>interface port_list</code>  <b>Example:</b> FOS-3128(config)# interface 2 FOS-3128(config-if-2)#	Specify Port 2 that you would like to configure it as Trunk port.

STEP8	<pre>vlan dot1q-vlan trunk-vlan <i>vlan_id</i></pre> <p><b>Example:</b> FOS-3128(config-if-2)# vlan dot1q-vlan trunk-vlan 10 OK !</p>	In this example, it configures Trunk-VLAN ID “10” to Port 2.
STEP9	<pre>v lan dot1q-vlan mode <i>trunk</i></pre> <p><b>Example:</b> FOS-3128(config-if-2)# vlan dot1q-vlan mode trunk OK !</p>	Configure Port 2’s VLAN mode as “Trunk” mode.
STEP10	<pre>no vlan dot1q-vlan trunk-vlan <i>vlan_id</i></pre> <p><b>Example:</b> FOS-3128(config-if-2)# no vlan dot1q-vlan trunk-vlan 1 OK !</p>	Remove the Trunk-VLAN ID “1” from Port 2.
STEP10	<pre>exit</pre> <p><b>Example:</b> FOS-3128 (config-if-2)# exit FOS-3128 (config)#</p>	Return to the global configuration mode.
STEP11	<pre>interface <i>port_list</i></pre> <p><b>Example:</b> FOS-3128(config)# interface 3 FOS-3128 (config-if-3)#</p>	Specify Port 3 that you would like to configure it as Dot1q-Tunnel port.
STEP12	<pre>vlan dot1q-vlan access-vlan <i>vlan_id</i></pre> <p><b>Example:</b> FOS-3128(config-if-3)# vlan dot1q-vlan access-vlan 20 OK !</p>	In this example, it configures Access-VLAN ID “20” to Port 3.
STEP13	<pre>vlan dot1q-vlan mode <i>dot1q-tunnel</i></pre> <p><b>Example:</b> FOS-3128 (config-if-3)# vlan dot1q-vlan mode dot1q-tunnel OK !</p>	Configure Port 3’s VLAN mode as “dot1q-tunnel” mode.
STEP14	<pre>exit</pre> <p><b>Example:</b> FOS-3128 (config-if-3)# exit FOS-3128 (config)#</p>	Return to the global configuration mode.
STEP15	<pre>interface <i>port_list</i></pre> <p><b>Example:</b> FOS-3128(config)# interface 4 FOS-3128(config-if-4)#</p>	Specify Port 4 that you would like to configure it as dot1q-tunnel port.
STEP16	<pre>vlan dot1q-vlan access-vlan <i>vlan_id</i></pre> <p><b>Example:</b> FOS-3128(config-if-4)# vlan dot1q-vlan access-vlan 20 OK !</p>	In this example, it configures Access-VLAN ID “20” to Port 4.
STEP17	<pre>vlan dot1q-vlan mode <i>dot1q-tunnel</i></pre> <p><b>Example:</b> FOS-3128 (config-if-4)# vlan dot1q-vlan mode dot1q-tunnel OK !</p>	Configure Port 4’s VLAN mode as “dot1q-tunnel” mode.

STEP18	<b>exit</b>  <b>Example:</b> FOS-3128 (config-if-4)# exit FOS-3128 (config)#	<b>Return to the global configuration mode.</b>
STEP19	<b>exit</b>  <b>Example:</b> FOS-3128(config)# exit FOS-3128#	<b>Return to the Privileged mode.</b>
STEP20	<b>write</b>  <b>Example:</b> FOS-3128# write Save Config Succeeded!	<b>Save the running configuration into the startup configuration.</b>

After completing the VLAN settings for your FOS-3128 switches, you can issue the commands listed below for checking your configuration

### Example 1,

#### FOS-3128(config)# show vlan interface

```
=====
IEEE 802.1q Tag VLAN Interface :
=====
Dot1q-Tunnel EtherType : : 0x9100
Port Access-vlan User Priority Port VLAN Mode Trunk-vlan
-----
 1         10         0 dot1q tunnel 1
 2          1         0 trunk 10
 3         20         0 dot1q tunnel 1
 4         20         0 dot1q tunnel 1
 5          1         0 access 1
 6          1         0 access 1

          : :
          : :
          : :

27          1         0 access 1
28          1         0 access 1

FOS-3128(config)#
```

### Example 2,

#### FOS-3128(config)# show vlan

```
=====
IEEE 802.1q VLAN Table :
=====
CPU VLAN ID      : 1
Management Priority : 0

U: untagged port, T: tagged port, D: dot1q-tunnel port, V: member port
-----
VLAN Name      VLAN 1      8 9      16 17      24 25 28 CPU
-----
Default_VLAN    1  ---UUUU  UUUUUUUUU  UUUUUUUUU  UUUU  V
VLAN0010        10 DT-----  -----  -----  -----  --
VLAN0020        20 ---DD---  -----  -----  -----  --

FOS-3128(config)#
```

## 2.6.29 Interface Command

Use “interface” command to set up configurations of several discontinuous ports or a range of ports.

### 1. Entering interface numbers.

Command	Parameter	Description
Switch(config)# interface [port_list]	[port_list]	Enter several port numbers separated by commas or a range of port numbers. For example: 1,3 or 2-4

**Note :** You need to enter interface numbers first before issuing below 2-18 commands.

### 2. Enable port auto-negotiation.

Command	Parameter	Description
Switch(config-if-PORTR-PORT)# auto-negotiation		Set the selected interfaces' to auto-negotiation. When auto-negotiation is enabled, speed configuration will be ignored.
<b>No command</b>		
Switch(config-if-PORTR-PORT)# no auto-negotiation		Reset auto-negotiation setting back to the default. (Manual)

### 3. Set up link aggregation or port-trunking.

Command	Parameter	Description
Switch(config-if-PORTR-PORT)# channel-group lacp		Set the selected interfaces' to be aggregated via LACP.  <b>Note : At lease 2 ports but not more than 8 ports can be aggregated.</b>
Switch(config-if-PORTR-PORT)# channel-group lacp key [0-255]	[0-255]	Specify a key to the selected interfaces. (0: auto)
Switch(config-if-PORTR-PORT)# no channel-group lacp role		Specify the selected interfaces to passive LACP role.
Switch(config-if-PORTR-PORT)# channel-group lacp role active	[active]	Specify the selected interfaces to active LACP role.
Switch(config-if-PORTR-PORT)# channel-group trunking [group_name]	[group_name]	Specify the selected interfaces to the trunking group.  <b>Note1 : At lease 2 ports but not more than 8 ports can be aggregated.</b>  <b>Note2 : Ports cannot be in LACP and port-trunking mode at the same time.</b>  <b>Note3 : A port-trunking group need to created before assigning ports to it. (See <a href="#">Section 2.6.6 “channel-group”</a>)</b>

No command		
Switch(config-if-PORT-PORT)# no channel-group lacp		Disable LACP on the selected interfaces.
Switch(config-if-PORT-PORT)# no channel-group trunking		Remove the selected ports from a link aggregation group.

#### 4. Set up port description.

Command	Parameter	Description
Switch(config-if-PORT-PORT)# description [description]	[description]	Enter the description for the selected port(s). Up to 35 characters can be accepted.
No command		
Switch(config-if-PORT-PORT)# no description		Clear the port description for the selected ports.

#### 5. Set up port duplex mode.

Command	Parameter	Description
Switch(config-if-PORT-PORT)# duplex [full]	[full]	Configure the port duplex as <b>full</b> .
No command		
Switch(config-if-PORT-PORT)# no duplex		Configure the port duplex as <b>half</b> .  <b>Note1 : Only 25-28 copper ports can be configured as half duplex.</b>  <b>Note2 : Auto-negotiation needs to be disabled before configuring duplex mode.</b>

#### 6. Enable flow control operation.

Command	Parameter	Description
Switch(config-if-PORT-PORT)# flowcontrol		Enable flow control on the selected port(s).
No command		
Switch(config-if-PORT-PORT)# no flowcontrol		Disable flow control on the selected port(s).

## 7. Setup DHCP snooping/relay sub-commands

Command	Parameter	Description
Switch(config-if-PORT-PORT)# ip dhcp snooping option		Enable the selected interfaces' DHCP Option 82 / DHCPv6 Option 37 relay agent globally.
Switch(config-if-PORT-PORT)# ip dhcp snooping circuit		Enable the selected interfaces' DHCP Option 82 / DHCPv6 Option 37 Manual Circuit Id.
Switch(config-if-PORT-PORT)# ip dhcp snooping circuit formatted		Enable Formatted Option 82 / DHCPv6 Option 37 Circuit Id for the selected interfaces.
Switch(config-if-PORT-PORT)# ip dhcp snooping circuit id [circuit_id]	[circuit_id]	Specify the VLAN and port identifier using a VLAN ID in the range of 1 to 4094. Besides, you can configure the circuit ID to be a string of up to 63 characters.
Switch(config-if-PORT-PORT)# ip dhcp snooping trust		Enable the selected interfaces as DHCP Option 82 / DHCPv6 Option 37 trust ports.
Switch(config-if-PORT-PORT)# ip dhcp snooping server-trust		Enable the selected interfaces as DHCP/DHCPv6 server trust ports.  <b>Note : A port / ports cannot be configured as option 82 trust and server trust at the same time.</b>
<b>No command</b>		
Switch(config-if-PORT-PORT)# no ip dhcp snooping option		Disable the selected interfaces' DHCP Option 82 / DHCPv6 Option 37 relay agent.
Switch(config-if-PORT-PORT)# no ip dhcp snooping trust		Reset the selected interfaces back to non-DHCP Option 82 / DHCPv6 Option 37 trust ports.
Switch(config-if-PORT-PORT)# no ip dhcp snooping server-trust		Reset the selected interfaces back to non-DHCP/DHCPv6 server trust ports.
Switch(config-if-PORT-PORT)# no ip dhcp snooping circuit		Disable the selected interfaces' DHCP Option 82 / DHCPv6 Option 37 Manual Circuit Id.
Switch(config-if-PORT-PORT)# no ip dhcp snooping circuit id		Clear DHCP Option 82 / DHCPv6 Option 37 Circuit Id.
Switch(config-if-PORT-PORT)# no ip dhcp snooping circuit formatted		Disable Formatted Option 82 / DHCPv6 Option 37 Circuit Id for the selected interfaces.



## 8. Setup IGMP snooping/MLD sub-commands

Command	Parameter	Description
Switch(config-if-POR-PORT)# ip igmp filter		Enable IGMP filter for the selected ports.
Switch(config-if-POR-PORT)# ip igmp filter profile [profile_name]	[profile_name]	Assign the selected ports to an IGMP filter profile.  <b>Note : Need to create an IGMP filter profile first under the igmp global configuration mode before assigning it.</b>
Switch(config-if-POR-PORT)# ip igmp max-groups [1-512]	[1-512]	Specify the maximum groups number of multicast streams to the selected ports.
Switch(config-if-POR-PORT)# ip igmp static-multicast-ip [E.F.G.H   E:F:G:H:I:J:K:L] vlan [1-4094]	[E.F.G.H   E:F:G:H:I:J:K:L]	Create/specify a static multicast IP and the specified VLAN entry to the selected port.  <b>Note : Only one port could be assigned at a time.</b>
	[1-4094]	Specify a VLAN ID.
No command		
Switch(config-if-POR-PORT)# no ip igmp filter		Disable IGMP filter for the selected interfaces.
Switch(config-if-POR-PORT)# no ip igmp filter profile [profile_name]	[profile_name]	Remove the specified profile from the selected ports.
Switch(config-if-POR-PORT)# no ip igmp max-groups		Reset the maximum number of multicast streams back to the default (512 channels).
Switch(config-if-POR-PORT)# no ip igmp static-multicast-ip [E.F.G.H   E:F:G:H:I:J:K:L] vlan [1-4094]	[E.F.G.H   E:F:G:H:I:J:K:L]	Remove this static multicast IP  <b>Note : Only one port could be set at a time.</b>
	[1-4094]	Remove the specified VLAN ID.

## 9. Setup IP source guard

Command	Parameter	Description
Switch(config-if-POR-PORT)# ip sourceguard [dhcp   fixed-ip]	[dhcp   fixed-ip]	Specify the authorized access type as either DHCP or fixed-IP for the selected ports.  <b>dhcp:</b> DHCP server assigns IP address.  <b>fixed IP:</b> Only Static IP (Create Static IP table first).
Switch(config-if-POR-PORT)# ip sourceguard static-ip [A.B.C.D   A:B:C:D:E:F:G:H] vlan [1-4094]	[A.B.C.D   A:B:C:D:E:F:G:H]	Add a static IPv4/IPv6 address to static IP address table.  <b>Note : Only one port could be assigned at a time.</b>
	[1-4094]	Specify VLAN ID.  <b>Note : Static IP can only be configured when IP sourceguard is set to fixed-ip.</b>
No command		
Switch(config-if-POR-PORT)# no ip sourceguard		Reset IP sourceguard setting back to the default (unlimited).  <b>unlimited:</b> Non-Limited (Allows both static IP and DHCP-assigned IP). This is the default setting.

## 10. Enable loop-detection per port.

Command	Parameter	Description
Switch(config-if-POR-PORT)# loop-detection		Enable Loop Detection function on the selected port(s).
No command		
Switch(config-if-POR-PORT)# no loop-detection		Disable Loop Detection function on the selected port(s).

## 11. Configure MAC table learning and static MAC table.

Command	Parameter	Description
Switch(config-if-POR-PORT)# mac address-table static-mac [xx:xx:xx:xx:xx:xx] vlan [1-4094]	[xx:xx:xx:xx:xx:xx]	Specify a MAC address to the VLAN entry.  <b>Note : Only one port could be set at a time.</b>
	[1-4094]	Specify the VLAN where the packets with the Destination MAC address can be forwarded to the selected port.
Switch(config-if-POR-PORT)# mac learning		Enable MAC learning function of the selected port(s).

No command		
Switch(config-if-PORT)# no mac address-table static-mac [xx:xx:xx:xx:xx:xx] vlan [1-4094]	[xx:xx:xx:xx:xx:xx]	Remove the specified MAC address from the MAC address table.  <b>Note : Only one port could be set at a time.</b>
	[1-4094]	Remove the VLAN to which the specified MAC belongs.
Switch(config-if-PORT-PORT)# no mac learning		Disable MAC learning function of the selected port(s).

## 12. Configure media type.

Command	Parameter	Description
Switch(config-if-PORT-PORT)# media-type [sfp]	[sfp]	Configure the media type of the selected port(s) as SFP.
No command		
Switch(config-if-PORT-PORT)# no media-type		Configure the media type of the selected port(s) as copper.  <b>Note : Only port 25-28 can be configured as copper.</b>

## 13. Configure QoS rate limit.

Command	Parameter	Description
Switch(config-if-PORT-PORT)# qos rate-limit ingress [0,500-1000000]	[0,500-1000000]	Configure the <b>ingress</b> rate limit, from 500Kbps to 1000Mbps. 0:Disable
Switch(config-if-PORT-PORT)# qos rate-limit egress [0,500-1000000]	[0,500-1000000]	Configure the <b>egress</b> rate limit, from 500Kbps to 1000Mbps. 0:Disable
No command		
Switch(config-if-PORT-PORT)# no qos rate-limit ingress		Disable QoS ingress rate limit setting.
Switch(config-if-PORT-PORT)# no qos rate-limit egress		Disable QoS egress rate limit setting.

#### 14. Shutdown interface.

Command	Parameter	Description
Switch(config-if-POR-PORT)# shutdown		Disable the selected interfaces.
<b>No command</b>		
Switch(config-if-POR-PORT)# no shutdown		Enable the selected interfaces.

#### 15. Configure RSTP parameters per port.

Command	Parameter	Description
Switch(config-if-POR-PORT)# spanning-tree		Enable spanning-tree protocol on the selected interfaces.
Switch(config-if-POR-PORT)# spanning-tree cost [0-2000000000]	[0-2000000000]	Specify the path cost value on the selected interfaces.
Switch(config-if-POR-PORT)# spanning-tree priority [0-15]	[0-15]	Specify priority value on the selected interfaces.  <b>0=0, 1=16, 2=32, 3=48, 4=64, 5=80, 6=96, 7=112, 8=128, 9=144, 10=160, 11=176, 12=192, 13=208, 14=224, 15=240</b>
Switch(config-if-POR-PORT)# spanning-tree edge		Set the selected interfaces to edge ports.
Switch(config-if-POR-PORT)# spanning-tree p2p [forced_true forced_false auto]	[forced_true forced_false auto]	Set the selected interfaces to non-point to point ports (forced_false) or allow the Managed Switch to detect point to point status automatically (auto). By default, physical ports are set to point to point ports (forced_true).
<b>No command</b>		
Switch(config-if-POR-PORT)# no spanning-tree		Disable spanning-tree protocol on the selected interfaces.
Switch(config-if-POR-PORT)# no spanning-tree cost		Reset the cost value back to the default.
Switch(config-if-POR-PORT)# no spanning-tree priority		Reset the priority value back to the default.
Switch(config-if-POR-PORT)# no spanning-tree edge		Reset the selected interfaces back to non-edge ports.

Switch(config-if-POR- PORT)# no spanning-tree p2p		Reset the selected interfaces back to point to point ports (forced _ true).
--	--	---

## 16. Set up port speed.

Command	Parameter	Description
Switch(config-if-POR- PORT)# speed [1000 100 10]	[1000 100 10]	Configure the port speed as 1000Mbps, 100Mbps or 10Mbps.  <b>Note1: Speed can only be configured when auto-negotiation is disabled.</b>  <b>Note2: Fiber ports cannot be configured as 10Mbps.</b>  <b>Note3: Copper ports cannot be configured as 1000Mbps.</b>
<b>No command</b>		
Switch(config-if-POR- PORT)# no speed		Reset the port speed setting back to the default.

## 17. Set up VLAN parameters per port.

Command	Parameter	Description
Switch(config-if-POR- PORT)# vlan dot1q-vlan access-vlan [1- 4094]	[1-4094]	Specify the selected ports' Access-VLAN ID (PVID).
Switch(config-if-POR- PORT)# vlan dot1q-vlan trunk-vlan [1- 4094]	[1-4094]	Specify the selected ports' Access-VLAN ID (PVID).
Switch(config-if-POR- PORT)# vlan dot1q-vlan mode access		Set the selected ports to the access mode (untagged).
Switch(config-if-POR- PORT)# vlan dot1q-vlan mode trunk		Set the selected ports to the trunk mode (tagged).
Switch(config-if-POR- PORT)# vlan dot1q-vlan mode trunk native		Enable native VLAN for untagged traffic on the selected port. (Tagged and untagged)  <b>Note : When you assign a default Access-VLAN to the trunk-native port, all untagged traffic travels on the default Access-VLAN for the trunk- native port, and all untagged traffic is assumed to belong to this Access- VLAN.</b>
Switch(config-if-POR- PORT)# vlan port-based [name]	[name]	Set the selected ports to a specified port- based VLAN.  <b>Note :</b>

		<b>Need to create a port-based VLAN group under the VLAN global configuration mode before joining it.</b>
<b>No command</b>		
Switch(config-if-PORt-PORt)# no vlan dot1q-vlan access-vlan		Reset the selected ports' PVID back to the default setting.
Switch(config-if-PORt-PORt)# no vlan dot1q-vlan trunk-vlan [1-4094]	[1-4094]	Remove the specified trunk VLAN ID from the selected ports.
Switch(config-if-PORt-PORt)# no vlan dot1q-vlan mode		Reset the selected ports' 802.1q VLAN mode back to the default setting (Access Mode).
Switch(config-if-PORt-PORt)# no vlan port-based [name]	[name]	Remove the selected ports from the specified port-based VLAN.

## 18. Set up MAC Limit.

Command	Parameter	Description
Switch(config-if-PORt-PORt)# security mac-limit		Enable MAC Limit function of the selected port(s).
Switch(config-if-PORt-PORt)# security mac-limit maximum [1-50]	[1-50]	Specify the maximum number of source MAC address that can be learned for the selected port(s). This is to set number of threshold within which MAC address can be learned. After it reaches the threshold, any other incoming MAC address would be dropped or port would be shutdown until the recovery mechanism activates.  The valid range of number that can be configured is 1~50.
<b>No Command</b>		
Switch(config-if-PORt-PORt)# no security mac-limit		Disable MAC Limit function of the selected port(s).
Switch(config-if-PORt-PORt)# no security mac-limit maximum		Reset the maximum number of source MAC address that can be learned for the selected port(s) back to the default "1".

## 2.6.30 Show interface statistics Command

The command of “show interface statistics”, displaying port traffic statistics, port packet error statistics and port analysis history, can be used either in Privileged mode or Global Configuration mode. This command is useful for network administrators to diagnose and analyze the real-time conditions of each port traffic.

Command	Parameters	Description
Switch(config)# show interface		Show the overall interface configurations.
Switch(config)# show interface [port_list]	[port_list]	Show interface configurations of selected ports.
Switch(config)# show interface statistics analysis		Display packets analysis (events) for each port.
Switch(config)# show interface statistics analysis [port_list]	[port_list]	Display packets analysis for the selected ports.
Switch(config)# show interface statistics analysis rate		Display packets analysis (rates) for each port.
Switch(config)# show interface statistics analysis rate [port_list]	[port_list]	Display packets analysis (rates) for the selected ports.
Switch(config)# show interface statistics clear		Clear all statistics counters.
Switch(config)# show interface statistics clear [port_list]	[port_list]	Clear statistics counters of selected ports.
Switch(config)# show interface statistics error		Display error packets statistics (events) for each port.
Switch(config)# show interface statistics error [port_list]	[port_list]	Display error packets statistics (events) for the selected ports.
Switch(config)# show interface statistics error rate		Display error packets statistics (rates) for each port.
Switch(config)# show interface statistics error rate [port_list]	[port_list]	Display error packets statistics (rates) for the selected ports.
Switch(config)# show interface statistics traffic		Display traffic statistics (events) for each port.
Switch(config)# show interface statistics traffic [port_list]	[port_list]	Display traffic statistics (events) for the selected ports.
Switch(config)# show interface statistics traffic rate		Display traffic statistics (rates) for each port.
Switch(config)# show interface statistics traffic rate [port_list]	[port_list]	Display traffic statistics (rates) for the selected ports.

## 2.6.31 Show sfp Command

When you slide-in SFP transceiver, detailed information about this module can be viewed by issuing this command.

Command	Description
Switch(config)# show sfp information	Display SFP information, including the speed of transmission, the distance of transmission, vendor name, vendor PN, and vendor SN.
Switch(config)# show sfp state	Show the slide-in SFP modules' current temperature, Tx Bias power, TX power, RX power and voltage.

## 2.6.32 Show running-config & start-up-config & default-config Command

Command	Parameters	Description
Switch(config)# show running-config		Show the difference between the running configuration and the default configuration.
Switch(config)# show running-config include [string]	[string]	Specify the keyword to search for the matched information from the difference between the running configuration and the default configuration.
Switch(config)# show running-config full		Show the full running configuration currently used in the Manged Switch. Please note that you must save the running configuration into your switch flash before rebooting or restarting the device.
Switch(config)# show running-config full include [string]	[string]	Specify the keyword to search for the matched information from the full running configuration.
Switch(config)# show running-config interface [port_list]	[port_list]	Show the running configuration currently used in the Manged Switch for the the specific port(s).
Switch(config)# show running-config interface [port_list] include [string]		Specify the keyword to search for the matched information from the running configuration of the specific port(s).



Switch(config)# show start-up-config		Show the difference between the startup configuration and the default configuration.
Switch(config)# show start-up-config include [string]	[string]	Specify the keyword to search for the matched information from the difference between the startup configuration and the default configuration.
Switch(config)# show start-up-config full		Display the system configuration stored in flash.
Switch(config)# show start-up-config full include [string]	[string]	Specify the keyword to search for the matched information from the full startup configuration.
Switch(config)# show default-config		Display the system factory default configuration.
Switch(config)# show default-config include [string]	[string]	Specify the keyword to search for the matched information from the system factory default configuration.

### 2.6.33 Show arp Command

Command	Description
Switch# show arp	Show arp information.
Switch(config)# show arp	Show arp information.

### 2.6.34 Show log Command

Command	Parameters	Description
Switch# show log		Show all event logs currently stored in the Managed Switch.
Switch# show log clear		Remove all event logs currently stored in the Managed Switch.
Switch(config)# show log		Show all event logs currently stored in the Managed Switch.
Switch(config)# show log clear		Remove all event logs currently stored in the Managed Switch.

## 2.6.35 Show log link-flap Command

Command	Parameters	Description
Switch# show log link-flap [port_number]	[port_number]	Show the specific port's log history of trigger events such as the port link flap (a port's linkdown or linkup), the count of port's port link flap, the reason that causes these triggered events, the time duration that the port link flap lasts, Rx power(dBm) of SFP ports, and so on.
Switch# show log link-flap [port_number] clear		Remove all logs of the triggered event for the specified port.
Switch(config)# show log link-flap [port_number]	[port_number]	Show the specific port's log history of trigger events such as the port link flap (a port's linkdown or linkup), the count of port's port link flap, the reason that causes these triggered events, the time duration that the port link flap lasts, Rx power(dBm) of SFP ports, and so on.
Switch(config)# show log link-flap [port_number] clear		Remove all logs of the triggered event for the specified port.

### 3. SNMP NETWORK MANAGEMENT

The Simple Network Management Protocol (SNMP) is an application-layer protocol that facilitates the exchange of management information between network devices. It is part of the TCP/IP protocol suite. SNMP enables network administrators to manage network performance, find and solve network problems, and plan for network growth.

SNMP consists of the following key components.

**Managed device** is a network node that contains SNMP agent. Managed devices collect and store management information and make this information available to NMS using SNMP. Managed device can be switches/Hub, etc..

**MIB** (Management Information Base) defines the complete manageable entries of the managed device. These MIB entries can be either read-only or read-write. For example, the System Version is read-only variables. The Port State Enable or Disable is a read-write variable and a network administrator can not only read but also set its value remotely.

**SNMP Agent** is a management module resides in the managed device that responds to the SNMP Manager request.

**SNMP Manager/NMS** executes applications that monitor and control managed devices. NMS provide the bulk of the processing and memory resources required for the complete network management. SNMP Manager is often composed by desktop computer/work station and software program such like HP OpenView.

Totally 4 types of operations are used between SNMP Agent & Manager to change the MIB information. These 4 operations all use the UDP/IP protocol to exchange packets.

**GET:** This command is used by an SNMP Manager to monitor managed devices. The SNMP Manager examines different variables that are maintained by managed devices.

**GET Next:** This command provides traversal operation and is used by the SNMP Manager to sequentially gather information in variable tables, such as a routing table.

**SET:** This command is used by an SNMP Manager to control managed devices. The NMS changes the values of variables stored within managed devices.

**Trap:** Trap is used by the managed device to report asynchronously a specified event to the SNMP Manager. When certain types of events occur, a managed device will send a trap to alert the SNMP Manager.


The system built-in management module also supports SNMP management. Users must install the MIB file before using the SNMP based network management system. The MIB file is on a disc or diskette that accompanies the system. The file name extension is .mib, which SNMP based compiler can read.

Please refer to the appropriate documentation for the instructions of installing the system private MIB.

## 4. WEB MANAGEMENT

You can manage the Managed Switch via a web browser. However, you must first assign a unique IP address to the Managed Switch before doing so. Through the connection of any SFP ports using the fiber cable or any TP ports using a RJ45 cable, you will be allowed to have an access of the Managed Switch and set up the IP address for the first time. (Note: The Managed Switch can be reached with the default IP address of “**192.168.0.1**”. You can change the IP address of the switch to the desired one later in its **Network Management** menu.)

Initiate a web browser and input **http:// 192.168.0.1** to enter the Managed Switch system. Once you gain the access, the following login window will appear. Also input the default administrator username **admin** and keep the administrator password field blank (By default, no password is required.) to login into the main screen page.

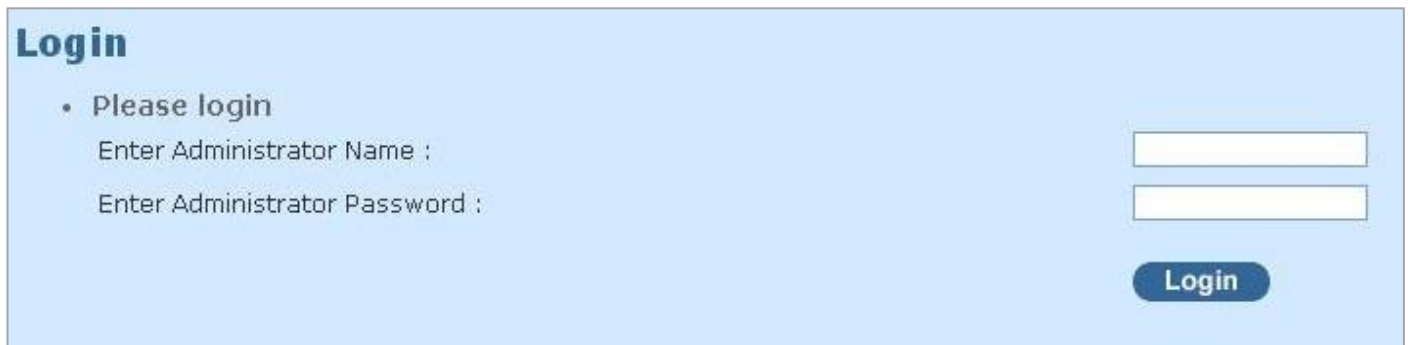A screenshot of a web browser login page. The page has a light blue background. At the top left, the word "Login" is written in a bold, dark blue font. Below it, there is a bullet point followed by the text "Please login". Underneath this, there are two labels: "Enter Administrator Name :" and "Enter Administrator Password :". To the right of these labels are two white rectangular input fields. Below the input fields is a dark blue button with the word "Login" in white text.

After you login successfully, the screen with the Main Menu will show up. The functions of Main Menu in the Web Management are similar to those described at the Console Management.

On the top side, it shows the front panel of Managed Switch. On this front panel image, the corresponding LED of the link-up port will display in green or orange color upon the transmitting speed; as to the link-down ports, their LEDs will be dark. The link-up TP or SFP port will show different module image on it. Likewise, if the port is disconnected, it will become dark as well or a white module image is shown on SFP port if a module exists.

Additionally, there are clicking functions on this front panel image. When clicking on any port of this panel image, you will directly jump to the **Port Configuration** webpage belonging to the clicked port.

In this port configuration webpage, it shows the basic information of the clicked port. For more details about this, please refer to [Section 4.4.2 “Port Configuration”](#).



The image shows the front panel of an FOS-3128 switch with 24 ports and a web management interface. The interface has a sidebar menu on the left and a main content area on the right.

**System Information**

Company Name	Connection Technology Systems		
System Object ID	.1.3.6.1.4.1.9304.100.3128		
System Contact	info@ctsystem.com		
System Name	FOS-3128		
System Location	18F-6, No. 79, Sec. 1, Xintai 5th Rd., Xizhi Dist., Taiwan		
DHCP/DHCPv6 Vendor ID	FOS-3128		
Model Name	FOS-3128		
Host Name	FOS-3128		
Current Boot Image	Image-2		
Configured Boot Image	Image-2		
Image-1 Version	1.00.29		
Image-2 Version	1.00.29		
M/B Version	A01		
Serial Number	ABBCDDEF0573128	Date Code	20190507
Up Time	0 day 00:01:39	Local Time	Not Available
CPU Temperature	39.0 °C <a href="#">View Details</a>		

FAN State	Fan 1, Fan 2 failed				
Power A	installed	Type	AC	State	NG
Power B	N/A	Type		State	

In the Main Menu, there are 9 main functions, including System Information, User Authentication, Network Management, Switch Management, Switch Monitor, System Utility, Save Configuration, Reset System and Logout contained. We will respectively describe their sub-functions in the following sections of this chapter.

- **System Information:** Name the Managed Switch, specify the location and check the current version of information.
- **User Authentication:** View the registered user list, add a new user or remove an existing user.
- **Network Management:** Set up or view Managed Switch's IP address and related information required for network management applications.
- **Switch Management:** Set up the switch/port configuration, VLAN configuration and other functions.
- **Switch Monitor:** View the operation status and traffic statistics of the ports.
- **System Utility:** Ping, do the firmware upgrade, load the factory default settings, etc..
- **Save Configuration:** Save all changes to the system.

- **Reset System:** Reset the Managed Switch.
- **Logout:** Log out the management interface.

## 4.1 System Information

Select **System Information** from the **Main Menu** and then the following screen shows up.

**System Information**

Company Name	Connection Technology Systems		
System Object ID	.1.3.6.1.4.1.9304.100.3128		
System Contact	info@ctsystem.com		
System Name	FOS-3128		
System Location	18F-6, No. 79, Sec. 1, Xintai 5th Rd., Xizhi Dist., Taiwan		
DHCP/DHCPv6 Vendor ID	FOS-3128		
Model Name	FOS-3128		
Host Name	FOS-3128		
Current Boot Image	Image-2		
Configured Boot Image	Image-2		
Image-1 Version	1.00.29		
Image-2 Version	1.00.29		
M/B Version	A01		
Serial Number	ABBCDDEF0573128	Date Code	20190507
Up Time	0 day 00:31:36	Local Time	Not Available
CPU Temperature	38.5 °C <a href="#">View Details</a>		

FAN State	Fan 1, Fan 2 failed				
Power A	installed	Type	AC	State	NG
Power B	N/A	Type		State	

OK

**Company Name:** Enter a company name for this Managed Switch.

**System Object ID:** Display the predefined System OID.

**System Contact:** Enter the contact information for this Managed Switch.

**System Name:** Enter a descriptive system name for this Managed Switch.

**System Location:** Enter a brief location description for this Managed Switch.

**DHCP/DHCPv6 Vendor ID:** Vendor Class Identifier that is used for DHCP/DHCPv6 relay agent function. Enter the user-defined DHCP vendor ID, and up to 55 alphanumeric characters can be accepted. Please make sure you have an exact DHCP Vendor ID with the value specified in “vendor-classes” in your dhcpd.conf file. For detailed information, see [Appendix B](#).

**Model Name:** Display the product's model name.

**Host Name:** Enter the product's host name.

**Current Boot Image:** The image that is currently being used.

**Configured Boot Image:** The image you would like to use after rebooting.

**Image-1 Version:** Display the firmware version 1 (image-1) used in this device.

**Image-2 Version:** Display the firmware version 2 (image-2) used in this device.

**M/B Version:** Display the main board version.

**Serial Number:** Display the serial number of this Managed Switch.

**Date Code:** Display the date code of the Managed Switch firmware.

**Up Time:** Display the up time since last restarting.

**Local Time:** Display the local time of the system.

**CPU Temperature:** Display the current CPU temperature of this device. In case CPU temperature is shown in red color, it stands that CPU temperature currently detected is higher than the **High Temperature Threshold** value you configure. For more details on this or do the further alarm notification settings for CPU temperature of the system, click **View Details** to directly jump to the **CPU Temperature Status** webpage under **Switch Monitor** menu.

**FAN State:** Display the status of FAN1 and FAN2.

**Power A/B:** Display the installation status, the type of power source, and state of Power A and Power B.



## 4.2 User Authentication


To prevent any unauthorized operations, only registered users are allowed to operate the Managed Switch. Users who would like to operate the Managed Switch need to create a user account first.

To view or change current registered users, select **User Authentication** from the **Main Menu** and then the following screen page shows up.



The screenshot shows a web interface titled "User Authentication". It features a "Password Encryption" label followed by a dropdown menu currently set to "Disabled". Below this, a note states: "Note !! When configure Password Encryption option to disabled , all existing password will be clear. Note to configure user password again otherwise all user password will be empty." At the bottom left is an "OK" button.

**Password Encryption:** Pull down the menu of **Password Encryption** to disable or enable MD5 (Message-Digest Algorithm). It is a widely used cryptographic hash function producing a 128-bit (16-byte) hash value, typically expressed in text format as a 32 digit hexadecimal number. The default setting is disabled.

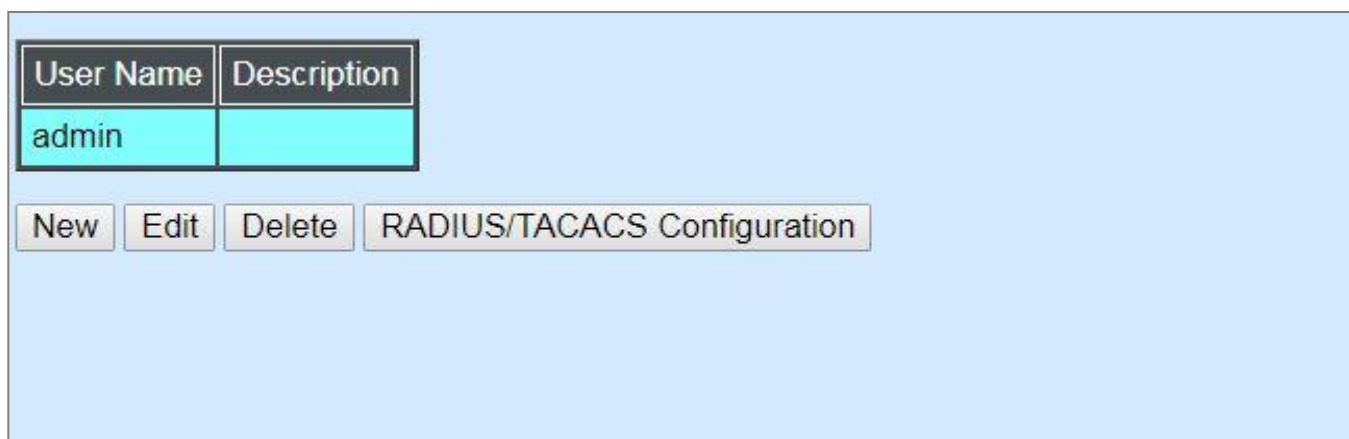

The screenshot shows a web interface for managing users. It contains a table with two columns: "User Name" and "Description". The "User Name" column has one entry, "admin". Below the table are four buttons: "New", "Edit", "Delete", and "RADIUS/TACACS Configuration".

User Name	Description
admin	

Click **New** to add a new user and then the following screen page appears. Up to 10 users can be registered.

Click **Edit** to modify a registered user's settings.

Click **Delete** to remove the selected registered user from the user list.

Click **RADIUS/TACACS Configuration** for authentication setting via RADIUS/TACACS+. For more details on these settings, please refer to Section 4.2.1.

User Authentication	
Current/Total/Max Users	2/ 1/10
Account State	Disabled ▼
User Name	<input type="text"/>
Password	<input type="password"/>
Retype Password	<input type="password"/>
Description	<input type="text"/>
Console Level	Read Only ▼
OK	

**Current/Total/Max Users:** View-only field.

**Current:** This shows the number of current registered user.

**Total:** This shows the amount of total users who have already registered.

**Max:** This shows the maximum number available for registration. The maximum number is 10.

**Account State:** Enable or disable this user account.

**User Name:** Specify the authorized user login name. Up to 20 alphanumeric characters can be accepted.

**Password:** Enter the desired user password. Up to 20 alphanumeric characters can be accepted.

**Retype Password:** Enter the password again for double-checking.

**Description:** Enter a unique description for this user. Up to 35 alphanumeric characters can be accepted. This is mainly used for reference only.

**Console Level:** Select the desired privilege level for the management operation from the pull-down menu. Three operation levels of privilege are available in the Managed Switch:

**Administrator:** Own the full-access right. The user can maintain user account as well as system information, load the factory default settings, and so on.

**Read & Write:** Own the partial-access right. The user is unable to modify user account, system information and items under System Utility menu.

**Read Only:** Allow to view only.

---

**NOTE:**

1. To prevent incautious operations, users cannot delete their own account, modify their own user name and change their own account state.
  2. The acquired hashed password from backup config file is not applicable for user login on CLI/Web interface.
-

- 
3. We strongly recommend not to alter off-line Auth Method setting in backup configure file.
  4. If Auth-Method is enabled and do firmware downgrade, users must reset default config.
- 

## 4.2.1 RADIUS/TACACS+ Configuration

Click **RADIUS/TACACS Configuration** in the User Authentication webpage and then the following screen page appears.

**RADIUS/TACACS Configuration**

Authentication Disabled ▾

RADIUS	
RADIUS Secret Key	default
RADIUS Port	1812 (1025-65535)
RADIUS Retry Times	0 ▾
RADIUS Server IP/IPv6 Address	0.0.0.0
2nd RADIUS Server IP/IPv6 Address	0.0.0.0

TACACS	
TACACS Secret Key	default
TACACS Port	49 (49,1025-65535)
TACACS Retry Times	0 ▾
TACACS Server IP/IPv6 Address	0.0.0.0
2nd TACACS Server IP/IPv6 Address	0.0.0.0

OK

**Authentication:** From the **Authentication** pull-down menu, you can choose **RADIUS** or **TACACS** option to respectively enable authentication via RADIUS or TACACS+. To disable the authentication, just select **Disabled** option from this menu.

When **RADIUS Authentication** is selected, the user login will be upon those settings on the RADIUS server(s).

**NOTE:** For advanced RADIUS Server setup, please refer to [APPENDIX A](#) or the “free RADIUS readme.txt” file on the disc provided with this product.

RADIUS	
RADIUS Secret Key	<input type="text" value="default"/>
RADIUS Port	<input type="text" value="1812"/> (1025-65535)
RADIUS Retry Times	<input type="text" value="0"/> ▼
RADIUS Server IP/IPv6 Address	<input type="text" value="0.0.0.0"/>
2nd RADIUS Server IP/IPv6 Address	<input type="text" value="0.0.0.0"/>

**RADIUS Secret Key:** The word to encrypt data of being sent to RADIUS server.

**RADIUS Port:** The RADIUS service port on RADIUS server.

**RADIUS Retry Times:** Times of trying to reconnect if the RADIUS server is not reachable.

**RADIUS Server IP/IPv6 Address:** IPv4/IPv6 address of the primary RADIUS server.

**2nd RADIUS Server IP/IPv6 Address:** IPv4/IPv6 address of the secondary RADIUS server.

When **TACACS Authentication** is selected, the user login will be upon those settings on the TACACS server(s).

TACACS	
TACACS Secret Key	<input type="text" value="default"/>
TACACS Port	<input type="text" value="49"/> (49,1025-65535)
TACACS Retry Times	<input type="text" value="0"/> ▼
TACACS Server IP/IPv6 Address	<input type="text" value="0.0.0.0"/>
2nd TACACS Server IP/IPv6 Address	<input type="text" value="0.0.0.0"/>

**TACACS Secret Key:** The word to encrypt data of being sent to TACACS server.

**TACACS Port:** The TACACS service port on TACACS server.

**TACACS Retry Times:** Times of trying to reconnect if the TACACS server is not reachable.

**TACACS Server IP/IPv6 Address:** IPv4/IPv6 address of the primary TACACS server.

**2nd TACACS Server IP/IPv6 Address:** IPv4/IPv6 address of the secondary TACACS server.

## 4.3 Network Management

In order to enable network management of the Managed Switch, proper network configuration is required. To do this, click the folder **Network Management** from the **Main Menu** and then the following screen page appears.

**FOS-3128**

- System Information
- User Authentication
- Network Management**
  - Network Configuration
  - System Service Configuration
  - RS232/Telnet/Console Config
  - Time Server Configuration
  - Device Community
  - SNMPv3 USM User
  - Trap Destination
  - Trap Configuration
  - Syslog Configuration
- Switch Management
- Switch Monitor
- System Utility
  - Save Configuration
  - Reset System
  - Logout

**Network Configuration**

☒ enable IPv4

MAC Address	00:06:19:57:31:28	
Configuration Type	Manual ▾	Current State
IP Address	192.168.0.1	192.168.0.1
Subnet Mask	255.255.255.0	255.255.255.0
Gateway	0.0.0.0	0.0.0.0
Attain DNS	Automatically ▾	
DNS1	0.0.0.0	0.0.0.0
DNS2	0.0.0.0	0.0.0.0
DNS3	0.0.0.0	0.0.0.0

IPv4 DHCP Recycle

IPv4 DHCP Auto Recycle

IPv4 DHCP Auto Recycle Port

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

1. **Network Configuration:** Set up the required IP configuration of the Managed Switch.
2. **System Service Configuration:** Enable or disable the specified network services.
3. **RS232/Telnet/Console Configuration:** View the RS-232 serial port setting, specific Telnet and Console services.
4. **Time Server Configuration:** Set up the time server's configuration.
5. **Device Community:** View the registered SNMP community name list. Add a new community name or remove an existing community name.
6. **SNMPv3 USM User:** Allow administrator to configure password and encryption method of user accounts generated in User Authentication for SNMPv3.
7. **Trap Destination:** View the registered SNMP trap destination list. Add a new trap destination or remove an existing trap destination.
8. **Trap Configuration:** View the Managed Switch trap configuration. Enable or disable a specific trap.
9. **Syslog Configuration:** Set up the Mail-attempt Log server's configuration.



### 4.3.1 Network Configuration

Click the option **Network Configuration** from the **Network Management** menu and then the following screen page appears.

☒ enable IPv4

MAC Address	00:06:19:57:31:28	
Configuration Type	Manual ▾	Current State
IP Address	192.168.0.1	192.168.0.1
Subnet Mask	255.255.255.0	255.255.255.0
Gateway	0.0.0.0	0.0.0.0
Attain DNS	Automatically ▾	
DNS1	0.0.0.0	0.0.0.0
DNS2	0.0.0.0	0.0.0.0
DNS3	0.0.0.0	0.0.0.0

**Enable IPv4:** Click the checkbox in front of **enable IPv4** to enable IPv4 function on the Managed Switch.

**MAC Address:** This view-only field shows the unique and permanent MAC address assigned to the Managed switch. You cannot change the Managed Switch's MAC address.

**Configuration Type:** There are two configuration types that users can select from the pull-down menu, "**DHCP**" and "**Manual**". When "**DHCP**" is selected and a DHCP server is also available on the network, the Managed Switch will automatically get the IP address from the DHCP server. If "**Manual**" is selected, users need to specify the IP address, Subnet Mask and Gateway.

**IP Address:** Enter the unique IP address of this Managed Switch. You can use the default IP address or specify a new one when the situation of address duplication occurs or the address does not match up with your network. (The default factory setting is 192.168.0.1.)

**Subnet Mask:** Specify the subnet mask. The default subnet mask values for the three Internet address classes are as follows:

- Class A: 255.0.0.0
- Class B: 255.255.0.0
- Class C: 255.255.255.0

**Gateway:** Specify the IP address of a gateway or a router, which is responsible for the delivery of the IP packets sent by the Managed Switch. This address is required when the Managed Switch and the network management station are on different networks or subnets. The default value of this parameter is 0.0.0.0, which means no gateway exists and the network management station and Managed Switch are on the same network.

**Attain DNS:** The Managed Switch supports DNS (Domain Name System) client function to re-route the mnemonic name address to DNS server in order to get its associated IP address for the access of Internet. With this, the Managed Switch can translate a mnemonic name address into an IP address.

By pulling down the menu of **Attain DNS**, the user can manually specify a DNS IP address to **DNS1** and/or **DNS2** and/or **DNS3** for the Managed Switch when the option "**Manual**" is selected. If the option "**Automatically**" is selected, a DNS IP address will be automatically assigned by DHCP server for the Managed Switch while DHCP is enabled.

**Current State:** This view-only field shows currently assigned IP address (by DHCP or manual), Subnet Mask and Gateway of the Managed Switch.

IPv4 DHCP Recycle		<input type="button" value="Recycle"/>	
IPv4 DHCP Auto Recycle		<input type="button" value="Disabled ▼"/>	

IPv4 DHCP Auto Recycle Port

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

**IPv4 DHCP Recycle:** Click on **Recycle** manually, DHCP Release packets and Discover packets will be sent to DHCP server. And it will ask for IP address from DHCP server again. Please note that this parameter is just one-time setting and will not be saved into the configuration file of the Managed Switch.

---

**NOTE:** Need to choose "DHCP" as the configuration type before running this function.

---

**IPv4 DHCP Auto Recycle:** Enable or disable IPv4 DHCP Auto Recycle function globally.

**IPv4 DHCP Auto Recycle Port:** Enable IPv4 DHCP Auto Recycle function on the specified ports. Only when one of these specific link-up port is switched from link-down into link-up status, DHCP Release packets and Discover packets will be sent to DHCP server. And it will ask for IP address from DHCP server again.



enable IPv6		
Auto-configuration	Enabled ▾	Current State
IPv6 Link-local Address/Prefix length	fe80::206:19ff:fe57:3128/64	
IPv6 Global Address/Prefix length	::/64	
IPv6 Gateway	::	
Attain IPv6 DNS	Automatically ▾	
IPv6 DNS1	::	::
IPv6 DNS2	::	::
IPv6 DNS3	::	::
DHCPv6	Enable force mode ▾	
Rapid Commit	<input checked="" type="checkbox"/>	
DHCPv6 unique identifier(DUID)		

**Enable IPv6:** Click the checkbox in front of **enable IPv6** to enable IPv6 function on the Managed Switch.

**Auto-configuration:** Enable Auto-configuration for the Managed Switch to get IPv6 address automatically or disable it for manual configuration.

**IPv6 Link-local Address/Prefix length:** The Managed Switch will form a link-local address from its MAC address and the link-local prefix FE80::/10. This is done by putting the prefix into the leftmost bits and the MAC address (in EUI-64 format) into the rightmost bits, and if there are any bits left in between, those are set to zero.

**IPv6 Global Address/Prefix length:** This is done in the same fashion as the link-local address, but instead of the link-local prefix FE80:: it will use the prefix supplied by the router and put it together with its identifier (which by default is the MAC address in EUI-64 format).

**IPv6 Gateway:** Specify the IP address of a gateway or a router, which is responsible for the delivery of the IP packets sent by the Managed Switch. This address is required when the Managed Switch and the network management station are on different networks or subnets.

**Attain IPv6 DNS:** The Managed Switch supports DNS (Domain Name System) client function to re-route the mnemonic name address to DNS server in order to get its associated IP address for the access of Internet. With this, the Managed Switch can translate a mnemonic name address into an IP address.

By pulling down the menu of **Attain DNS**, the user can manually specify a DNS IPv6 address to **IPv6 DNS1** and/or **IPv6 DNS2** and/or **IPv6 DNS3** for the Managed Switch when the option "**Manual**" is selected. If the option "**Automatically**" is selected, a DNS IP address will be automatically assigned by DHCP server for the Managed Switch while DHCP is enabled.

## DHCPv6: Enable or disable DHCPv6 function

**Disable:** Disable DHCPv6.

**Enable auto mode:** Configure DHCPv6 function in auto mode.

**Enable force mode:** Configure DHCPv6 function in force mode.

**Rapid Commit:** Check to enable Rapid Commit which allows the server and client to use a two-message exchange to configure clients, rather than the default four-message exchange,

**DHCPv6 unique identifier (DUID):** View-only field shows The DHCP Unique Identifier (DUID).

**Current State:** This View-only field shows currently assigned IPv6 address (by auto-configuration or manual) and Gateway of the Managed Switch.

IP Source Binding:

Source Binding state		Disabled ▾
Index	State	IP/IPv6 Address
1	Disabled ▾	0.0.0.0
2	Disabled ▾	0.0.0.0
3	Disabled ▾	0.0.0.0
4	Disabled ▾	0.0.0.0
5	Disabled ▾	0.0.0.0
6	Disabled ▾	0.0.0.0
7	Disabled ▾	0.0.0.0
8	Disabled ▾	0.0.0.0
9	Disabled ▾	0.0.0.0
10	Disabled ▾	0.0.0.0
11	Disabled ▾	0.0.0.0
12	Disabled ▾	0.0.0.0

OK

**Source Binding state:** Globally enable or disable IP source binding.

**State:** Disable or enable the assigned IP address to reach the management.

**IP/IPv6 Address:** Specify the IP address for source binding.


---

**NOTE:** This Managed Switch also supports auto-provisioning function that enables DHCP clients to automatically download the latest Firmware and configuration image from the server. For information about how to set up a DHCP server, please refer to [APPENDIX B](#).

---

## 4.3.2 System Service Configuration

Click the option **System Service Configuration** from the **Network Management** menu and then the following screen page appears.

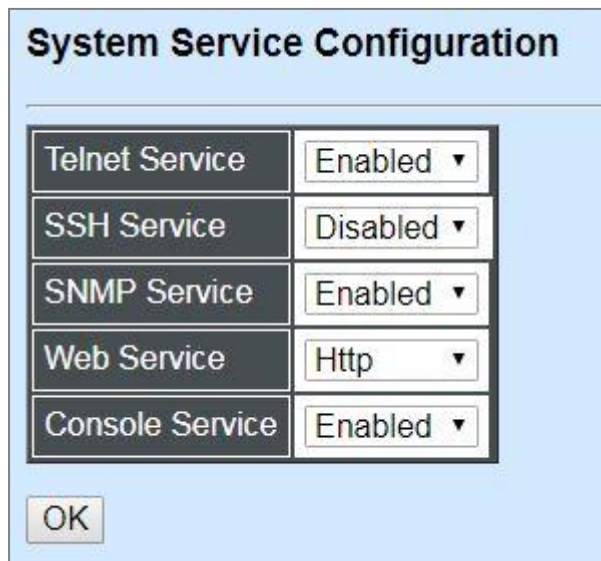

The image shows a 'System Service Configuration' dialog box with a light blue background. It contains a table with five rows, each representing a service and its status. The services are Telnet Service, SSH Service, SNMP Service, Web Service, and Console Service. The statuses are Enabled, Disabled, Enabled, Http, and Enabled respectively. Each status is shown in a dropdown menu. At the bottom left of the dialog box is an 'OK' button.

System Service Configuration	
Telnet Service	Enabled ▼
SSH Service	Disabled ▼
SNMP Service	Enabled ▼
Web Service	Http ▼
Console Service	Enabled ▼

OK

**Telnet Service:** To enable or disable the Telnet Management service.

**SSH Service:** To enable or disable the SSH Management service.

**SNMP Service:** To enable or disable the SNMP Management service.

**Web Service:** To enable or disable the Web Management service. Either **Http** or **Https** option can be selected to enable this service. The difference between these two options is as follows:

- When the **Http** option is chosen, the user is allowed to access the Managed Switch only by inputting its IP address with the format of `http://192.168.0.1` in URL.
- When the **Https** option is chosen, this communication protocol is encrypted using Transport Layer Security(TLS) or Secure Sockets Layer (SSL) for secure communication over a computer network.

HTTPS is provided for authentication of the accessed website and protection of the privacy and integrity of the exchanged data while in transit. It protects against attacks by hackers. The user is allowed to access the Managed Switch either by inputting its IP address with the format of `https://192.168.0.1` or `http://192.168.0.1` that will be automatically transferred into `https://192.168.0.1` in URL.

**Console Service:** To enable or disable the Console Management service.

### 4.3.3 RS232/Telnet/Console Configuration

Click the option **RS232/Telnet/Console Configuration** from the **Network Management** menu and then the following screen page appears.

RS232/Telnet/Console Configuration			
Baud Rate	9600bps		
Stop Bits	1		
Parity Check	None		
Word Length	8		
Flow Control	None		
Telnet Port	<input type="text" value="23"/>		
System Time Out	<input type="text" value="300"/> (1-1440)	Unit	Seconds ▼
Web Time Out	<input type="text" value="20"/> (1-1440) Minutes		
Console Login Fail Retry Times	<input type="text" value="3"/> (1-10) number of retries		
Console Login Fail Block Time	<input type="text" value="5"/> (1-120) Minutes		
<input type="button" value="OK"/>			

**Baud Rate:** 9600 bps, RS-232 setting, view-only field.

**Stop Bits:** 1, RS-232 setting, view-only field.

**Parity Check:** None, RS-232 setting, view-only field.

**Word Length:** 8, RS-232 setting, view-only field.

**Flow Control:** None, RS-232 setting, view-only field.

**Telnet Port:** Specify the desired TCP port number for the Telnet console. The default TCP port number of the Telnet is 23.

**System Time Out:** Specify the desired time that the Managed Switch will wait before disconnecting an inactive console/telnet session. Valid range:1-1440 seconds or minutes.

**Unit:** Specify the unit for the **System Time Out** parameter.

**Web Time Out:** Specify the desired time that the Managed Switch will wait before disconnecting an inactive web session. Valid range:1-1440 minutes.

**Console Login Fail Retry Times:** Specify the desired times that the Managed Switch will allow the user to retry to login the system via console if the console login fails. Valid range: 1-10.

**Console Login Fail Block Time:** Specify the desired time that the Managed Switch will unblock the console for user's login if the accumulated retries times exceed the value you set up in **Console Login Fail Retry Times** parameter.

## 4.3.4 Time Server Configuration

Click the option **Time Server Configuration** from the **Network Management** menu and then the following screen page appears.

**Time Server Configuration**

Time Synchronization	Disabled ▾
Time Server Domain Name	0.0.0.0
2nd Time Server Domain Name	0.0.0.0
Synchronization Interval	24 Hour ▾
Time Zone	UTC-11:00 Apia ▾
Daylight Saving Time	Disabled ▾

OK

NOTE: The offset of start time and end time should be greater than 1 hour, or the effect is unpredictable.

**Time Synchronization:** To enable or disable the time synchronization function.

**Time Server Domain Name:** Set up the domain name or IPv4/IPv6 address of the first NTP time server.

**2nd Time Server Domain Name:** Set up the domain name or IPv4/IPv6 address of the secondary NTP time server. When the first NTP time server is down, the Managed Switch will automatically connect to the secondary NTP time server.

**Synchronization Interval:** Set up the time interval to synchronize with the NTP time server.

**Time Zone:** Select the appropriate time zone from the pull-down menu.

**Daylight Saving Time:** Include “**Disabled**”, “**recurring**” and “**date**” three options to enable or disable the daylight saving time function. It is a way of getting more daytime hour(s) by setting the time to be hour(s) ahead in the morning.

**Daylight Saving Time Date Start:** If the “date” option is selected in Daylight Saving Time, click the pull-down menu to select the start date of daylight saving time.

**Daylight Saving Time Date End:** If the “date” option is selected in Daylight Saving Time, click the pull-down menu to select the end date of daylight saving time.

**Daylight Saving Time Recurring Star:** If the “recurring” option is selected in Daylight Saving Time, click the pull-down menu to select the recurring start date of daylight saving time.

**Daylight Saving Time Recurring End:** If the “recurring” option is selected in Daylight Saving Time, click the pull-down menu to select the recurring end date of daylight saving time.


---

**NOTE:** *SNTP is used to get the time from those NTP servers. It is recommended that the time server is in the same LAN with the Managed Switch or at least not too far away. In this way, the time will be more accurate.*

---

## 4.3.5 Device Community

Click the option **Device Community** from the **Network Management** menu and then the following screen page appears.



The screenshot shows a window titled "Device Community". Inside, there is a table with two columns: "Community" and "Description". The table contains two rows: one with "public" and "Default\_Account", and another with "admin" and "Default\_Account". Below the table are three buttons: "New", "Edit", and "Delete".


Community	Description
public	Default_Account
admin	Default_Account

New Edit Delete

Click **New** to add a new community and then the following screen page appears. Up to 10 Device Communities can be created.

Click **Edit** to modify the current community settings.

Click **Delete** to remove a registered community.

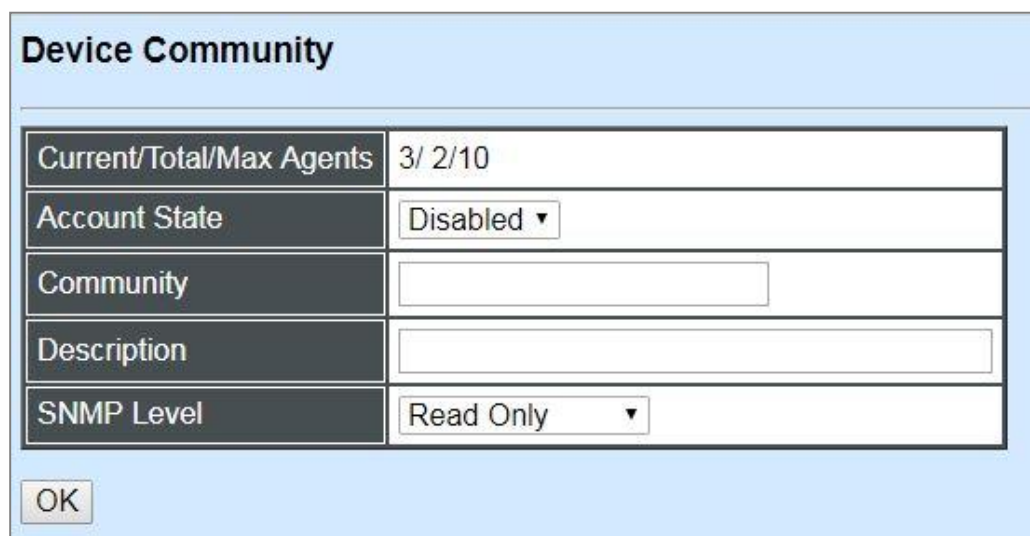

The screenshot shows a window titled "Device Community" with a configuration form. The form has five fields: "Current/Total/Max Agents" with the value "3/ 2/10", "Account State" with a dropdown menu showing "Disabled", "Community" with an empty text box, "Description" with an empty text box, and "SNMP Level" with a dropdown menu showing "Read Only". At the bottom left of the form is an "OK" button.

Current/Total/Max Agents	3/ 2/10
Account State	Disabled ▼
Community	
Description	
SNMP Level	Read Only ▼

OK

**Current/Total/Max Agents:** View-only field.

**Current:** This shows the number of current registered community.

**Total:** This shows the amount of total registered communities.

**Max Agents:** This shows the maximum communities are available for registration. The maximum number is 10.

**Account State:** Enable or disable this Community Account.



**Community:** Specify the authorized SNMP community name, up to 20 alphanumeric characters.

**Description:** Enter a unique description for this community name. Up to 35 alphanumeric characters can be accepted. This is mainly for reference only.

**SNMP Level:** Click the pull-down menu to select the desired privilege for the SNMP operation.

---

**NOTE:** When the community browses the Managed Switch without proper access right, the Managed Switch will not respond. For example, if a community only has Read & Write privilege, then it cannot browse the Managed Switch's user table.

---

## 4.3.6 SNMPv3 USM User

Simple Network Management Protocol Version 3, SNMPv3 in short, features stronger security mechanism, including authentication and encryption that helps ensure that the message is from a valid source and scramble the content of a packet, to prevent from being learned by an unauthorized source. Select the option **SNMPv3 USM User** from the **Network Management** menu, then the the following screen page shows up. Click **Edit** for further settings.

---

**Note:** The SNMPv3 user account is generated from "User Authentication". (Refer to [Section 4.2](#))

---

SNMPv3 USM User		
UserName	Authentication	Private
admin	None	None

Edit

SNMPv3 USM User	
Current/Total/Max Agents	1/ 1/10
Account State	Enabled
UserName	admin
Authentication	None ▼
Auth-Password	<input type="text"/>
Private	None ▼
Priv-Password	<input type="text"/>
SNMP Level	Administrator
<input type="button" value="OK"/>	

**Current/Total/Max Agents:** View-only field.

**Current:** This shows the number of current registered community.

**Total:** This shows the amount of total registered communities.

**Max Agents:** This shows the maximum number available for registration. The maximum number is 10.

**Account State:** View-only field that shows this user account is enabled or disabled.

**User Name:** View-only field that shows the authorized user login name.

**Authentication:** This is used to ensure the identity of users. The following is the method to perform authentication.

**None:** Disable authentication function. Click “None” to disable it.

**MD5(Message-Digest Algorithm):** A widely used [cryptographic hash function](#) producing a 128-bit (16-byte) [hash value](#), typically expressed in text format as a 32-digit [hexadecimal](#) number. Click “MD5” to enable this authentication.

**SHA(Secure Hash Algorithm):** A 160-bit hash function which resembles the said [MD5](#) algorithm. Click “SHA” to enable this authentication.

**Auth-Password:** Specify the passwords, up to 20 characters.

**Private:** It allows for encryption of SNMP v3 messages to ensure confidentiality of data. The following is the method to perform encryption.

**None:** Disable Private function. Click “None” to disable it.

**DES (Data Encryption Standard):** An algorithm to encrypt critical information such as message text message signatures...,etc. Click “DES” to enable it.



**Priv-Password:** Specify the passwords, up to 20 characters.

**SNMP-Level:** View-only field that shows user's authentication level.

**Administrator:** Own the full-access right, including maintaining user account & system information, load factory settings ...etc.

**Read & Write:** Own the full-access right but cannot modify user account & system information, cannot load factory settings.

**Read Only:** Allow to view only.

A combination of a security event shown as below indicates which security mechanism is used when handling an SNMP packet.

Authentication	Private	Result
None	None	Uses a username match for authentication
Message Digest Algorithm(MD5) or Secure Hash Algorithm(SHA)	None	Provides authentication based on the Hashed Message Authentication Code(HMAC)-MD5 or HMAC-SHA algorithms.
MD5 or SHA	Data Encryption Standard(DES)	Provides authentication based on the Hashed Message Authentication Code(HMAC)-MD5 or HMAC-SHA algorithms. What's more, provides DES 56-bit encryption based on the Cipher Block Chaining (CBC)-DES standard.

## 4.3.7 Trap Destination

Click the option **Trap Destination** from the **Network Management** menu and then the following screen page appears.

**Trap Destination**

Index	State	Destination IP/Domain Name	Community
1	Disabled ▾	0.0.0.0	
2	Disabled ▾	0.0.0.0	
3	Disabled ▾	0.0.0.0	
4	Disabled ▾	0.0.0.0	
5	Disabled ▾	0.0.0.0	
6	Disabled ▾	0.0.0.0	
7	Disabled ▾	0.0.0.0	
8	Disabled ▾	0.0.0.0	
9	Disabled ▾	0.0.0.0	
10	Disabled ▾	0.0.0.0	

OK

**State:** Enable or disable the function of sending trap to the specified destination.

**Destination IP/Domain Name:** Enter the specific domain name or IPv4/IPv6 address of the network management system that will receive the trap.

**Community:** Enter the description for the specified trap destination.

## 4.3.8 Trap Configuration

Click the option **Trap Configuration** from the **Network Management** menu and then the following screen page appears.

Trap Configuration	
Cold Start Trap	Enabled ▼
Warm Start Trap	Enabled ▼
Authentication Failure Trap	Enabled ▼
Port Link Up/Down Trap	Enabled ▼
Port Link Flap Trap	Enabled ▼
Fan Trap	Enabled ▼
System Up Trap	Enabled ▼
System Power Up Trap	Enabled ▼
System Power Down Trap ( 1st Destination Only )	Enabled ▼
CPU Loading Trap	Enabled ▼
Auto Backup Trap	Enabled ▼
Storm Control Trap	Enabled ▼
MAC Limiter Trap	Enabled ▼
Console Port Link Up/Down Trap	Enabled ▼
CPU Temperature Trap	Enabled ▼
Fast Redundancy Trap	Enabled ▼
SFP Threshold Trap	Enabled ▼
Warm Reload Trap	Enabled ▼

OK

**Cold Start Trap:** Enable or disable the Managed Switch to send a trap when the Managed Switch is turned on.

**Warm Start Trap:** Enable or disable the Managed Switch to send a trap when the Managed Switch restarts.

**Authentication Failure Trap:** Enable or disable the Managed Switch to send authentication failure trap after any unauthorized users attempt to login.

**Port Link Up/Down Trap:** Enable or disable the Managed Switch to send port link up/link down trap.

**Port Link Flap Trap:** Enable or disable the Managed Switch to send a trap when a port's port link flap exceeds the threshold.

**Fan Trap:** Enable or disable the Managed Switch to send a trap when FAN 1 or FAN 2 fails.

**System Up Trap:** Enable or disable the Managed Switch to send a trap when the system is ready after the warm start.

**System Power Up Trap:** Enable or disable the Managed Switch to send a trap when the system is ready after the cold start.

**System Power Down Trap ( 1st Destination Only ):** Enable or disable the Managed Switch to send a trap when the power failure occurs.

**CPU Loading Trap:** Enable or disable the Managed Switch to send a trap when the CPU is overloaded.

**Auto Backup Trap:** Enable or disable the Managed Switch to send a trap when the auto backup succeeds or fails.

**Storm Control Trap:** Enable or disable the Managed Switch to send a trap when broadcast/unknown multicast/unknown unicast packets flood. And it will keep sending this trap upon the notification threshold interval setup of Storm Control function once these packets flood continuously.

**MAC Limiter Trap:** Enable or disable the Managed Switch to send a trap when any port in which the Mac Limit function is enabled exceeds the specified source MAC address limit. And it will keep sending this trap upon the notification threshold interval setup of MAC Limiters function once any port exceeds the specified source MAC address limit continuously.

**Console Port Link Up/Down Trap:** Enable or disable the Managed Switch to send a trap when console port link up/link down occurs.

**CPU Temperature Trap:** Enable or disable the Managed Switch to send a trap when CPU temperature is over the parameter of **High Temperature Threshold** value, CPU temperature returns to the normal status (at or under the parameter of **High Temperature Threshold** value), CPU temperature exceeds the range of threshold (0~60 degrees centigrade), or the temperature sensor fails to detect CPU temperature.

**Fast Redundancy Trap:** Enable or disable Managed Switch to send a trap when any specified redundancy port in fast redundancy is link up/link down.

**SFP Threshold Trap:** Enable or disable Managed Switch to send a trap when Temperature/Voltage/TX Power/RX Power of any SFP ports is over the configured **High** value, under the configured **Low** value, or these abnormal status returns to the normal status.

**Warm Reload Trap:** Enable or disable Managed Switch to send a trap when the system's rebooting is completed because the countdown of Up-Time expires and the current running-config is different from the start-up-config, or the retry times of Ping reached the limit after the consecutive pings failed.

## 4.3.9 Syslog Configuration

Click the option **Syslog Configuration** from the **Network Management** menu and then the following screen page appears.

**Syslog Configuration**

Log Server	Disabled ▾
SNTP Status	Disabled
Facility	Local 0 ▾
1st Log Server	0.0.0.0
2nd Log Server	0.0.0.0
3rd Log Server	0.0.0.0

Logging Type	State
Terminal History	Disabled ▾

OK

When DHCP snooping filters unauthorized DHCP packets on the network, the mal-attempt log will allow the Managed Switch to send event notification message to Log server.

**Log Server:** Enable or disable mal-attempt log function.

**SNTP Status:** View-only field that shows the SNTP server status.

**Facility:** Specify a facility code (Local 0~Local 7) to a specific device for classifying the syslog message provided by different devices.

**1<sup>st</sup> Log Server:** Specify the default Log server's IPv4/IPv6 address or domain name.

**2<sup>nd</sup> Log Server:** Specify the secondary Log server's IPv4/IPv6 address or domain name. When the default Log Server is down, the Managed Switch will automatically contact the second or third Log server.

**3<sup>rd</sup> Log Server:** Specify the third Log server's IPv4/IPv6 address or domain name. When the default Log Server is down, the Managed Switch will automatically contact the secondary or third Log server.

**Terminal History of Logging Type:** Enable or disable whether the log of CLI commands will be forwarded to the Log Server 1~3.

## 4.4 Switch Management

In order to manage the Managed switch and set up required switching functions, click the folder **Switch Management** from the **Main Menu** and then several options and folders will be displayed for your selection.

**FOS-3128**

- System Information
- User Authentication
- Network Management
  - Switch Management**
    - Switch Configuration
    - Port Configuration
  - Link Aggregation
  - Rapid Spanning Tree
  - 802.1X Configuration
  - MAC Address Management
  - VLAN Configuration
  - QoS Configuration
  - IGMP/MLD Snooping
  - Static Multicast Configuration
  - Port Mirroring
  - SFP Port Threshold Configuration
- Security Configuration
  - ACL Configuration
  - Layer 2 Protocol Tunneling
  - LLDP Configuration
  - Loop Detection
  - Fast Redundancy

**Switch Configuration**

Maximum Frame Size	9600	Bytes (1518-9600)
MAC Address Aging Time	300	(0-172800)Secs
Statistics Polling Port	12	(1-28)Units
Statistics Polling Interval	60	1-600(1/10 Sec)

**Layer 2 Control Protocol**

0180C200000X	Filter Out ▼
0180C200002X	No Filter Out ▼
0180C2000010	No Filter Out ▼

OK

1. **Switch Configuration:** Set up frame size, address learning, etc.
2. **Port Configuration:** Enable or disable port speed, flow control, etc.
3. **Link Aggregation:** Set up port trunk and LACP port configuration.
4. **Rapid Spanning Tree:** Set up RSTP switch settings, aggregated port settings, physical port settings, etc.
5. **802.1X Configuration:** Set up the 802.1X system, port Admin state, port reauthenticate.
6. **MAC Address Management:** Set up MAC address, enable or disable MAC security, etc.
7. **VLAN Configuration:** Set up VLAN mode and VLAN configuration.
8. **QoS Configuration:** Set up the priority queuing, rate limit, and so on.
9. **IGMP/MLD Snooping:** Configure IGMP/MLD Snooping parameters.
10. **Static Multicast Configuration:** To create, edit or delete Static Multicast table.
11. **Port Mirroring:** Set up target port mirrors source port to enable traffic monitoring.



- 12. SFP Port Threshold Configuration:** Update each SFP port's current temperature/voltage/TX power/RX power information and configure the threshold of these parameters as well as the alarm notification.
- 13. Security Configuration:** Set up DHCP Snooping, DHCP Option 82 / DHCPv6 Option 37 relay agent, port isolation, storm control, MAC limiter, static IPv4/IPv6 table configuration, and so on.
- 14. Access Control List (ACL) Configuration:** Set up access control entries and lists.
- 15. Layer 2 Protocol Tunneling (L2PT) Configuration:** Enable or disable L2PT function and set up acceptable BPDUs for GBPT (Generic Bridge PDU Tunneling).
- 16. LLDP Configuration:** Enable or disable LLDP on ports and set up LLDP-related attributes.
- 17. Loop Detection Configuration:** Enable or disable Loop Detection function and set up Loop Detection configuration.
- 18. Fast Redundancy:** Set up Fast Ring v2 and Chain configuration for fast network recovery.

## 4.4.1 Switch Configuration

Click the option **Switch Configuration** from the **Switch Management** menu and then the following screen page appears.

### Switch Configuration

Maximum Frame Size	9600	Bytes (1518-9600)
MAC Address Aging Time	300	(0-172800)Secs
Statistics Polling Port	12	(1-28)Units
Statistics Polling Interval	60	1-600(1/10 Sec)

#### Layer 2 Control Protocol

0180C200000X	Filter Out ▼
0180C200002X	No Filter Out ▼
0180C2000010	No Filter Out ▼

**Maximum Frame Size:** Specify the maximum frame size between 1518 and 9600 bytes. The default maximum frame size is 9600bytes.

**MAC Address Aging Time:** Specify MAC Address aging time between 0 and 172800 seconds. "0" means that MAC addresses will never age out.

**Statistics Polling Port:** Specify the number of ports for data acquisition at a time.

**Statistics Polling Interval:** Specify the time interval in 1/10 seconds for data acquisition.

For more details on the data statistics, you may refer to Section 4.5.4, 4.5.5 and 4.5.6 in this manual.

## **Layer 2 Control Protocol:**

**0180C200000X:** Select either “No Filter Out” or “Filter Out”. When “Filter Out” is selected, packets from the address ranging from 0180C2000000 to 0180C200000F will be dropped. Multicast MAC addresses from 0180C2000000 to 0180C200000F are reserved for use by 802.1/802.3 protocols. The purpose for each multicast address is described briefly below:


**0180C200002X:** Select either “No Filter Out” or “Filter Out”. When “Filter Out” is selected, packets from the address ranging from 0180C2000020 to 0180C200002F will be dropped. Multicast addresses from 0180C2000020 to 0180C2000022 are for GMRP, GVRP, and GARP respectively.

**0180C2000010:** Select either “No Filter Out” or “Filter Out”. When “Filter” is selected, packets from the address 0180C2000010 will be dropped.



## 4.4.2 Port Configuration

Click the option **Port Configuration** from the **Switch Management** menu and then the following screen page appears.

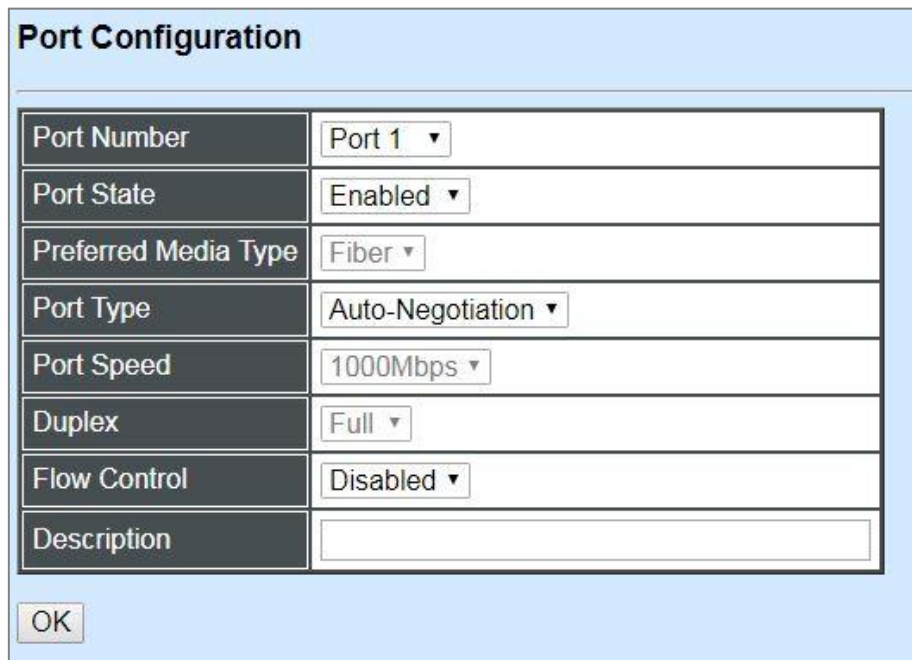

The image shows a 'Port Configuration' dialog box with a light blue header and a white body. It contains a table with eight rows, each with a label on the left and a control on the right. The controls are dropdown menus for 'Port Number', 'Port State', 'Preferred Media Type', 'Port Type', 'Port Speed', 'Duplex', and 'Flow Control', and a text input field for 'Description'. An 'OK' button is located at the bottom left of the dialog.

Port Configuration	
Port Number	Port 1 ▾
Port State	Enabled ▾
Preferred Media Type	Fiber ▾
Port Type	Auto-Negotiation ▾
Port Speed	1000Mbps ▾
Duplex	Full ▾
Flow Control	Disabled ▾
Description	<input type="text"/>

OK

**Port Number:** Click the pull-down menu to select the port number for configuration.

**Port State:** Enable or disable the current port state.

**Preferred Media Type:** Select copper or fiber as the preferred media type.

**Port Type:** Select Auto-Negotiation or Manual mode as the port type.

**Port Speed:** When you select “Manual” as port type, you can further specify the transmission speed (10Mbps/100Mbps) of TP port(s) or (100Mbps/1000Mbps) of fiber port(s). When you select “Auto-Negotiation” as port type for TP port(s), the devices will automatically negotiate with each other and choose the highest performance transmission mode. When you select “Auto-Negotiation” as port type for fiber port(s), the transmission speed is 1000Mbps.

**Duplex:** In TP ports with 10Mbps/100Mbps port speed and select “Manual” as port type, you can further specify the current operation Duplex mode (full or half duplex) of the port(s).

**Flow Control:** Enable or disable the flow control.

**Description:** Enter a unique description for the port. Up to 35 alphanumeric characters can be accepted.


### 4.4.3 Link Aggregation

Link aggregation is an inexpensive way to set up a high-speed backbone network that transfers much more data than any one single port or device can deliver without replacing everything and buying new hardware.

For most backbone installations, it is common to install more cabling or fiber optic pairs than initially necessary, even if there is no immediate need for the additional cabling. This action is taken because labor costs are higher than the cost of the cable and running extra cable reduces future labor costs if networking needs changes. Link aggregation can allow the use of these extra cables to increase backbone speeds with little or no extra cost if ports are available.

This Managed switch supports 2 link aggregation modes: static **Port Trunk** and dynamic **Link Aggregation Control Protocol (LACP)** using the IEEE 802.3ad standard. These allow several devices to communicate simultaneously at their full single-port speed while not allowing any one single device to occupy all available backbone capacities.

Click **Link Aggregation** folder from the **Switch Management** menu and then three options within this folder will be displayed.

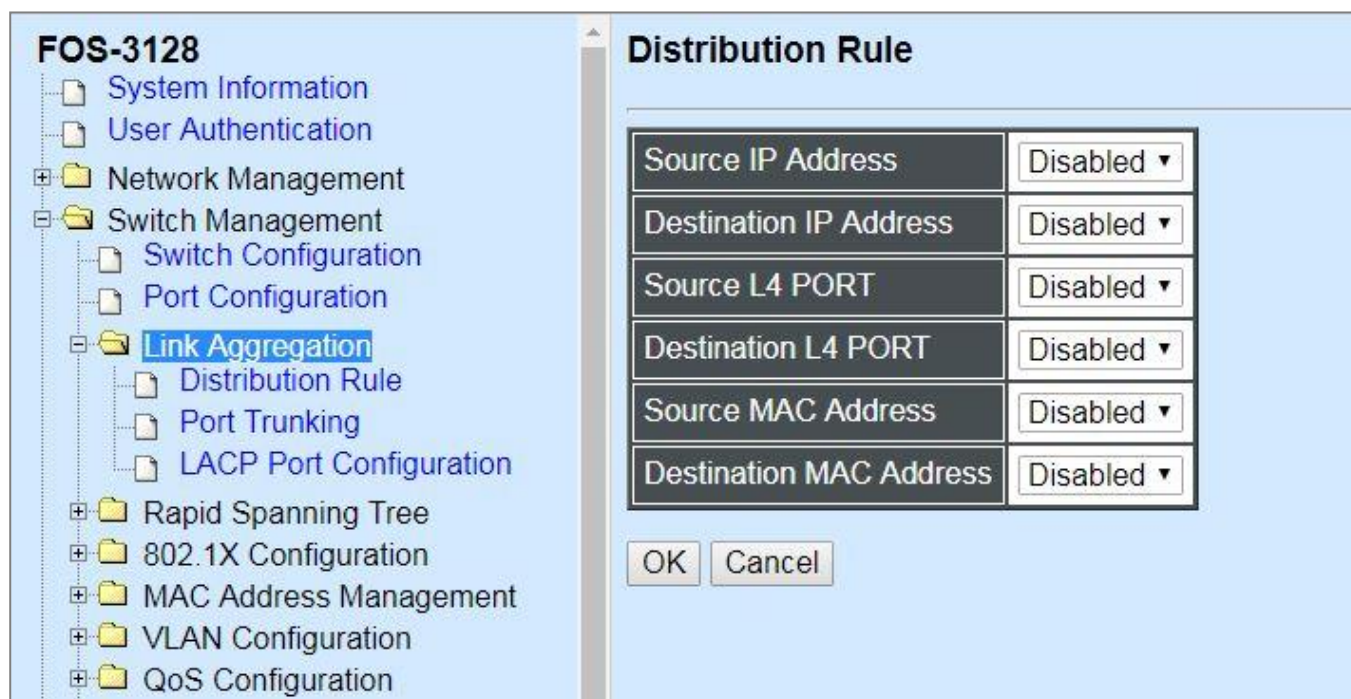

1. **Distribution Rule:** Configure the distribution rule of Port Trunking group(s).
2. **Port Trunking:** Create, edit or delete port trunking group(s).
3. **LACP Port Configuration:** Set up the configuration of LACP on all or some ports.

### 4.4.3.1 Distribution Rule

Click the option **Distribution Rule** from the **Link Aggregation** menu, the following screen page appears.



The screenshot shows a window titled "Distribution Rule". Inside, there is a table with six rows, each representing a rule type. Each row has a label on the left and a dropdown menu on the right, all currently set to "Disabled". At the bottom of the window are two buttons: "OK" and "Reset".

Rule Type	Status
Source MAC Address	Disabled ▼
Destination MAC Address	Disabled ▼
Source IP Address	Disabled ▼
Destination IP Address	Disabled ▼
Source L4 PORT	Disabled ▼
Destination L4 PORT	Disabled ▼

OK Reset

There are six rules offered for you to set up packets according to operations.

**Source MAC Address:** Enable or disable packets according to source MAC address.

**Destination MAC Address:** Enable or disable packets according to Destination MAC address.

**Source IP Address:** Enable or disable packets according to source IP address.


**Destination IP Address:** Enable or disable packets according to Destination IP address.

**Source L4 Port:** Enable or disable packets according to source L4 Port.

**Destination L4 Port:** Enable or disable packets according to Destination L4 Port.

### 4.4.3.2 Port Trunking

Click the option **Port Trunking** from the **Link Aggregation** menu and then the following screen page appears.

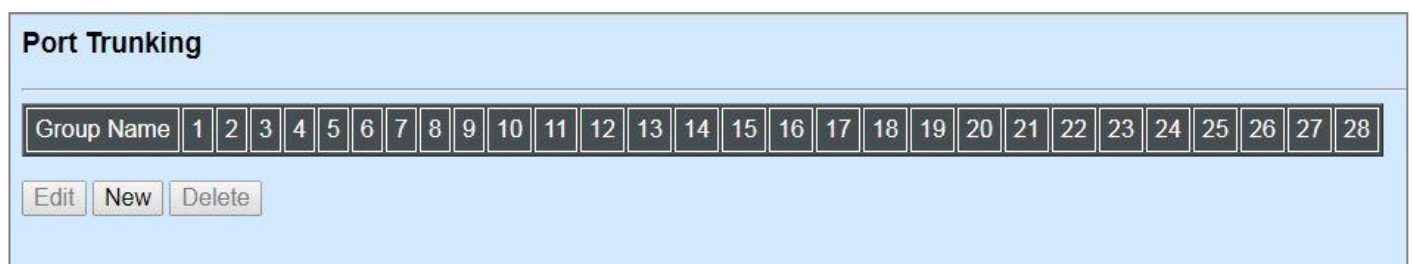

The screenshot shows a window titled "Port Trunking". Inside, there is a table with 28 columns. The first column is labeled "Group Name", and the remaining 27 columns are numbered 1 through 28. Below the table are three buttons: "Edit", "New", and "Delete".

Group Name	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
------------	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Edit New Delete

The Managed Switch allows users to create 14 trunking groups. Each group consists of 2 to 8 links (ports).

Click **New** to add a new trunking group and then the following screen page appears.

Click **Edit** to modify a registered trunking group's settings.

Click **Delete** to remove a specified registered trunking group and its settings.

Current/Total/Max	1/ 0/14 Groups							
Group Name	0							
Port Members	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	9	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	17	18	19	20	21	22	23	24
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	25	26	27	28				
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Please check the following two points before setting:

1. The Port Members are "Full Duplex".
2. The Port Members have the same speed.

OK

**Current/Total/Max Groups:** View-only field.

**Current:** This shows the number of current registered group.

**Total:** This shows the amount of total registered groups.

**Max:** This shows the maximum number available for registration. The maximum number is 14.

**Group Name:** Specify the trunking group name, up to 15 alphanumeric characters.

**Port Members:** Select ports that belong to the specified trunking group. Please keep the rules below in mind when assigning ports to a trunking group.

- Must have 2 to 8 ports in each trunking group.
- Each port can only be grouped in one group.
- If the port is already enabled in LACP Port Configuration, it cannot be grouped anymore.

Click **OK** and return to **Link Aggregation** menu.

**NOTE:** All trunking ports in the group must be members of the same VLAN, and their Spanning Tree Protocol (STP) status and QoS default priority configurations must be identical. Port locking, port mirroring and 802.1X cannot be enabled on the trunk group. Furthermore, the LACP aggregated links must all be of the same speed and should be configured as full duplex.

### 4.4.3.3 LACP Port Configuration

The Managed Switch supports dynamic Link Aggregation Control Protocol (LACP) which is specified in IEEE 802.3ad. Static trunks have to be manually configured at both ends of the link. In other words, LACP configured ports can automatically negotiate a trunked link with LACP configured ports on other devices. You can configure any number of ports on the Managed Switch as LACP, as long as they are not already configured as part of a static trunk. If ports on other devices are also configured as LACP, the Managed Switch and the other devices will negotiate a trunk link between them. If an LACP trunk consists of more than four ports, all other ports will be placed in a standby mode. Should one link in the trunk fail, one of the standby ports will automatically be activated to replace it.

Click the option **LACP Port Configuration** from the **Link Aggregation** menu and then the screen page is shown below. It is necessary to set up both “Key Value” and “Role” two options from the pull-down menu of Select Setting for the designated ports when creating a LACP(dynamic Link Aggregation) group. For more details on these settings, please refer to the following description in this section.

**LACP Port Configuration**

Select Setting

KeyValue ▾  
KeyValue  
Role

Port	KeyValue	Port	KeyValue	Port	KeyValue	Port	KeyValue
1	0	2	0	3	0	4	0
5	0	6	0	7	0	8	0
9	0	10	0	11	0	12	0
13	0	14	0	15	0	16	0
17	0	18	0	19	0	20	0
21	0	22	0	23	0	24	0
25	0	26	0	27	0	28	0

OK



## Configure Key Value:

Select “Key Value” from the pull-down menu of Select Setting.

**LACP Port Configuration**

Select Setting KeyValue ▾

Port KeyValue

1	2	3	4	5	6	7	8
0	0	0	0	0	0	0	0
9	10	11	12	13	14	15	16
0	0	0	0	0	0	0	0
17	18	19	20	21	22	23	24
0	0	0	0	0	0	0	0
25	26	27	28				
0	0	0	0				

OK

Ports in an aggregated link group must have the same LACP port key. In order to allow a port to join an aggregated group, the port key must be set to the same value. The range of key value is between 0 and 255. When key value is set to 0, the port key is automatically set by the Managed Switch.

## Configure Port Role:

Select “Role” from the pull-down menu of Select Setting. This allows LACP to be enabled (active or passive) or disabled on each port.

**LACP Port Configuration**

Select Setting Role ▾

Port Role

1	2	3	4	5	6	7	8
Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾
9	10	11	12	13	14	15	16
Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾
17	18	19	20	21	22	23	24
Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾
25	26	27	28				
Disable ▾	Disable ▾	Disable ▾	Disable ▾				

OK

**“Disable” Port Role:** Disable LACP on specified port(s).

**“Active” Port Role:** Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so that the group may be changed dynamically as required. In order to utilize the ability to change an aggregated port group, that is, to add or remove ports from the group, at least one of the participating devices must designate LACP ports as active. Both devices must support LACP.

**“Passive” Port Role:** LACP ports that are designated as passive cannot initially send LACP control frames. In order to allow the linked port group to negotiate adjustments and make changes dynamically, one end of the connection must have “active” LACP ports.

## 4.4.4 Rapid Spanning Tree

The Spanning Tree Protocol (STP), defined in the IEEE Standard 802.1D, creates a spanning tree within a mesh network of connected layer-2 bridges (typically Ethernet switches) and disables the links which are not part of that tree, leaving a single active path between any two network nodes.

Multiple active paths between network nodes cause a bridge loop. Bridge loops create several problems. First, the MAC address table used by the switch or bridge can fail, since the same MAC addresses (and hence the same network hosts) are seen on multiple ports. Second, a broadcast storm occurs. This is caused by broadcast packets being forwarded in an endless loop between switches. A broadcast storm can consume all available CPU resources and bandwidth.

Spanning tree allows a network design to include spare (redundant) links to provide automatic backup paths if an active link fails, without the danger of bridge loops, or the need for manually enabling/disabling these backup links.

To provide faster spanning tree convergence after a topology change, an evolution of the Spanning Tree Protocol: Rapid Spanning Tree Protocol (RSTP), introduced by IEEE with document 802.1w. RSTP, is a refinement of STP; therefore, it shares most of its basic operation characteristics. This essentially creates a cascading effect away from the root bridge where each designated bridge proposes to its neighbors to determine if it can make a rapid transition. This is one of the major elements which allows RSTP to achieve faster convergence times than STP.

Click the folder **Rapid Spanning Tree** from the **Switch Management** menu and then three options within this folder will be displayed as follows.

The screenshot shows the FOS-3128 configuration interface. On the left is a tree view of configuration folders. The 'Rapid Spanning Tree' folder is selected. On the right is the 'RSTP Switch Settings' dialog box with the following fields:

System Priority	32768 ▼
Max Age	6 Secs (6-200)
Hello Time	1 Secs (1-10)
Forward Delay	4 Secs (4-30)
Force Version	Normal ▼

Below the fields is an 'OK' button.

1. **RSTP Switch Settings:** Set up the system priority, max Age, hello time, forward delay time and force version.
2. **RSTP Aggregated Port Settings:** Set up the RSTP state, path cost, priority, edge status, and point to point setting of aggregated groups.
3. **RSTP Physical Port Settings:** Set up the RSTP state, path cost, priority, edge status, and point to point setting of each physical port.

#### 4.4.4.1 RSTP Switch Settings

Click the option **RSTP Switch Settings** from the **Rapid Spanning Tree** menu and then the following screen page appears.

RSTP Switch Settings	
System Priority	32768 ▼
Max Age	6 Secs (6-200)
Hello Time	1 Secs (1-10)
Forward Delay	4 Secs (4-30)
Force Version	Normal ▼

OK

**System Priority:** Each interface is associated with a port (number) in the STP code. And, each switch has a relative priority and cost that is used to decide what the shortest path is to forward a packet. The lowest cost path is always used unless the other path is down. If you have multiple bridges and interfaces then you may need to adjust the priority to achieve optimized performance.

The Managed Switch with the lowest priority will be selected as the root bridge. The root bridge is the “central” bridge in the spanning tree.

**Max Age:** If another switch in the spanning tree does not send out a hello packet for a long period of time, it is assumed to be disconnected. The default Max. Age is 6 seconds.

**Hello Time:** Periodically, a hello packet is sent out by the Root Bridge and the Designated Bridges that are used to communicate information about the topology throughout the entire Bridged Local Area Network.


**Forward Delay:** It is the time spent in each Listening and Learning state before the Forwarding state is entered. This delay occurs when a new bridge comes onto a busy network.

**Force Version:** Set and show the RSTP protocol to be used. Normal - use RSTP, Compatible - compatible with STP.



#### 4.4.4.2 RSTP Aggregated Port Settings

Click the option **RSTP Aggregated Port Settings** from the **Rapid Spanning Tree** menu and then the following screen page appears.

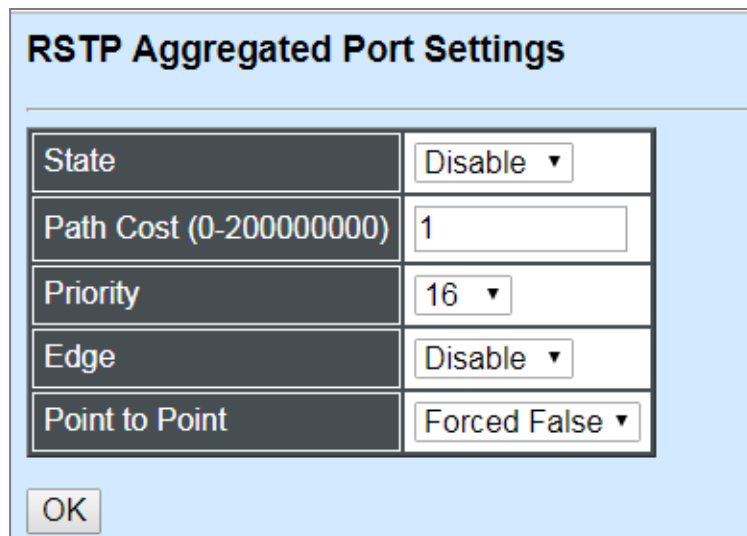

RSTP Aggregated Port Settings	
State	Disable ▾
Path Cost (0-200000000)	1
Priority	16 ▾
Edge	Disable ▾
Point to Point	Forced False ▾

OK

**State:** Enable or disable configured trunking groups in RSTP mode.

**Path Cost:** This parameter is used by the RSTP to determine the best path between devices. Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. “0” means auto-generated path cost.

**Priority:** Choose a value between 0 and 240 to set the priority for the port interface. A higher priority will designate the interface to forward packets first. A lower number denotes a higher priority.

**Edge:** If you know a port is directly connected to an end device (that doesn't support RSTP) then set it as an edge port to ensure maximum performance. This will tell the switch to immediately start forwarding traffic on the port and not bother trying to establish a RSTP connection. Otherwise, turn it off.

#### Point to Point:

**Forced True:** indicates a point-to-point (P2P) shared link. P2P ports are similar to edge ports; however, they are restricted in that a P2P port must operate in full duplex. Similar to edge ports, P2P ports transit to a forwarding state rapidly thus benefiting from RSTP.

**Forced False:** the port cannot have P2P status.

**Auto:** allows the port to have P2P status whenever possible and operates as if the P2P status were true. If the port cannot maintain this status, (for example if the port is forced to half-duplex operation) the P2P status changes to operate as if the P2P value were false. The default setting for this parameter is true.

### 4.4.4.3 RSTP Physical Port Settings

Click the option **RSTP Physical Port Settings** from the **Rapid Spanning Tree** menu and then the following screen page appears.

#### Configure Port State:

Select “State” from the pull-down menu of Select Setting.

The screenshot shows the 'RSTP Physical Port Settings' window. At the top, there is a 'Select Setting' button and a dropdown menu currently set to 'State'. Below this, the 'Port State' section contains a grid of 28 checkboxes, numbered 1 through 28. The grid is organized as follows: rows 1-4 have 8 columns each; row 5 has 4 columns (25-28). All checkboxes are currently unchecked. An 'OK' button is located at the bottom left of the window.

This allows ports to be enabled or disabled. When clicking on the checkbox of the corresponding port number, RSTP will be enabled.

#### Configure Port Path Cost:

Select “Path Cost” from the pull-down menu of Select Setting.

The screenshot shows the 'RSTP Physical Port Settings' window with the dropdown menu set to 'Path Cost'. The 'Port Path Cost(0-200000000)' section contains a grid of 28 text input fields, numbered 1 through 28. The grid layout is identical to the previous screenshot: rows 1-4 have 8 columns each; row 5 has 4 columns (25-28). All input fields contain the value '0'. An 'OK' button is located at the bottom left of the window.

This sets up the path cost of each port. The default value is “0”. “0” means auto-generated port path cost.

## Configure Port Priority:

Select “Priority” from the pull-down menu of Select Setting.

**RSTP Physical Port Settings**

Select Setting: Priority ▼

Port Priority

1	2	3	4	5	6	7	8
128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼
9	10	11	12	13	14	15	16
128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼
17	18	19	20	21	22	23	24
128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼	128 ▼
25	26	27	28				
128 ▼	128 ▼	128 ▼	128 ▼				

OK

You can choose Port Priority value between 0 and 240. The default value is “128”.

## Configure Port Edge:

Select “Edge” from the pull-down menu of Select Setting.

**RSTP Physical Port Settings**

Select Setting: Edge ▼

Port Edge

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

OK

Set the port to “enabled” or “disabled”. When clicking on the checkbox of the corresponding port number, Port Edge will be enabled.

## Configure Port Point2point:

Select “Point2point” from the pull-down menu of Select Setting.

**RSTP Physical Port Settings**

Select Setting Point2point ▾

Port Point2point

1	2	3	4	5	6	7	8
Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾
9	10	11	12	13	14	15	16
Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾
17	18	19	20	21	22	23	24
Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾
25	26	27	28				
Forced True ▾	Forced True ▾	Forced True ▾	Forced True ▾				

OK

Set up the Point to Point setting of each port. The default setting is “Forced True”.

## 4.4.5 802.1X Configuration

The IEEE 802.1X standard provides a port-based network access control and authentication protocol that prevents unauthorized devices from connecting to a LAN through accessible switch ports. Before services are made available to clients connecting to a VLAN, clients that are 802.1X-complaint should successfully authenticate with the authentication server.

Initially, ports are in the authorized state which means that ingress and egress traffic are not allowed to pass through except 802.1X protocol traffic. When the authentication is successful with the authentication server, traffic from clients can flow normally through a port. If authentication fails, ports remain in unauthorized state but retries can be made until access is granted.

Click the folder **802.1X Configuration** from the **Switch Management** menu and then three options will be displayed as follows.

The screenshot shows a network management interface for a device labeled 'FOS-3128'. On the left is a tree view of configuration folders. The '802.1X Configuration' folder is selected and expanded, showing sub-items: '802.1X System Settings', '802.1X Port Admin State', and '802.1X Port Reauthenticate'. The main panel on the right is titled '802.1X System Configuration' and contains a table of settings:


Enable	Disabled ▾	
RADIUS IP	0.0.0.0	
RADIUS Secret		
Reauthentication Enabled	<input type="checkbox"/>	
Reauthentication Period	60	1-3600(Second)
EAP Timeout	10	1-255(Second)

Below the table is an 'OK' button.

1. **802.1X System Settings:** Set up system 802.1X RADIUS IP, RADIUS Secret, Reauthentication, EAP Timeout, and so on.
2. **802.1X Port Admin State:** Set up the port authorization state.
3. **802.1X Port Reauthenticate:** Set up the port reatentication.

### 4.4.5.1 802.1X System Configuration

Click the option **802.1X System Settings** from the **802.1X Configuration** folder and then the following screen page appears.

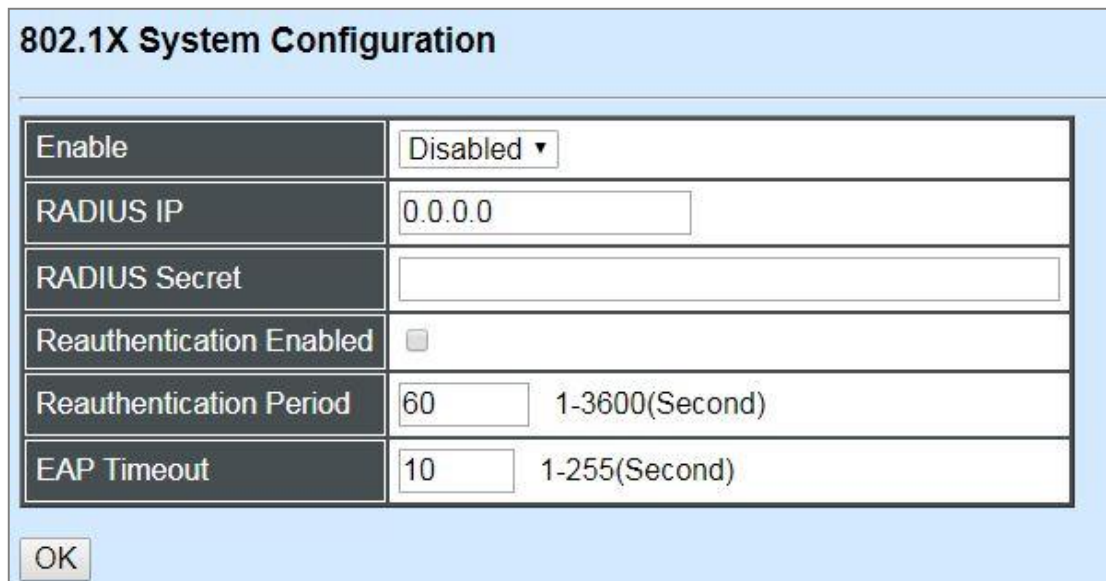

The image shows a dialog box titled "802.1X System Configuration". It contains a table with configuration options and their values. At the bottom left is an "OK" button.

802.1X System Configuration	
Enable	Disabled ▾
RADIUS IP	0.0.0.0
RADIUS Secret	
Reauthentication Enabled	<input type="checkbox"/>
Reauthentication Period	60 1-3600(Second)
EAP Timeout	10 1-255(Second)

OK

**Enable:** Enable or disable 802.1X on the Managed Switch. When enabled, the Managed Switch acts as a proxy between the 802.1X-enabled client and the authentication server. In other words, the Managed Switch requests identifying information from the client, verifies that information with the authentication server, and relays the response to the client.

**RADIUS IP:** Specify the IPv4 address of RADIUS authentication server.

**RADIUS Secret:** The identification number assigned to each RADIUS authentication server with which the client shares a secret.

**Reauthentication Enabled:** Enable or disable Reauthentication.

**Reauthentication Period(seconds):** Specify a period of reauthentication time that a client authenticates with the authentication server.

**EAP Timeout(seconds):** Specify the time value in seconds that the Managed Switch will wait for a response from the authentication server to an authentication request.

### 4.4.5.2 802.1X Port Admin State

Click the option **802.1X Port Admin State** from the **802.1X Configuration** menu and then the following screen page appears.

**802.1X Port Admin State**

1	2	3	4	5	6	7	8
Authorized ▾ Auto Authorized Unauthorized	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾
10	11	12	13	14	15	16	
Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾
17	18	19	20	21	22	23	24
Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾
25	26	27	28				
Authorized ▾	Authorized ▾	Authorized ▾	Authorized ▾				

OK

**Admin state:** Include Authorized, Unauthorized and Auto 3 options for the user to set up the port authorization state for each port. Each state is described as below.

**Authorized:** This forces the Managed Switch to grant access to all clients, either 802.1X-aware or 802.1x-unaware. No authentication exchange is required. By default, all ports are set to “Authorized”.

**Unauthorized:** This forces the Managed Switch to deny access to all clients, either 802.1X-aware or 802.1X-unaware.

**Auto:** This requires 802.1X-aware clients to be authorized by the authentication server. Accesses from clients that are not 802.1X-aware will be denied.



### 4.4.5.3 802.1X Port Reauthenticate

Click the option **802.1X Port Reauthenticate** from the **802.1X Configuration** menu and then the following screen page appears.



The dialog box titled "802.1X Port Reauthenticate" contains a grid of 28 port numbers (1-28) arranged in 5 rows. Each port number is in a dark grey box, and directly below it is a white checkbox. The first four rows have 8 ports each, and the fifth row has 4 ports (25-28). An "OK" button is located at the bottom left of the dialog.

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

OK

By clicking on the checkbox of the corresponding port number, it will allow to re-authenticate the selected ports right now. When enabled, the authentication message will be sent immediately after you click the **OK** button.



## 4.4.6 MAC Address Management

Click the folder **MAC Address Management** from the **Switch Management** menu and then the following screen page appears.

**FOS-3128**

- System Information
- User Authentication
- Network Management
  - Switch Management
    - Switch Configuration
    - Port Configuration
    - Link Aggregation
    - Rapid Spanning Tree
    - 802.1X Configuration
    - MAC Address Management**
      - MAC Table Learning
      - Static MAC Table Configuration
    - VLAN Configuration
    - QoS Configuration
    - IGMP/MLD Snooping
    - Static Multicast Configuration
    - Port Mirroring
    - SFP Port Threshold Configuration
  - Security Configuration
    - ACL Configuration
    - Layer 2 Protocol Tunneling
    - LLDP Configuration
    - Loop Detection

**MAC Table Learning**

1	2	3	4	5	6	7	8
Auto	Auto	Auto	Auto	Auto	Auto	Auto	Auto
9	10	11	12	13	14	15	16
Auto	Auto	Auto	Auto	Auto	Auto	Auto	Auto
17	18	19	20	21	22	23	24
Auto	Auto	Auto	Auto	Auto	Auto	Auto	Auto
25	26	27	28				
Auto	Auto	Auto	Auto				

OK

1. **MAC Table Learning:** To enable or disable learning MAC address function.
2. **Static MAC Table Configuration:** To create, delete Static MAC Table setting or do the MAC address type transferring from “Sticky” into "Manual" for a port individually.

### 4.4.6.1 MAC Table Learning

Click the option **MAC Table Learning** from the **MAC Address Management** menu and then the following screen page appears.

**MAC Table Learning**

1	2	3	4	5	6	7	8
Auto	Auto	Auto	Auto	Auto	Auto	Auto	Auto
Auto	10	11	12	13	14	15	16
Auto	Auto	Auto	Auto	Auto	Auto	Auto	Auto
17	18	19	20	21	22	23	24
Auto	Auto	Auto	Auto	Auto	Auto	Auto	Auto
25	26	27	28				
Auto	Auto	Auto	Auto				

OK

**Auto:** Enable port MAC address learning.

**Disabled:** Disable port MAC address learning.

### 4.4.6.2 Static MAC Table Configuration

Click the option **Static MAC Table Configuration** from the **MAC Address Management** menu and then the following screen page appears.

Static MAC Table Configuration

Port Number: Port 1 ▼

MAC Address | VID | Forwarding Port | Type | Add Sticky to Static

New Delete

On the static MAC table, it lists each port's static source MAC addresses typed as "Manual", which are manually added by clicking on the **New** button. Besides, it also lists the static ones typed as "Sticky", which are automatically learned by the selected port if this port's functions of Mac Limit and Sticky MAC address are simultaneously enabled. The transmission behavior of the packets carrying these two different types of static MAC address is in the same way on the switch.

The auto-learned "Sticky" MAC addresses denotes that they still do not write into the running configuration file, whereas the manual-added "Manual" MAC addresses denotes that they have been written into the running configuration file. Thus, if the **Save Configuration** function is executed before rebooting the Managed Switch, the MAC addresses with the type of "Sticky" will disappear and the MAC addresses with the type of "Manual" still exist on the static MAC table.

To transfer the MAC address type from "Sticky" into "Manual", please click on the checkbox belonging to the specific sticky MAC address in the **Add Sticky to Static** field (see the figure below), and then press the **Add to Static** button below the table. The type of the sticky MAC addresses will be changed as "Manual" immediately.

Static MAC Table Configuration

Port Number: Port 28 ▼

MAC Address	VID	Forwarding Port	Type	Add Sticky to Static
00:60:6E:B0:0D:DE	1	Port 28	Sticky	<input checked="" type="checkbox"/>
00:00:00:00:11:11	100	Port 28	Manual	<input type="checkbox"/>

Add to Static New Delete


---

**NOTE:** The Managed Switch only supports port-based MAC security and does not support switch-based MAC security. The Managed Switch can support up to 50 entries of MAC security list per port.

---

Click **New** to add a new MAC address entity and then the following screen page appears.

Click **Delete** to remove a MAC address entry.

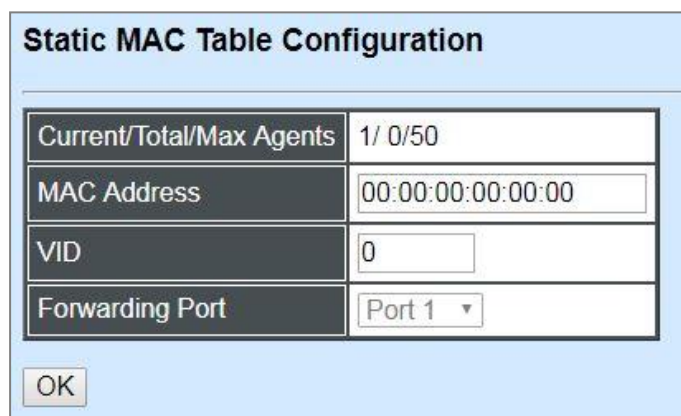

The image shows a dialog box titled "Static MAC Table Configuration". It contains a table with four rows: "Current/Total/Max Agents" with value "1/ 0/50", "MAC Address" with value "00:00:00:00:00:00", "VID" with value "0", and "Forwarding Port" with a dropdown menu showing "Port 1". Below the table is an "OK" button.

Static MAC Table Configuration	
Current/Total/Max Agents	1/ 0/50
MAC Address	00:00:00:00:00:00
VID	0
Forwarding Port	Port 1 ▼

OK

**Current/Total/Max:** View-only field that shows the number of current, total and maximum MAC address entry or entries of the specific port. Different ports may have different values.

**MAC Address:** Specify a destination MAC address in the packet with the 00:00:00:00:00:00 format.

**VID:** Specify the VLAN ID where the packets with the destination MAC address can be forwarded.

**Forwarding Port:** View-only field. If the incoming packet has the same destination MAC address as the one specified in VID, it will be forwarded to the selected port directly.

---

**NOTE:** If any port (e.g. Port 27) in which the Mac Limit function is enabled whose current counts of MAC addresses has already reached the threshold, an error message of "Total secure MAX addresses on interface 27 has reached maximum limit" will be pop up while you would like to add a new static MAC address.

---

## 4.4.7 VLAN Configuration

A Virtual Local Area Network (VLAN) is a network topology configured according to a logical scheme rather than the physical layout. VLAN can be used to combine any collections of LAN segments into a group that appears as a single LAN. VLAN also logically segments the network into different broadcast domains. All broadcast, multicast, and unknown packets entering the Switch on a particular VLAN will only be forwarded to the stations or ports that are members of that VLAN.

VLAN can enhance performance by conserving bandwidth and improve security by limiting traffic to specific domains. A VLAN is a collection of end nodes grouped by logics instead of physical locations. End nodes that frequently communicate with each other are assigned to the same VLAN, no matter where they are physically located on the network. Another benefit of VLAN is that you can change the network topology without physically moving stations or changing cable connections. Stations can be 'moved' to another VLAN and thus communicate with its members and share its resources, simply by changing the port VLAN settings from one VLAN to another. This allows VLAN to accommodate network moves, changes and additions with the greatest flexibility.

### 4.4.7.1 Port-Based VLAN

Port-based VLAN can effectively segment one network into several broadcast domains. Broadcast, multicast and unknown packets will be limited to within the VLAN. Port-Based VLAN is uncomplicated and fairly rigid in implementation and is useful for network administrators who wish to quickly and easily set up VLAN so as to isolate the effect of broadcast packets on their network.

The following screen page appears when you choose **Port Based VLAN** mode from the **VLAN Configuration** menu and then select **Configure VLAN** function.

**Configure Port Based VLAN**

Name	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	CPU
Default_VLAN	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	

Note: When you enable Port Isolation, Port Based VLAN is automatically invalid.

Since source addresses of the packets are listed in MAC address table of specific VLAN (except broadcast/multicast packets), in every VLAN the traffic between two ports will be two-way without restrictions.

Click **New** to add a new VLAN entry and then the following screen page appears.

Use **Edit** to modify the current VLAN setting.

**Configure Port Based VLAN**

Current/Total/Max	2/ 1/28							
Name	<input type="text"/>							
Port Number	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	9	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	17	18	19	20	21	22	23	24
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	25	26	27	28	CPU			
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

OK

**Current/Total/Max:** The number of current, total and maximum Port-Based VLAN entry or entries.

**Name:** Use the default name or specify a name for your Port-Based VLAN.


**Port Number:** By clicking on the checkbox of the corresponding ports, it denotes that the selected ports belong to the specified Port-Based VLAN.

#### 4.4.7.2 802.1Q VLAN

##### 802.1Q VLAN Concept

Port-Based VLAN is simple to implement and use, but it cannot be deployed cross switches VLAN. The 802.1Q protocol was developed in order to provide the solution to this problem. By tagging VLAN membership information to Ethernet frames, the IEEE 802.1Q can help network administrators break large switched networks into smaller segments so that broadcast and multicast traffic will not occupy too much available bandwidth as well as provide a higher level security between segments of internal networks.

##### Introduction to 802.1Q Frame Format:

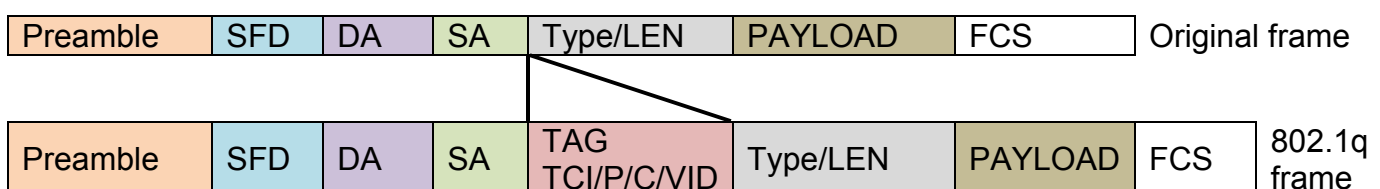

PRE	Preamble	62 bits	Used to synchronize traffic
SFD	Start Frame Delimiter	2 bits	Marks the beginning of the header
DA	Destination Address	6 bytes	The MAC address of the destination
SA	Source Address	6 bytes	The MAC address of the source
TCI	Tag Control Info	2 bytes set to 8100 for 802.1p and Q tags	
P	Priority	3 bits	Indicates 802.1p priority level 0-7
C	Canonical Indicator	1 bit	Indicates if the MAC addresses are in

VID	VLAN Identifier	12 bits	Canonical format - Ethernet set to "0"
T/L	Type/Length Field	2 bytes	Indicates the VLAN (0-4095)
Payload	< or = 1500 bytes	User data	Ethernet II "type" or 802.3 "length"
FCS	Frame Check Sequence	4 bytes	Cyclical Redundancy Check

## Important VLAN Concepts for 802.1Q VLAN Configuration:

There are two key concepts to understand.

- **Access-VLAN** specifies the VLAN ID to the switch port that will assign the VLAN ID to **untagged** traffic from that port. A port can only be assigned to one Access-VLAN at a time. When the port is configured as **Access Mode**, the port is called an **Access Port**, the link to/from this port is called an **Access Link**. The VLAN ID assigned is called **PVID**.
- **Trunk-VLAN** specifies the set of VLAN IDs that a given port is allowed to receive and send **tagged** packets. A port can be assigned to multiple Trunk-VLANs at a time. When the port is configured as **Trunk Mode**, the port is called a **Trunk Port**, the link to/from this port is called a **Trunk Link**. The VLAN ID assigned is called **VID**.

A port can be configured as below 802.1q VLAN modes :

- **Access Mode :**  
Access Links (the link to/from access ports) are the most common type of links on any VLAN switch. All **network hosts (such as PCs)** connect to the switch's Access Links in order to gain access to the local network. We configure only one **Access-VLAN** per port, that is, **the network hosts** will be allowed to access.  
  
It is important to note at this point that any **network host** connected to an Access Port is totally unaware of the VLAN assigned to the port. The **network host** simply assumes it is part of a single broadcast domain, just as it happens with any normal switch. During data transfers, any VLAN information or data from other VLANs is removed so the recipient has no information about them.
- **Trunk Mode :**  
Trunk Links (the link to/from trunk ports) is configured to carry packets for multiple VLANs. These types of ports are usually found in connections between switches. These links require the ability to carry packets from multiple VLANs because VLANs span over multiple switches.
- **Trunk Native Mode :**  
A Trunk-native port can carry untagged packets simultaneously with the 802.1Q tagged packets. When you assign a default Access-VLAN to the trunk-native port, all untagged traffic travels on the default Access-VLAN for the trunk-native port, and all untagged traffic is assumed to belong to this Access-VLAN. This Access-VLAN is referred to as the native VLAN ID for a Trunk-native Port. The native VLAN ID is the VLAN ID that carries untagged traffic on trunk-native ports.
- **DOT1Q-Tunnel Mode :**  
Business customers of service providers often have specific requirements for VLAN IDs and the number of VLANs to be supported. The VLAN ranges required by different customers in the same service-provider network might overlap, and traffic of customers through the infrastructure might be mixed. Assigning a unique range of VLAN IDs to each customer would restrict customer configurations and could easily exceed the VLAN limit (4096) of the IEEE 802.1Q specification.

Using the IEEE 802.1Q tunneling feature, service providers can use a single VLAN to support customers who have multiple VLANs. Customer VLAN IDs are preserved, and traffic from different customers is segregated within the service-provider network, even when they appear to be in the same VLAN. Using IEEE 802.1Q tunneling expands VLAN space by using a VLAN-in-VLAN hierarchy and retagging the tagged packets. A port configured to support IEEE 802.1Q tunneling is called a *tunnel port*. When you configure tunneling, you assign a tunnel port to a VLAN ID that is dedicated to tunneling. Each customer requires a separate service-provider VLAN ID, but that VLAN ID supports all of the customer's VLANs.

Customer traffic tagged in the normal way with appropriate VLAN IDs comes from an IEEE 802.1Q trunk port on the customer device and into a tunnel port on the service-provider edge switch. The link between the customer device and the edge switch is asymmetric because one end is configured as an IEEE 802.1Q trunk port, and the other end is configured as a tunnel port. You assign the tunnel port interface to an access VLAN ID that is unique to each customer.


### Example : PortX configuration

Configuration	Result
Trunk-VLAN = 10, 11, 12 Access-VLAN = 20 <b>Mode = Access</b>	PortX is an <b>Access Port</b> PortX's <b>VID</b> is ignored PortX's <b>PVID</b> is 20 PortX sends <b>Untagged</b> packets (PortX takes away VLAN tag if the PVID is 20) PortX receives <b>Untagged</b> packets only
Trunk-VLAN = 10,11,12 Access-VLAN = 20 <b>Mode = Trunk</b>	PortX is a <b>Trunk Port</b> PortX's <b>VID</b> is 10,11 and 12 PortX's <b>PVID</b> is ignored PortX sends and receives <b>Tagged</b> packets VID 10,11 and 12
Trunk-VLAN = 10,11,12 Access-VLAN = 20 <b>Mode = Trunk-native</b>	PortX is a <b>Trunk-native Port</b> PortX's <b>VID</b> is 10,11 and 12 PortX's <b>PVID</b> is 20 PortX sends and receives <b>Tagged</b> packets VID 10,11 and 12 PortX receives <b>Untagged</b> packets and add PVID 20
Trunk-VLAN = 10,11,12 Access-VLAN = 20 <b>Mode = Dot1q-tunnel</b>	PortX is a <b>Dot1q-tunnel Port</b> PortX's <b>VID</b> is ignored. PortX's <b>PVID</b> is 20 PortX sends <b>Untagged</b> or <b>Tagged</b> packets VID 20 PortX receives <b>Untagged</b> and <b>Tagged</b> packets and add PVID 20(outer tag)




### 4.4.7.3 Introduction to Q-in-Q (DOT1Q-Tunnel)

The IEEE 802.1Q double tagging VLAN is also referred to as Q-in-Q or VLAN stacking (IEEE 802.1ad). Its purpose is to expand the 802.1q VLAN space by tagging the inner tagged packets. In this way, a “double-tagged” frame is created so as to separate customer traffic within a service provider network. As shown below in “Double-Tagged Frame” illustration, an outer tag is added between source destination and inner tag at the provider network’s edge. This can support C-VLAN (Customer VLAN) over Metro Area Networks and ensure complete separation between traffic from different user groups. Moreover, the addition of double-tagged space increases the number of available VLAN tags which allow service providers to use a single SP-VLAN (Service Provider VLAN) tag per customer over the Metro Ethernet network.

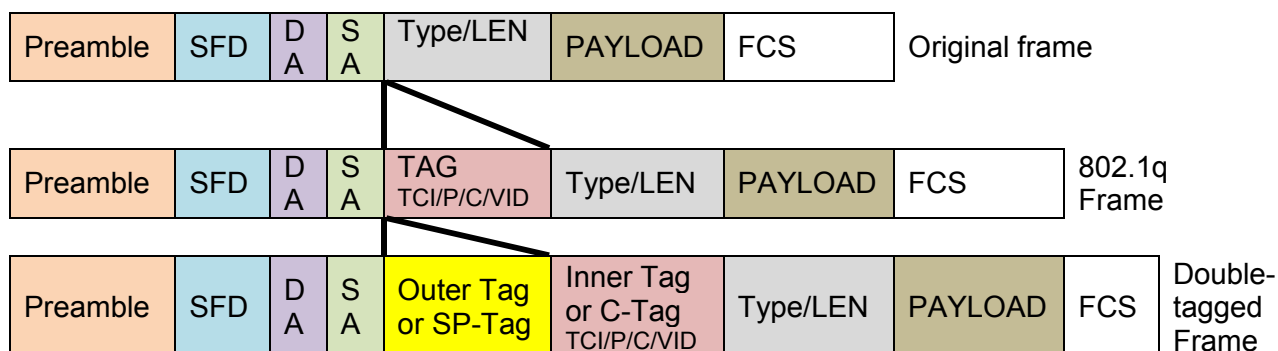

#### Double-Tagged Frame Format

As shown below in “Q-in-Q Example” illustration, Headquarter A wants to communicate with Branch 1 that is 1000 miles away. One common thing about these two locations is that they have the same VLAN ID of 20, called C-VLAN (Customer VLAN). Since customer traffic will be routed to service provider’s backbone, there is a possibility that traffic might be forwarded insecurely, for example due to the same VLAN ID used. Therefore, in order to get the information from Headquarter to Branch 1, the easiest way for the carrier to ensure security to customers is to encapsulate the original VLAN with a second VLAN ID of 100. This second VLAN ID is known as SP-VLAN (Service Provider VLAN) that is added as data enters the service provider’s network and then removed as data exits. Eventually, with the help of SP-Tag, the information sent from Headquarter to Branch 1 can be delivered with customers’ VLANs intactly and securely.

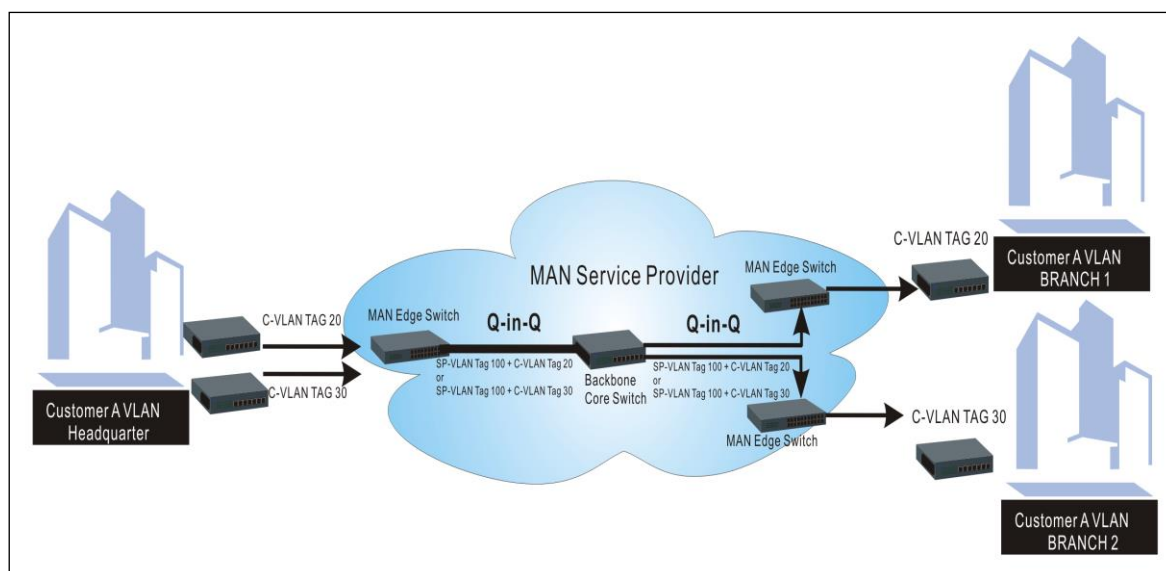

Q-in-Q Example

#### 4.4.7.4 IEEE 802.1q Tag VLAN

The following screen page appears when you choose **IEEE 802.1q Tag VLAN** mode from the **VLAN Configuration** menu and then select **VLAN interface** function.

**FOS-3128**

- System Information
- User Authentication
- Network Management
- Switch Management
  - Switch Configuration
  - Port Configuration
  - Link Aggregation
  - Rapid Spanning Tree
  - 802.1X Configuration
  - MAC Address Management
  - VLAN Configuration
    - Port Based VLAN
    - IEEE 802.1q Tag VLAN**
      - Trunk VLAN table
      - VLAN Interface
      - Management VLAN
      - VLAN Translation Configuration
  - QoS Configuration
  - IGMP/MLD Snooping
  - Static Multicast Configuration
  - Port Mirroring
  - SFP Port Threshold Configuration
  - Security Configuration
  - ACL Configuration

**VLAN Interface**

Dot1q-Tunnel EtherType: 9100 (0000-FFFF)

Port	Mode	Access-vlan (PVID)	Trunk-vlan
Port1	ACCESS	1	1
Port2	ACCESS	1	1
Port3	ACCESS	1	1
Port4	ACCESS	1	1
Port5	ACCESS	1	1
Port6	ACCESS	1	1
Port7	ACCESS	1	1
Port8	ACCESS	1	1
Port9	ACCESS	1	1
Port10	ACCESS	1	1
Port11	ACCESS	1	1

1. **Trunk VLAN table:** To create, modify or remove 802.1Q Tag VLAN settings.
2. **VLAN Interface:** To set up VLAN mode and create 802.1Q VLAN on the selected port(s).
3. **Management VLAN:** To set up management VLAN and management ports.

#### 4.4.7.4.1 Trunk VLAN Table

The following screen page appears if you choose **Trunk VLAN table**.

**Trunk VLAN table**

VLAN Name	VID	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	CPU
Default_VLAN	1	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	

V :Member - :Not Member

New

Edit

Delete

When CPU VLAN is changed, the port VLAN ID of all member ports in the new CPU VLAN will be changed to CPU's VID.

Click **New** to add a new VLAN and then the following screen page appears.

Click **Edit** to modify the selected IEEE 802.1Q Tag VLAN setting.

Click **Delete** to remove an existing VLAN you select.

**Configure VLAN**

Current/Total/Max VLANs	2/ 1/2048							
VLAN ID	0 (1-4094)							
VLAN Name								
Port Number	1	2	3	4	5	6	7	8
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	9	10	11	12	13	14	15	16
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	17	18	19	20	21	22	23	24
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	25	26	27	28	CPU			
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

V :Member - :Not Member

OK

**Current/Total/Max VLANs:** View-only field.

**Current:** This shows the number of currently registered VLAN.

**Total:** This shows the number of total registered VLANs.

**Max:** This shows the maximum number of available VLANs to be registered.

**VLAN ID:** Specify the ID for the currently registered VLAN.

**VLAN Name:** Specify a VLAN name for the currently registered VLAN.

**VLAN Members:** If you check the ports, it denotes that the ports selected belong to the specified VLAN group.

#### 4.4.7.4.2 VLAN Interface

The following screen page appears if you choose **VLAN Interface**.

**VLAN Interface**

Dot1q-Tunnel EtherType 9100 (0000-FFFF)

Port	Mode	Access-vlan (PVID)	Trunk-vlan
Port1	ACCESS	1	1
Port2	ACCESS	1	1
Port3	ACCESS	1	1
Port4	ACCESS	1	1
Port5	ACCESS	1	1
Port6	ACCESS	1	1
Port7	ACCESS	1	1
Port8	ACCESS	1	1
Port9	ACCESS	1	1
Port10	ACCESS	1	1
Port11	ACCESS	1	1
Port12	ACCESS	1	1
Port13	ACCESS	1	1
Port14	ACCESS	1	1
Port15	ACCESS	1	1
Port16	ACCESS	1	1
Port17	ACCESS	1	1
Port18	ACCESS	1	1
Port19	ACCESS	1	1
Port20	ACCESS	1	1
Port21	ACCESS	1	1
Port22	ACCESS	1	1
Port23	ACCESS	1	1
Port24	ACCESS	1	1
Port25	ACCESS	1	1
Port26	ACCESS	1	1
Port27	ACCESS	1	1
Port28	ACCESS	1	1

OK

**Dot1q-Tunnel EtherType:** Configure outer VLAN's ethertype. (Range: 0000~FFFF, Default: 9100).

**Mode:** Pull down the list in the **Mode** field and select the appropriate mode for each port. The port behavior of each mode is listed as the following table.

**Access:** Set the selected port to the access mode (untagged).

**Trunk:** Set the selected port to the trunk mode (tagged).

**Trunk-Native:** Enable native VLAN for untagged traffic on the selected port.

**DOT1Q-Tunnel:** Set the selected port to the dot1q-tunnel mode (tagged and untagged).

Mode	Port Behavior	
<b>Access</b>	Receive untagged packets only. Drop tagged packets.	
	Send untagged packets only.	
<b>Trunk</b>	Receive tagged packets only. Drop untagged packets.	
	Send tagged packets only.	
<b>Trunk Native</b>	Receive both untagged and tagged packets	Untagged packets: PVID is added
		Tagged packets: Stay intact
	When sending packets, PVID and VID will be compared. If PVID and VID are the same, PVID will be removed. If PVID and VID are different, the packets with the original tag (VID) will be sent.	
<b>DOT1Q-Tunnel</b>	Receive all tag and untag packets.	
	Send the packets with the outer tag marked as PVID.	

**Access-VLAN (PVID):** Specify the selected ports' Access-VLAN ID (PVID).

**Trunk-VLAN:** Specify the selected ports' Trunk-VLAN ID (VID).

#### 4.4.7.4.3 Management VLAN

The following screen page appears if you choose **Management VLAN**.

**Management VLAN**

**Management VLAN**

CPU VLAN ID 1

VLAN Mode Access

**Management Port**

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

OK Reset

**CPU VLAN ID:** Specify an existing VLAN ID.


**Mode:** Select the VLAN mode for this Management VLAN.

**Management Port:** Click on the checkbox of the corresponding ports that you would like them to become Management ports.

### 4.4.7.5 VLAN Translation Configuration

Besides the aforementioned ways of creating VLANs, another way to establish the translated VLANs is to configure VLAN ID translation (or VLAN mapping) on trunk ports connected to a customer network to map the original VLANs to the translated VLANs. Through this VLAN ID translation, it will save much effort in massive Ethernet network deployments.

Packets entering the trunk port are mapped to a translated VLAN based on the port number and the original VLAN ID of the packet. In a typical metro deployment, VLAN mapping takes place on user network interfaces. Because the VLAN ID is mapped to the translated VLAN on ingress, all forwarding operations on the Managed Switch are performed with the usage of the translated VLAN information rather than the original VLAN information.

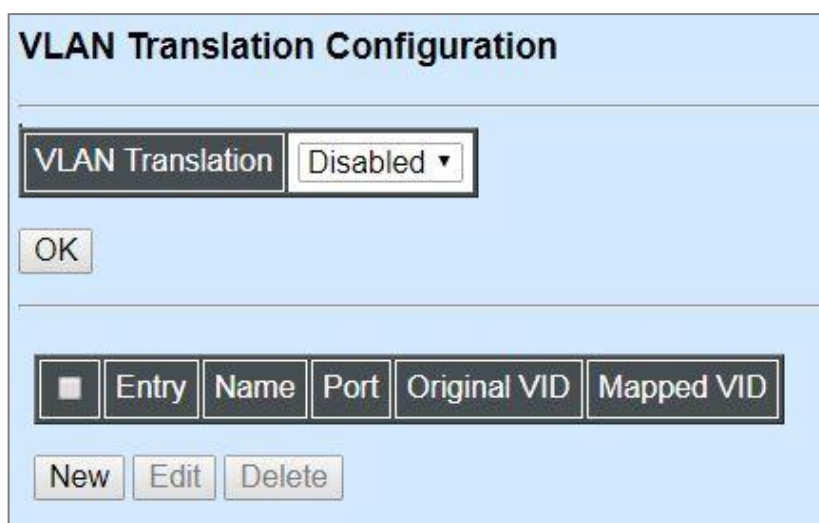

The image shows a 'VLAN Translation Configuration' dialog box. At the top, there is a section titled 'VLAN Translation' with a dropdown menu currently set to 'Disabled'. Below this is an 'OK' button. Further down, there is a table with columns: a checkbox, 'Entry', 'Name', 'Port', 'Original VID', and 'Mapped VID'. Below the table are three buttons: 'New', 'Edit', and 'Delete'.

<input type="checkbox"/>	Entry	Name	Port	Original VID	Mapped VID
--------------------------	-------	------	------	--------------	------------

**VLAN Translation:** Enable or disable VLAN Translation function globally. Click **OK** provided for VLAN Translation function, the new settings will be taken effect immediately.

Click **New** to add a new VLAN mapping rule and then the following screen page appears.

Click **Edit** to modify the configuration of the selected VLAN mapping rule by clicking on the checkbox of the corresponding rule.

Click **Delete** to remove an existing VLAN mapping rule by clicking on the checkbox of the corresponding rule. To remove all rules you had created from the VLAN mapping rule table, you can click on the top checkbox of this table to choose all of these rules at a time, and then click **Delete**.



### Add VLAN Translation

Occupied/Max Entry	0/44
Entry	1
Name	<input style="width: 90%;" type="text"/>
Port	Port 1 ▼
Original VID	<input style="width: 80%;" type="text" value="1"/>
Mapped VID	<input style="width: 80%;" type="text" value="1"/>

**Occupied/Max Entry:** View-only field.

**Occupied:** This shows the amount of total VLAN mapping rules that have already been created.

**Max:** This shows the maximum number available for VLAN mapping rules. The maximum number is 44.

**Entry:** View-only field. This shows the number of VLAN mapping rule that is currently created.

**Name:** Specify a name for the VLAN mapping rule. Up to 32 alphanumeric characters can be accepted.

**Port:** Specify one preferred trunk port used for the VLAN ID translation. (For more details on trunk port settings, please refer to [Section 4.4.7.4.2 “VLAN Interface”](#).)

**Original VID:** Specify the original VLAN ID entering the switch from the customer network for the VLAN ID translation. Valid range: 1-4094.

**Mapped VID:** Specify the preferred VLAN ID that the assigned original VID will be translated. Valid range: 1-4094.

---

**NOTE:**

1. Different Mapped VIDs cannot be assigned to the trunk port with the same original VID.
  2. Different original VIDs belonging to the specific port cannot be translated into the same Mapped VID.
- 

Click **OK** provided for adding/editing VLAN mapping rule, the new settings will be taken effect immediately. This entry will be listed on the VLAN mapping rule table.

## 4.4.8 QoS Configuration

Network traffic is always unpredictable and the only basic assurance that can be offered is the best effort traffic delivery. To overcome this challenge, Quality of Service (QoS) is applied throughout the network. This ensures that network traffic is prioritized according to specified criteria and receives preferential treatments.

QoS enables you to assign various grades of network service to different types of traffic, such as multi-media, video, protocol-specific, time critical, and file-backup traffic. To set up the priority of packets in the Managed Switch, click the folder **QoS Configuration** from the **Switch Management** menu and then two options within this folder will be displayed.

**FOS-3128**

- System Information
- User Authentication
- Network Management
  - Switch Management
    - QoS Configuration**
      - QoS Priority
      - QoS Rate Limit
    - IGMP/MLD Snooping
    - Static Multicast Configurati
    - Port Mirroring
    - SFP Port Threshold Confi
    - Security Configuration
      - ACL Configuration
      - Layer 2 Protocol Tunnelin
      - LLDP Configuration
      - Loop Detection
      - Fast Redundancy

**QoS Priority Configuration**

QoS Priority:

Priority Mode	Disable
Queue Mode	Strict
Queue Weight(Q0:Q1:Q2:Q3:Q4:Q5:Q6:Q7)	1 : 2 : 4 : 8 : 16 : 32 : 64 : 128
802.1p Priority Map	0
DSCP Priority Map	DSCP(0)

User Priority:

Port Number	1	2	3	4	5	6	7	8
Port Priority	0	0	0	0	0	0	0	0
Port Number	9	10	11	12	13	14	15	16
Port Priority	0	0	0	0	0	0	0	0
Port Number	17	18	19	20	21	22	23	24
Port Priority	0	0	0	0	0	0	0	0
Port Number	25	26	27	28	CPU			
Port Priority	0	0	0	0				

1. **QoS Priority:** To set up each port's QoS default class, Priority, Queuing Mode, Queue Weighted and Remarking.
2. **QoS Rate Limit:** To configure each port's Ingress and Egress Rate.

### 4.4.8.1 QoS Priority

Select the option **QoS Priority** from the **QoS Configuration** menu and then the following screen page appears.

**QoS Priority Configuration**

QoS Priority:

Priority Mode	Disable
Queue Mode	Strict
Queue Weight(Q0:Q1:Q2:Q3:Q4:Q5:Q6:Q7)	1 : 2 : 4 : 8 : 16 : 32 : 64 : 128
802.1p Priority Map	0
DSCP Priority Map	DSCP(0)



**Priority Mode:** Select the QoS priority mode of the Managed Switch.

**IEEE 802.1p:** IEEE 802.1p mode utilizes p-bits in VLAN tag for differential service.

**DSCP:** DSCP mode utilizes TOS field in IPv4 header for differential service.

**Disable:** Disable QoS.

**Queue Mode:** Specify the queue mode as Strict or Weight.

**Strict:** This indicates that services to the egress queues are offered in the sequential order and all traffic with higher priority queues is transmitted first before lower priority queues are serviced.

**Weight:** Weighted Round-Robin shares bandwidth at the egress ports by using scheduling weights 1, 2, 4, 8, 16, 32, 64, 128 for queues 1 through 8 respectively.

**Queue Weight:** Specify the Queue weight for each Queue.

**802.1p Priority Map:** Assign an 802.1p value (0~7) of 8 different levels to the specific queue.

**DSCP Priority Map:** Assign a DSCP value (0~63) of 64 different levels to the specific queue.

**User Priority:**

User Priority:								
Port Number	1	2	3	4	5	6	7	8
Port Priority	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
Port Number	9	10	11	12	13	14	15	16
Port Priority	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
Port Number	17	18	19	20	21	22	23	24
Port Priority	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
Port Number	25	26	27	28	CPU			
Port Priority	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>			

There are eight priority levels that you can choose to classify data packets. Specify one of the listed options for CoS (Class of Service) priority tag values. The default value is "0".

The default 802.1p settings are shown in the following table:

Priority Level	normal	low	low	normal	medium	Medium	High	high
802.1p Value	0	1	2	3	4	5	6	7

## Remarking:

Remarking:

802.1p Remarking

☐

802.1p Remarking Map

Index	Rx-802.1p	New-802.1p	Index	Rx-802.1p	New-802.1p
1	0	0 ▼	2	1	0 ▼
3	2	0 ▼	4	3	0 ▼
5	4	0 ▼	6	5	0 ▼
7	6	0 ▼	8	7	0 ▼

DSCP Remarking

☐

DSCP Remarking Map

Index	Rx-DSCP	New-DSCP	Index	Rx-DSCP	New-DSCP
1	0	DSCP(0) ▼	2	1	DSCP(0) ▼
3	2	DSCP(0) ▼	4	3	DSCP(0) ▼
5	4	DSCP(0) ▼	6	5	DSCP(0) ▼
7	6	DSCP(0) ▼	8	7	DSCP(0) ▼

Note: Remarking rule won't affect priority map rule.

OK

## Configure 802.1p Remarking:

Check **802.1p Remarking** to enable.

802.1p Remarking		<input type="checkbox"/>				
802.1p Remarking Map	Index	Rx-802.1p	New-802.1p	Index	Rx-802.1p	New-802.1p
	1	0	0 ▼	2	1	0 ▼
	3	2	0 ▼	4	3	0 ▼
	5	4	0 ▼	6	5	0 ▼
	7	6	0 ▼	8	7	0 ▼

This allows you to enable or disable 802.1p remarking for each priority. The default setting is disabled.

## Configure DSCP Remarking:

Check **DSCP Remarking** to enable.

DSCP Remarking	<input type="checkbox"/>					
DSCP Remarking Map	Index	Rx-DSCP	New-DSCP	Index	Rx-DSCP	New-DSCP
	1	<input type="text" value="0"/>	DSCP(0) ▼	2	<input type="text" value="1"/>	DSCP(0) ▼
	3	<input type="text" value="2"/>	DSCP(0) ▼	4	<input type="text" value="3"/>	DSCP(0) ▼
	5	<input type="text" value="4"/>	DSCP(0) ▼	6	<input type="text" value="5"/>	DSCP(0) ▼
	7	<input type="text" value="6"/>	DSCP(0) ▼	8	<input type="text" value="7"/>	DSCP(0) ▼

This allows you to enable or disable DSCP remarking for each priority. The default setting is disabled.

### 4.4.8.2 QoS Rate Limit

Select the option **QoS Rate Limit** from the **QoS Configuration** menu and then the following screen page appears.

#### Configure Ingress Rate:

Ingress Rate (500-1000000 Kbits/Sec 0:Disable)							
1	2	3	4	5	6	7	8
0	0	0	0	0	0	0	0
9	10	11	12	13	14	15	16
0	0	0	0	0	0	0	0
17	18	19	20	21	22	23	24
0	0	0	0	0	0	0	0
25		26		27		28	
0		0		0		0	

This allows users to specify each port's inbound bandwidth. The excess traffic will be dropped. Specifying "0" is to disable this function.

#### Configure Egress Rate:

Egress Rate (500-1000000 Kbits/Sec 0:Disable)							
1	2	3	4	5	6	7	8
0	0	0	0	0	0	0	0
9	10	11	12	13	14	15	16
0	0	0	0	0	0	0	0
17	18	19	20	21	22	23	24
0	0	0	0	0	0	0	0
25		26		27		28	
0		0		0		0	

This allows users to specify each port's outbound bandwidth. The excess traffic will be dropped. Specifying "0" is to disable this function.

## 4.4.9 IGMP/MLD Snooping

The Internet Group Management Protocol (IGMP) is a communications protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. It can be used more efficiently when supporting activities, such as online streaming video and gaming.

IGMP Snooping is the process of listening to IGMP traffic. IGMP snooping, as implied by the name, is a feature that allows the switch to “listen in” on the IGMP conversation between hosts and routers by processing the layer 3 packets that IGMP packets sent in a multicast network.

When IGMP snooping is enabled in a switch, it analyses all the IGMP packets between hosts connected to the switch and multicast routers in the network. When a switch receives an IGMP report for a given multicast group from a host, the switch adds the host's port number to the multicast list for that group. When the switch hears an IGMP Leave, it removes the host's port from the table entry.

IGMP snooping can reduce multicast traffic from streaming and make other bandwidth intensive IP applications run more effectively. A switch using IGMP snooping will only forward multicast traffic to the hosts in that traffic. This reduction of multicast traffic reduces the packet processing at the switch (at the cost of needing additional memory to handle the multicast tables) and also decreases the workload at the end hosts since their network cards (or operating system) will not receive and filter all the multicast traffic generated in the network.

Multicast Listener Discovery (MLD) is a component of the Internet Protocol Version 6 (IPv6) suite. MLD is used by IPv6 routers for discovering multicast listeners on a directly attached link, much like IGMP is used in IPv4.

Select the folder **IGMP/MLD Snooping** from the **Switch Management** menu and then five options within this folder will be displayed.

**FOS-3128**

- System Information
- User Authentication
- Network Management
  - Switch Management
    - Switch Configuration
    - Port Configuration
    - Link Aggregation
    - Rapid Spanning Tree
    - 802.1X Configuration
    - MAC Address Manager
    - VLAN Configuration
    - QoS Configuration
    - IGMP/MLD Snooping**
      - IGMP/MLD Configure
      - IGMP/MLD VLAN ID Co
      - IPMC Segment
      - IPMC Profile
      - IGMP Filtering
    - Static Multicast Configurati
    - Port Mirroring
    - SFP Port Threshold Config
  - Security Configuration
  - ACL Configuration
  - Layer 2 Protocol Tunneling
  - LLDP Configuration

**IGMP/MLD Configuration**

IGMP/MLD Snooping	Disabled ▾
IGMPv3/MLDv2 Snooping	Disabled ▾
Unregistered IPMC Flooding	Disabled ▾
Query interval	125 1-6000(Second)
Query Response interval	100 1-255(1/10 Sec)
Fast Leave	Disabled ▾

Router Port	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	9	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
25	26	27	28					
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					

Note: Query interval must be greater than Query Response interval.

OK



1. **IGMP/MLD Configure:** To enable or disable IGMP/MLD Snooping, IGMPv3/MLDv2 Snooping, Unregistered IPMC Flooding and set up router ports.
2. **IGMP/MLD VLAN ID Configuration:** To set up the ability of IGMP/MLD snooping and querying with VLAN.
3. **IPMC Segment:** To create, edit or delete IPMC segment.
4. **IPMC Profile:** To create, edit or delete IPMC profile.
5. **IGMP Filtering:** To enable or disable IGMP filter and configure each port's IGMP filter.

#### 4.4.9.1 IGMP/MLD Configure

Select the option **IGMP/MLD Configure** from the **IGMP/MLD Snooping** menu and then the following screen page appears. Please note that Query Interval value must be greater than the value of Query Response Interval.

IGMP/MLD Configuration

IGMP/MLD Snooping	Disabled ▾	
IGMPv3/MLDv2 Snooping	Disabled ▾	
Unregistered IPMC Flooding	Disabled ▾	
Query interval	125	1-6000(Second)
Query Response interval	100	1-255(1/10 Sec)
Fast Leave	Disabled ▾	

Router Port

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Note: Query interval must be greater than Query Response interval.

OK

**IGMP/MLD Snooping:** When enabled, the Managed Switch will monitor network traffic and determine which hosts to receive multicast traffic.

**IGMPv3/MLDv2 Snooping:** When enabled, the Managed Switch will monitor network traffic and determine which hosts to receive multicast traffic. This is for IGMPv3 and MLDv2 only.

**Unregistered IPMC Flooding:** Set forwarding mode for unregistered (not-joined) IP multicast traffic. The traffic will flood when enabled. However, the traffic will be forwarded to router-ports only when disabled.

**Query Interval:** The Query Interval is used to set the time between transmitting IGMP queries, entries between 1 ~ 6000 seconds are allowed. (Default value is 125, One Unit =1 second)

**Query Response Interval:** This determines the maximum amount of time allowed before sending an IGMP response report. (Default value is 100, One Unit=0.1 second)

**Fast Leave:** The Fast Leave option may be enabled or disabled. When enabled, this allows an interface to be ignored without sending group-specific queries. The default setting is “Disabled”.

**Router Port:** When ports are connected to the IGMP administrative routers, they should be checked.

#### 4.4.9.2 IGMP/MLD VLAN ID Configuration

Select the option **IGMP/MLD VLAN ID Configuration** from the **IGMP/MLD Snooping** menu and then the following screen page with the functions of IGMP Snooping and Querying in VLAN(s) appears.



VID	VLAN Name	Snooping	Querying
1	Default_VLAN	Disabled ▼	Disabled ▼


OK

**Snooping:** When enabled, the port in VLAN will monitor network traffic and determine which hosts to receive the multicast traffic.

**Querying:** When enabled, the port in VLAN can serve as the Querier which is responsible for asking hosts whether they would like to receive multicast traffic.

### 4.4.9.3 IPMC Segment

Select the option **IPMC Segment** from the **IGMP/MLD Snooping** menu and then the following screen page with the configuration of IPMC Segment ID, Name and IP Range appears.

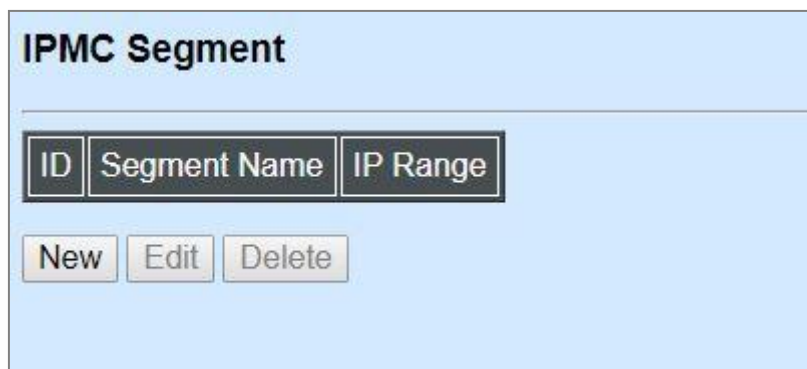

The screenshot shows a web interface titled "IPMC Segment". Below the title, there are three input fields labeled "ID", "Segment Name", and "IP Range". Below these fields are three buttons: "New", "Edit", and "Delete".

**ID:** View-only field that shows the current registered ID number.


**Segment Name:** View-only field that shows the current registered Name.

**IP Range:** View-only field that shows the current registered IP Range.

Click **New** to register a new IPMC Segment and then the following screen page appears.

Click **Edit** to modify the selected IPMC Segment settings.

Click **Delete** to remove an existing IPMC Segment registration.

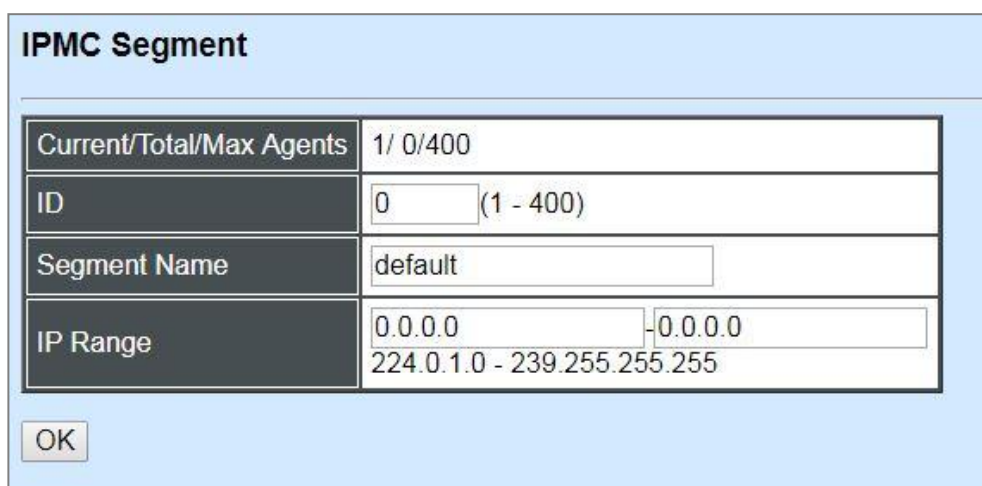

The screenshot shows a dialog box titled "IPMC Segment". It contains a table with the following fields:

Current/Total/Max Agents	1/ 0/400
ID	0 (1 - 400)
Segment Name	default
IP Range	0.0.0.0 - 0.0.0.0 224.0.1.0 - 239.255.255.255

Below the table is an "OK" button.

**Current/Total/Max Agents:** View-only field.

**Current:** This shows the number of current registered IPMC Segment.

**Total:** This shows the amount of total registered IPMC Segments.

**Max:** This shows the maximum number available for IPMC Segment. The maximum number is 400.


**ID:** Specify a number from 1~400 for a new ID.

**Segment Name:** Enter an identification name. This field is limited to 20 characters.

**IP Range:** Specify the multicast IP range for the registered segment. (The IP range is from 224.0.1.0~239.255.255.255.)

#### 4.4.9.4 IPMC Profile

Select the option **IPMC Profile** from the **IGMP/MLD Snooping** menu and then the following screen page with the configuration of IPMC Profile appears.

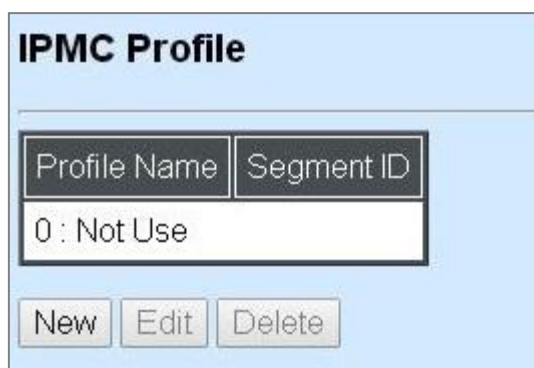

The screenshot shows a window titled "IPMC Profile". Inside, there are two input fields: "Profile Name" and "Segment ID". Below these fields, the text "0 : Not Use" is displayed. At the bottom of the window, there are three buttons: "New", "Edit", and "Delete".


**Profile Name:** View-only field that shows the current registered profile name(s).

**Segment ID:** View-only field that shows the current registered segment ID(s).

Click **New** to register a new IPMC Profile and then the following screen page appears.

Click **Edit** to modify the IPMC Profile settings.

Click **Delete** to remove a current IPMC Profile registration.

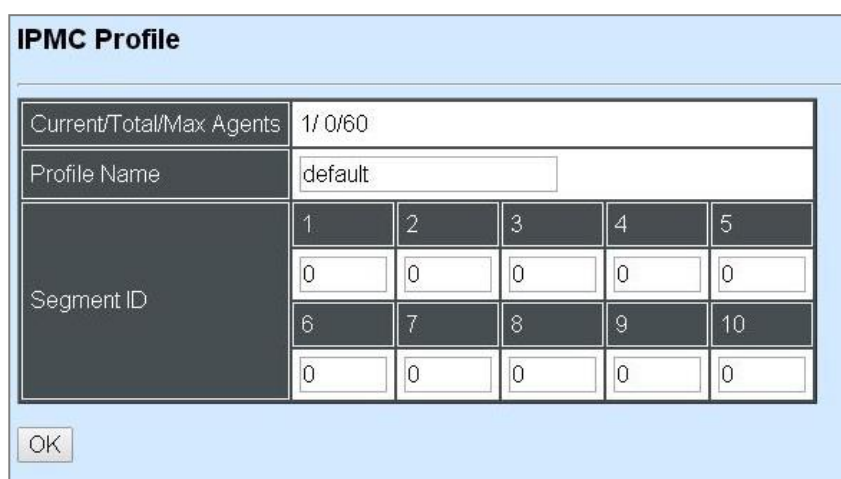

The screenshot shows a window titled "IPMC Profile". Inside, there is a table with the following structure:

Current/Total/Max Agents	1/ 0/60				
Profile Name	default				
Segment ID	1	2	3	4	5
	0	0	0	0	0
	6	7	8	9	10
	0	0	0	0	0

At the bottom left of the window, there is an "OK" button.

**Current/Total/Max Agents:** View-only field.

**Current:** This shows the number of current registered IPMC Profile.

**Total:** This shows the amount of total IPMC Profiles that are registered.

**Max:** This shows the maximum number available for IPMC Profile. The maximum number is 60.



**Profile Name:** Enter an identification name. This field is limited to 20 characters.

**Segment ID:** Specify the segment ID that is registered in IPMC Segment.

#### 4.4.9.5 IGMP Filtering

Select the option **IGMP Filtering** from the **IGMP/MLD Snooping** menu and then the following screen page appears.

Port	Channel Limit	Enable	IPMC Profile
Port1	512	Off ▼	
Port2	512	Off ▼	
Port3	512	Off ▼	
Port4	512	Off ▼	
Port5	512	Off ▼	
Port6	512	Off ▼	
Port7	512	Off ▼	
Port8	512	Off ▼	
Port9	512	Off ▼	
Port10	512	Off ▼	
Port11	512	Off ▼	
Port12	512	Off ▼	
Port13	512	Off ▼	
Port14	512	Off ▼	
Port15	512	Off ▼	
Port16	512	Off ▼	
Port17	512	Off ▼	
Port18	512	Off ▼	
Port19	512	Off ▼	
Port20	512	Off ▼	
Port21	512	Off ▼	
Port22	512	Off ▼	
Port23	512	Off ▼	
Port24	512	Off ▼	
Port25	512	Off ▼	
Port26	512	Off ▼	
Port27	512	Off ▼	
Port28	512	Off ▼	

**IGMP Filter:** This option is to globally enable or disable the IGMP filter. The default setting is “Disabled”.

**Port:** View-only field that shows the port number that is currently configured.

**Channel Limit:** Specify the maximum transport multicast stream. Valid range is 1~512.

**Enable:** To enable each port’s IGMP filtering function. The default setting is “Off”, which is disabled.

**IPMC Profile:** In IGMP filtering, it only allows information specified in IPMC Profile fields to pass through. (The field for IPMC Profile name is from the entry registered in **IPMC Profile** option.)

## 4.4.10 Static Multicast Configuration

Select the option **Static Multicast Configuration** from the **Switch Management** menu and then the following screen page appears.



The image shows a window titled "Static Multicast Configuration". Inside the window, there are three input fields: "IP/IPv6 Address", "VID", and "Forwarding Port". Below these fields are three buttons: "New", "Edit", and "Delete".

**IP/IPv6 Address:** View-only field that shows the current source IP address of multicast stream.


**VID:** View-only field that shows the specified VLAN ID for current multicast stream.

**Forwarding port:** View-only field that shows the forwarding port for current multicast stream.

Click **New** to register a new Static Multicast configuration and then the following screen page appears.

Click **Edit** to modify static multicast configuration settings.

Click **Delete** to remove a current Static Multicast configuration.

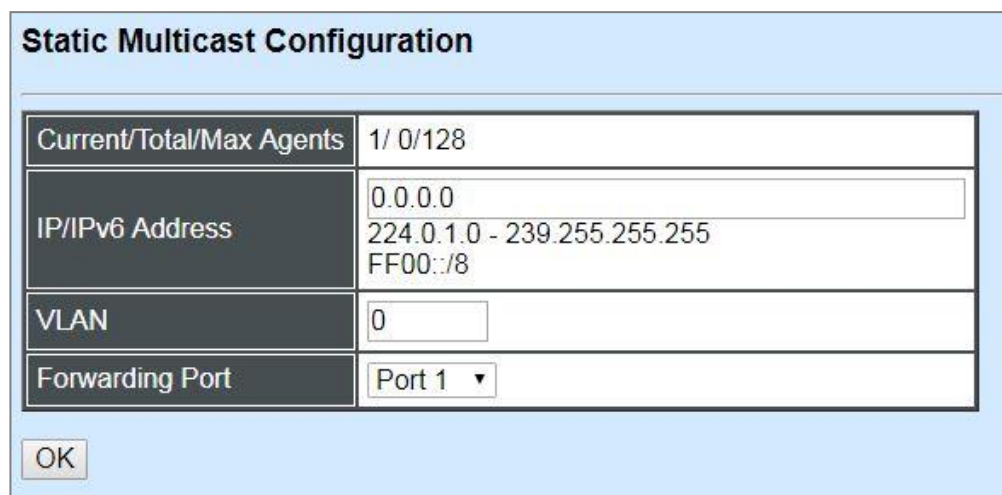

The image shows a window titled "Static Multicast Configuration". Inside the window, there is a table with the following data:

Current/Total/Max Agents	1/ 0/128
IP/IPv6 Address	0.0.0.0 224.0.1.0 - 239.255.255.255 FF00::/8
VLAN	0
Forwarding Port	Port 1 ▼

At the bottom left of the window is an "OK" button.

**Current/Total/Max Agents:** View-only field.

**Current:** This shows the number of current registered static multicast configuration.

**Total:** This shows the amount of total registered static multicast configuration.

**Max:** This shows the maximum number available for static multicast configuration. The default maximum number is 128.


**IP/IPv6 Address:** Specify the multicast stream source IPv4/IPv6 address.

**VLAN:** Specify a VLAN ID for multicast stream.

**Forwarding port:** Select a port number for multicast stream forwarding.

## 4.4.11 Port Mirroring

In order to allow the target port to mirror the source Port(s) and enable traffic monitoring, select the option **Port Mirroring** from the **Switch Management** menu and then the following screen page appears.

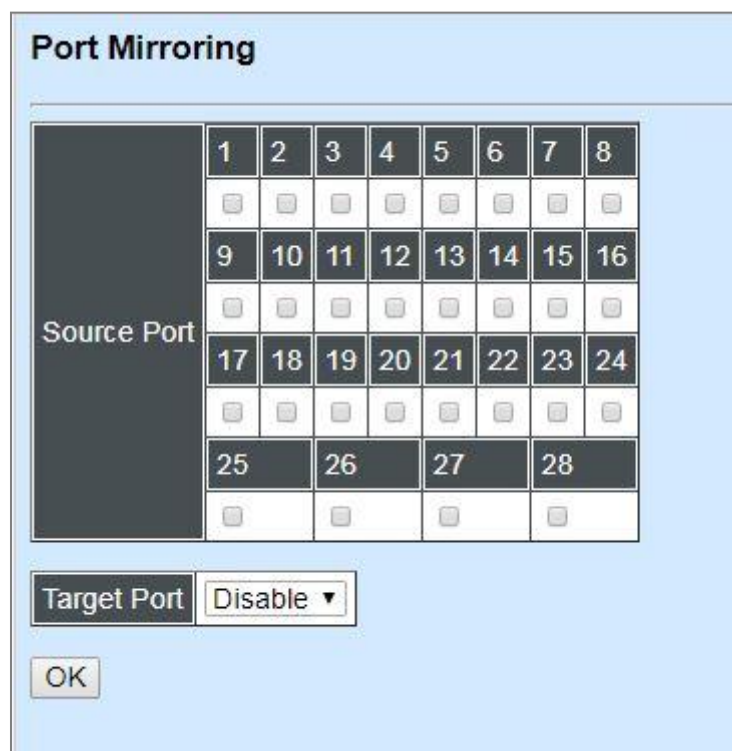

The image shows a 'Port Mirroring' configuration window. It features a grid for selecting source ports (1-28) and a 'Target Port' dropdown menu set to 'Disable'. An 'OK' button is at the bottom left.

Source Port	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	9	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	17	18	19	20	21	22	23	24
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	25	26	27	28				
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Target Port: Disable ▼

OK

**Source Port:** Select the preferred source port(s) for mirroring by clicking on the checkbox of the corresponding port number. Please note that the port selected as the target port cannot be the source port.

**Target Port:** Choose from port 1 to port 28 or “disable” from the pull-down menu to designate the target port or disable the port mirroring function.

## 4.4.12 SFP Port Threshold Configuration

**SFP Port Threshold Configuration** function not only displays all SFP ports' current temperature, voltage, TX power and RX power information but is capable of detecting whether these SFP ports are at normal status or not.

Select the option **SFP Port Threshold Configuration** from the **Switch Management** menu and then the following screen page appears. In the display of the above SFP-related information, you can decide one or all items to be shown on the webpage at a time by selecting **All/Temperature/Voltage/TX power/RX power** from the pull-down menu located at the top of the table list (see the figure below) upon your requirements.

Once this function of the specific SFP port is set to “Enabled”, the alarm message will be sent via SNMP trap and syslog in the event of abnormal situations, including temperature/voltage/TX power/RX power is over the configured **High** value or is under the configured **Low** value. A normal message will also be sent to notify the user when this SFP port's temperature/voltage/TX power/RX power higher or lower the configured threshold returns to the normal status. From these notification, the user can realize the real-time SFP status to prevent the disconnection and packets loss of any fiber ports from being taken place due to the occurrence of abnormal events.

SFP Port Threshold Configuration

SFP Threshold Enable

Disabled

Notification

Threshold Interval

600

(120-86400) Seconds

Continuous Alarm

☒

All

All

Temperature

Voltage

TX Power

RX Power

		Current	Temperature Threshold (-40.0 - 120.0 °C)				Voltage Threshold (2.60 - 4.00 V)				TX Power Threshold (-30.0 - 10.0 dBm)				RX Power Threshold (-40.0 - 10.0 dBm)			
			High		Low		High		Low		High		Low		High		Low	
			Enable	Value	Enable	Value	Enable	Value	Enable	Value	Enable	Value	Enable	Value	Enable	Value	Enable	Value
<input type="checkbox"/>	All	--	<input type="checkbox"/>	0.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	0.0
<input type="checkbox"/>	1	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	2	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	3	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	4	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	5	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	6	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	7	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	8	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	9	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	10	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0
<input type="checkbox"/>	11	--	<input type="checkbox"/>	70.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	3.6	<input type="checkbox"/>	3.0	<input type="checkbox"/>	0.0	<input type="checkbox"/>	-20.0	<input type="checkbox"/>	-5.0	<input type="checkbox"/>	-25.0

**SFP Threshold Enable:** Globally enable or disable the alarm notification of temperature/voltage/TX power/RX power for SFP ports of the Managed Switch.

**Threshold Interval for Notification:** Specify the time interval of sending SFP ports' temperature/voltage/TX power/RX power alarm message in seconds. The interval can be set from 120 to 86400 seconds. The default setting is 600 seconds.

**Continuous Alarm for Notification:** Enable or disable the continuous alarm message sending function for SFP ports' temperature/voltage/TX power/RX power. Default is “Enabled”.

In case this function is enabled, the alarm message will be sent continuously upon the time interval configured in **Threshold Interval** parameter to notify the user once SFP port's temperature/voltage/TX power/RX power is at the abnormal status.

In case this function is disabled, however, the alarm message will be sent only one time to notify the user once SFP port's temperature/voltage/TX power/RX power is at the abnormal status.

**Select:** Enable or disable any new settings configured in the row of **All** port to be applied as well to all ports at a time. To enable it, please click on its checkbox in the row of **All** port, and then all ports will be checked immediately afterwards.

**Port:** The number of the SFP port.

**Current** of Temperature/Voltage/TX power/RX power Threshold parameter: Display all SFP ports' temperature/voltage/TX power/RX power currently detected. It will be shown in red color if its current temperature/voltage/TX power/RX power is higher than the value you configure in the **High** field or is under the value you configure in the **Low** field.

**Enable** in High & Low fields of Temperature/Voltage/TX power/RX power Threshold parameter: Click on the checkbox of the corresponding port number to respectively enable the configured threshold for the specific SFP port's alarm notification of temperature/voltage/TX power/RX power.

**High/Low Value** of Temperature Threshold parameter: Specify SFP port's temperature threshold. Valid range: -40.0 ~120.0 degrees centigrade. Default value is High: 70, Low: 0.

**High/Low Value** of Voltage Threshold parameter: Specify SFP port's voltage threshold. Valid range: 2.60 ~4.00 V. Default value is High: 3.6, Low: 3.0.

**High/Low Value** of TX Power Threshold parameter: Specify SFP port's TX power threshold. Valid range: -30.0 ~ 10.0 dBm. Default value is High: 0, Low:-20.0.

**High/Low Value** of RX Power Threshold parameter: Specify SFP port's RX power threshold. Valid range: -40.0 ~10.0 dBm. Default value is High:-5.0, Low:-25.0.

Click **OK**, the new configuration will be taken effect immediately.



## 4.4.13 Security Configuration

In this section, several Layer 2 security mechanisms are provided to increase the security level of your Managed Switch. Layer 2 attacks are typically launched by or from a device that is physically connected to the network. For example, it could be a device that you trust but has been taken over by an attacker. By default, most security functions available in this Managed Switch are turned off, to prevent your network from malicious attacks, it is extremely important for you to set up appropriate security configurations. This section provides several security mechanisms to protect your network from unauthorized access to a network or redirect traffic for malicious purposes, such as Source IP Spoofing and ARP Spoofing.

Select the folder **Security Configuration** from the **Switch Management** menu and then 11 options within this folder will be displayed

The screenshot shows the FOS-3128 web interface. On the left is a tree view of the configuration menu. The 'Security Configuration' folder is expanded, showing 11 sub-items: DHCP Opt82 / DHCPv6 Op, DHCP Opt82 Configuration, DHCP Snooping, PPPoE Configuration, IP Source Guard Settings, Port Isolation, Static IP/IPv6 Table Configu, and Storm Control. The main panel on the right is titled 'DHCP Opt82 / DHCPv6 Option37 Settings'. It contains a dropdown menu for 'DHCP Opt82 Relay Agent Enable' set to 'Disabled'. Below this are two tables for port configuration: 'Opt82 Port' and 'Opt82 Trust Port'. Each table has 28 rows and 8 columns, with checkboxes for each port.

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

1. **DHCP Opt82/DHCPv6 Opt37 Settings:** To enable or disable DHCP Option 82 (for DHCPv4) and Option 37 (for DHCPv6) relay agent global setting and show each port's configuration.
2. **DHCP Opt82 Configuration:** Set up suboptions such as Circuit-ID and Remote-ID.
3. **DHCP Snooping:** Customer port filtering setting.
4. **PPPoE Configuration:** Set up the PPPoE-IA trust port(s) for security.
5. **IP Source Guard Settings:** Customer port DHCP snooping setting.

6. **Port Isolation:** Set up port's communication availability that they can only communicate with a given "uplink".
7. **Static IP/IPv6 Table Configuration:** To create static IPv4/IPv6 table for DHCP snooping setting.
8. **Storm Control:** To prevent the Managed Switch from unicast, broadcast, and multicast storm.
9. **MAC Limiters:** Set up MAC Address limit & the port's action, and enable/disable the Sticky MAC address function.
10. **Port Linkup Delay:** Set up the delay time for activating the delay port(s).
11. **Port Link Flap:** Set up the maximum times of a port's port link flap (linkdown or linkup) for sending the alarm message out via SNMP trap and syslog.



### 4.4.13.1 DHCP Option 82/DHCPv6 Option 37 Settings

The Managed Switch can add information about the source of client DHCP requests that relay to DHCP server by adding Relay Agent Information. This helps provide authentication about the source of the requests. The DHCP server can then provide an IP address based on this information. The feature of DHCP Relay Agent Information adds Agent Information field to the Option 82 field that is in the DHCP headers of client DHCP request frames.

#### Configure Opt82/Opt37 Port Setting:

Select the option **DHCP Opt82 / DHCPv6 Opt37 Settings** from the **Security Configuration** menu and then the following screen page appears.

**DHCP Opt82 / DHCPv6 Option37 Settings**

DHCP Opt82 Relay Agent Enable

Disabled ▾

Opt82 Port

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Opt82 Trust Port

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Current Remote-ID

00:06:19:57:31:28

OK

**DHCP Opt82 Relay Agent Enable:** To globally enable or disable DHCP Option 82 Relay Agent global setting. When enabled, Relay Agent Information option is inserted by the DHCP relay agent when forwarding client-originated DHCP packets to a DHCP server. Servers recognizing the Relay Agent Information option may use the Information to implement IP address or other parameter assignment policies. Switch or Router (as the DHCP relay agent) intercepting the DHCP requests, appends the circuit ID + remote ID into the option 82 fields (or Option 37 when DHCPv6) and forwards the request message to DHCP server.

## Opt82 Port:

**Enable (check):** Add Agent information.

**Disable (uncheck):** Forward.

**Opt82 Trust Port:** Click on the checkbox of the corresponding port number if you would like ports to become trust ports. The trusted ports will not discard DHCP messages.

For example,

**DHCP Opt82 / DHCPv6 Option37 Settings**

DHCP Opt82 Relay Agent Enable Enabled ▼

Opt82 Port

1	2	3	4	5	6	7	8
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9	10	11	12	13	14	15	16
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
17	18	19	20	21	22	23	24
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
25	26	27	28				
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>				

Opt82 Trust Port

1	2	3	4	5	6	7	8
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Current Remote-ID 00:06:19:57:31:28

OK

**A DHCP request is from Port 1 that is marked as both Opt82 port and trust port.**

- A. If a DHCP request is with Opt82 Agent information and then the Managed Switch will forward it.
- B. If a DHCP request is without Opt82 Agent information and then the Managed Switch will add Opt82 Agent information and forward it.

**A DHCP request is from Port 2 that is marked as Opt82 port.**

- A. If a DHCP request is with Opt82 Agent information and then the Managed Switch will drop it because it is not marked as a trust port.
- B. If a DHCP request is without Opt82 Agent information and then the Managed Switch will add Opt82 Agent information and then forward it.

#### 4.4.13.2 DHCP Option 82 Configuration

The Managed Switch adds the option 82 information in the packet when it receives the DHCP request. In general, the switch MAC address(the remote-ID suboption) and the port identifier, vlan-mod-port or snmp-ifindex are included in the option 82 information. You can configure the remote ID and circuit ID. Click **DHCP Opt82 Configuration** from the **Security Configuration** and the following screen page appear.

**Circuit ID Suboption:** This suboption may be added by DHCP relay agents that terminate switched or permanent circuits. It encodes an agent-local identifier of the circuit from which a DHCP client-to-server packet was received. It is intended for use by agents in relaying DHCP responses back to the proper circuit. Servers may use the Circuit ID for IP and other parameter assignment policies.

**Remote ID Suboption:** This suboption may be added by DHCP relay agents that terminate switched or permanent circuits and have mechanisms to identify the remote host end of the circuit. DHCP servers may use this option to select parameters specific to particular users, hosts, or subscriber modems. The relay agent may use this field in addition to or instead of the Agent Circuit ID field to select the circuit on which to forward the DHCP reply.

DHCP Opt82 Circuit-ID Port							
1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

Click on the checkbox of the corresponding port number you would like to configure with circuit ID.

DHCP Opt82 Circuit-ID Formatted							
1	2	3	4	5	6	7	8
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9	10	11	12	13	14	15	16
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
17	18	19	20	21	22	23	24
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
25	26	27	28				
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>				

Click on the checkbox to add the Circuit ID type and length of the Circuit ID packet or uncheck to hide the Circuit ID type and length of the Circuit ID packet. The default setting is checked.

DHCP Opt82 Circuit-ID	
Port1	
Port2	
Port3	
Port4	
Port5	
Port6	
Port7	
Port8	
Port9	
Port10	
Port11	
Port12	
Port13	
Port14	
Port15	
Port16	
Port17	
Port18	
Port19	
Port20	
Port21	
Port22	
Port23	
Port24	
Port25	
Port26	
Port27	
Port28	

Specify the VLAN and port identifier using a VLAN ID in the range of 1 to 4094. Besides, you can configure the circuit ID to be a string of up to 63 characters. The default circuit ID is the port identifier, the format of which is **vlan-mod-port**.

DHCP Opt82 Remote-ID Enable	<input type="checkbox"/>	DHCP Opt82 Remote-ID Formatted	<input checked="" type="checkbox"/>
DHCP Opt82 Remote-ID			
OK			

**DHCP Opt82 Remote-ID Enable:** Click on the checkbox to enable Remote ID suboption or uncheck to disable it.

**DHCP Opt82 Remote-ID:** You can configure the remote ID to be a string of up to 63 characters. The default remote ID is the switch's MAC address.

**DHCP Opt82 Remote-ID Formatted:** Click on the checkbox to add the Remote ID type and length of the Remote ID packet or uncheck to hide the Remote ID type and length of the Remote ID packet. The default setting is checked.

### 4.4.13.3 DHCP Snooping

Select the option **DHCP Snooping** from the **Security Configuration** menu and then the following screen page appears.

**DHCP Snooping**

**DHCP/DHCPv6 Snooping**

Disabled ▾

**Default DHCP Initiated Time**

4

Secs (0-9999)

**Default DHCP Leased Time**

86400

Secs (180-259200)

**DHCP Server Trust Port**

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

**DHCP Server Trust IP**

**DHCP Server Trust IP State**

Disabled ▾

Index	IP/IPv6 Address
1	0.0.0.0
2	0.0.0.0
3	0.0.0.0
4	0.0.0.0

OK

**DHCP/DHCPv6 Snooping:** Enable or disable DHCP/DHCPv6 Snooping function.

**Default DHCP Initiated Time:** Specify the time value (0~9999 Seconds) that packets might be received.

**Default DHCP Leased Time:** Specify packets' expired time (180~259200 Seconds).


**DHCP Server Trust Port:** Specify designated port to be Trust Port that can give you "offer" from DHCP server. Check any port box to enable it.

**DHCP Server Trust IP:** After enabling Trust Port, you may additionally specify Trust IP address for identification of DHCP server. Click drop-down menu and select "Enabled", then specify Trust IP address.



#### 4.4.13.4 PPPoE Configuration

Only PPPoE server's packets coming from PPPoE-IA trust port(s) are allowed to be forwarded; otherwise, those packets will be dropped. Select the option **PPPoE Configuration** from the **Security Configuration** menu and then the following screen page appears.

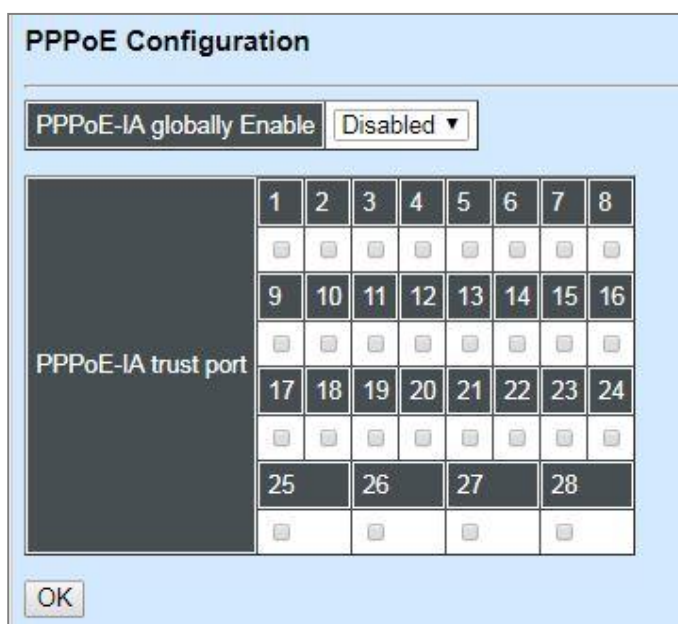

The PPPoE Configuration dialog box features a title bar 'PPPoE Configuration'. Below it is a label 'PPPoE-IA globally Enable' followed by a dropdown menu currently set to 'Disabled'. The main area contains a grid of 28 checkboxes, each preceded by a port number from 1 to 28. The checkboxes are arranged in four rows: the first three rows have 8 checkboxes each, and the fourth row has 4 checkboxes. A label 'PPPoE-IA trust port' is positioned to the left of the grid. An 'OK' button is located at the bottom left of the dialog.

	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16	
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24	
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28					
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

**PPPoE-IA globally Enable:** Enable or disable PPPoE-IA function globally.

---


**NOTE:** Need to select one port as PPPoE-IA trust port at least before activating this function.

---

**PPPoE-IA trust port:** By clicking on the checkbox of the corresponding port number to specify designated port(s) to be PPPoE-IA trust port(s) that can give you “offer” from PPPoE server.

#### 4.4.13.5 IP Source Guard Settings

Select the option **IP Source Guard Settings** from the **Security Configuration** menu and then the following screen page appears.

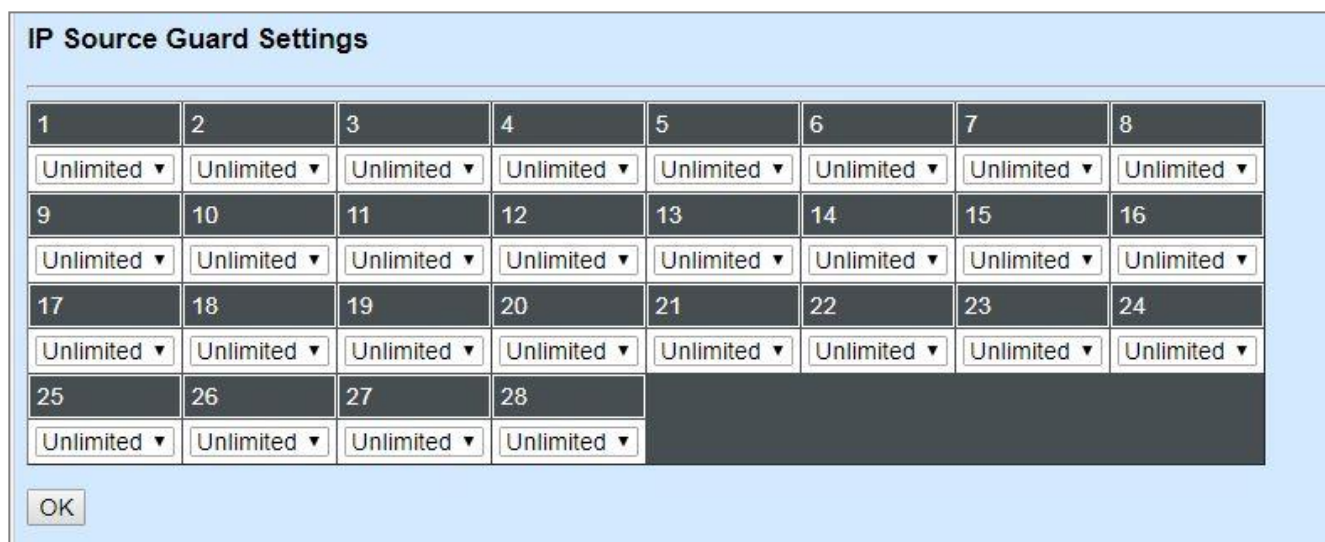

The IP Source Guard Settings dialog box has a title bar 'IP Source Guard Settings'. The main area is a grid of 28 dropdown menus, each preceded by a port number from 1 to 28. The dropdowns are arranged in four rows: the first three rows have 8 dropdowns each, and the fourth row has 4 dropdowns. All dropdowns are currently set to 'Unlimited'. An 'OK' button is located at the bottom left of the dialog.

1	2	3	4	5	6	7	8	
Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	
9	10	11	12	13	14	15	16	
Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	
17	18	19	20	21	22	23	24	
Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼	
25	26	27	28					
Unlimited ▼	Unlimited ▼	Unlimited ▼	Unlimited ▼					

**Source Guard:** To specify the authorized access type for each port. There are three options available.


**Unlimited:** Non-Limited (Allows both static IP and DHCP-assigned IP).

**DHCP:** DHCP-assigned IP address only.

**Fix-IP:** Only static IP (You must create Static IP table first. Refer to **Static IP Table Configuration** for further information.).

#### 4.4.13.6 Port Isolation

This is used to set up port's communication availability that they can only communicate with a given "uplink". Please note that if the port isolation function is enabled, the Port-based VLAN will be invalid automatically.

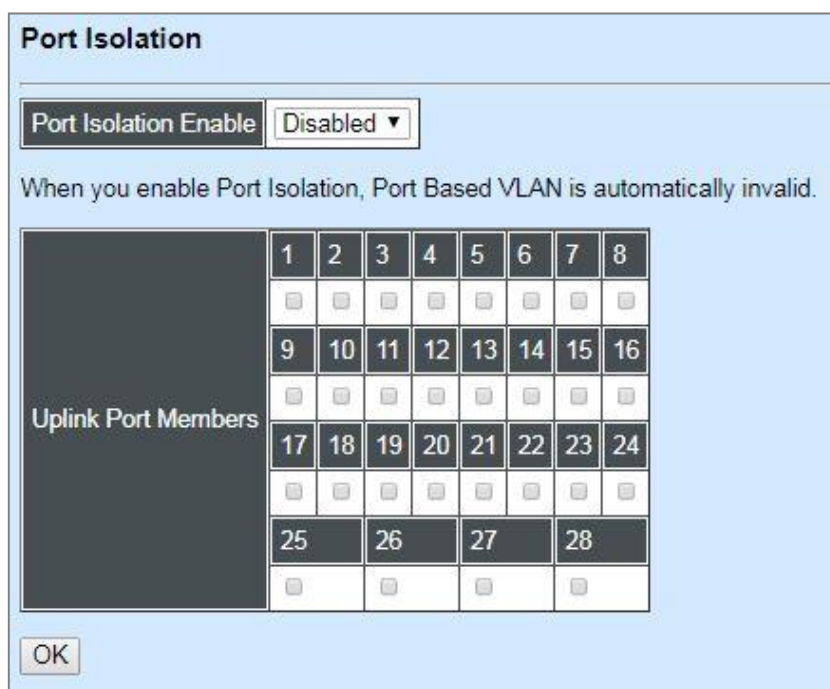

The image shows a configuration window titled "Port Isolation". At the top, there is a section "Port Isolation Enable" with a dropdown menu currently set to "Disabled". Below this, a text message states: "When you enable Port Isolation, Port Based VLAN is automatically invalid." The main part of the window is a table for selecting "Uplink Port Members". The table has 28 columns, numbered 1 through 28, and 6 rows. Each cell in the table contains a small checkbox. To the left of the table is a dark grey rectangular area labeled "Uplink Port Members". At the bottom left of the window is an "OK" button.

	1	2	3	4	5	6	7	8
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16	
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24	
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28					
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

**Port Isolation Enable:** Enable or disable port isolation function. If port isolation is set to enabled, the ports cannot communicate with each other.

**Uplink Port Members:** By clicking on the checkbox of the corresponding port number to select the ports as uplinks that are allowed to communicate with other ports of the Managed Switch.



### 4.4.13.7 Static IP/IPv6 Table Configuration

Select the option **Static IP/IPv6 Table Configuration** from the **Security Configuration** menu and then the following screen page appears.



The screenshot shows a window titled "Static IP Table Configuration". Inside, there are three input fields labeled "IP/IPv6 Address", "VLAN ID", and "Port". Below these fields are three buttons: "New", "Edit", and "Delete".

This static IP address and Port mapping table shows the following information.

**IP/IPv6 Address:** View-only field that shows the current static IP address.


**VLAN ID:** View-only field that shows the VLAN ID.

**Port:** View-only field that shows the connection port number.

Click **New** to register a new static IP address and then the following screen page appears.

Click **Edit** to modify the Static IP Table settings.

Use **Delete** to remove a current static IP address.

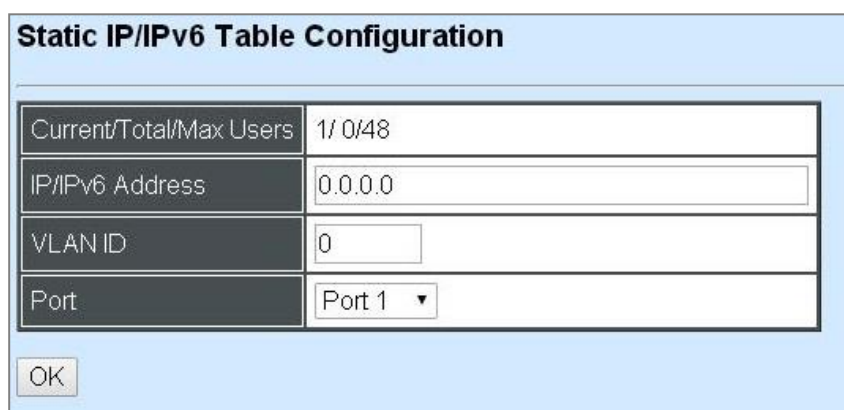

The screenshot shows a dialog box titled "Static IP/IPv6 Table Configuration". It contains a table with four rows: "Current/Total/Max Users" with value "1/ 0/48", "IP/IPv6 Address" with value "0.0.0.0", "VLAN ID" with value "0", and "Port" with a dropdown menu showing "Port 1". Below the table is an "OK" button.

**Current/Total/Max Users:** View-only field.

**Current:** This shows the number of current registered static IP address.

**Total:** This shows the amount of total registered static IP addresses.

**Max:** This shows the maximum number available for static IP address registration.

**IP/IPv6 address:** Specify an IPv4/IPv6 address that you accept.

**VLAN ID:** Specify the VLAN ID. Valid range: 1~4094.

**Port:** Specify the communication port number. (Port 1~28)

#### 4.4.13.7.1 Configure DHCP Snooping

When you would like to use DHCP Snooping function, follow the steps described below to enable a client to receive an IP from DHCP server.

##### Step 1. Select each port's IP type

**IP Source Guard Settings**

1	2	3	4	5	6	7	8
Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾
Fix-IP DHCP	10	11	12	13	14	15	16
Unlimited	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾
17	18	19	20	21	22	23	24
Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾
25	26	27	28				
Unlimited ▾	Unlimited ▾	Unlimited ▾	Unlimited ▾				

OK

Select “Unlimited” or “DHCP”.

##### Step 2. Enable DHCP Snooping

**DHCP Snooping**

DHCP/DHCPv6 Snooping	Disabled ▾	
Default DHCP Initiated Time	Disabled Enabled	Secs (0-9999)
Default DHCP Leased Time	86400	Secs (180-259200)

##### Step 3. Connect your clients to the Managed Switch

After you complete Step 1 & 2, connect your clients to the Managed Switch. Your clients will send a DHCP Request out to DHCP Server soon after they receive a DHCP offer. When DHCP Server responds with a DHCP ACK message that contains lease duration and other configuration information, the IP configuration process is complete.

If you connect clients to the Managed Switch before you complete Step 1 & 2, please disconnect your clients and then connect your clients to the Managed Switch again to enable them to initiate conversations with DHCP server.

### 4.4.13.8 Storm Control

Select the option **Storm Control** from the **Security Configuration** menu to set up storm control parameters for each port and then the following screen page appears.

Storm Control

Storm Control Disabled

Notification

Threshold Interval 120 (120-86400)Secs

Port	Unknown Unicast Rate	Unknown Multicast Rate	Broadcast Rate	Action
All	pps	pps	pps	
Port1	Off pps	Off pps	Off pps	Drop
Port2	Off pps	Off pps	Off pps	Drop
Port3	Off pps	Off pps	Off pps	Drop
Port4	Off pps	Off pps	Off pps	Drop
Port5	Off pps	Off pps	Off pps	Drop
Port6	Off pps	Off pps	Off pps	Drop
Port7	Off pps	Off pps	Off pps	Drop
Port8	Off pps	Off pps	Off pps	Drop
Port9	Off pps	Off pps	Off pps	Drop
Port10	Off pps	Off pps	Off pps	Drop
Port11	Off pps	Off pps	Off pps	Drop
Port12	Off pps	Off pps	Off pps	Drop
Port13	Off pps	Off pps	Off pps	Drop
Port14	Off pps	Off pps	Off pps	Drop
Port15	Off pps	Off pps	Off pps	Drop
Port16	Off pps	Off pps	Off pps	Drop
Port17	Off pps	Off pps	Off pps	Drop
Port18	Off pps	Off pps	Off pps	Drop
Port19	Off pps	Off pps	Off pps	Drop
Port20	Off pps	Off pps	Off pps	Drop
Port21	Off pps	Off pps	Off pps	Drop
Port22	Off pps	Off pps	Off pps	Drop
Port23	Off pps	Off pps	Off pps	Drop
Port24	Off pps	Off pps	Off pps	Drop
Port25	Off pps	Off pps	Off pps	Drop
Port26	Off pps	Off pps	Off pps	Drop
Port27	Off pps	Off pps	Off pps	Drop
Port28	Off pps	Off pps	Off pps	Drop

OK Reset

When a device on the network is malfunctioning or application programs are not well designed or properly configured, broadcast/unknown multicast/unknown unicast storms may occur, network performance may be degraded or, in the worst situation, a complete halt may happen. The Managed Switch allows users to set a threshold rate for broadcast/unknown multicast/unknown unicast traffic on a per port basis so as to protect network from broadcast/unknown multicast/unknown unicast storms. Any broadcast/unknown multicast/unknown unicast packets per second exceeding the specified value will then be dropped or port will be shutdown.

**Storm Control:** Enable or disable the storm control function globally.

**Threshold Interval for Notification:** To set up the time interval of sending the alarm trap or system log if broadcast/unknown multicast/unknown unicast packets flood continuously. The interval can be set from 120 to 86400 seconds. The default setting is 120 seconds.

Three options of frame traffic are provided to allow users to enable or disable the storm control.

**Unknown Unicast Rate:** Enable or disable unknown Unicast traffic control and set up Unknown Unicast Rate packet per second (pps) for each port. 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k and 1024k can be chosen from the pull-down menu of each port. By pulling down the menu in **All** port row, you can set up the Unknown Unicast Rate for all ports with the same value at a time as well.

**Unknown Multicast Rate:** Enable or disable Unknown Multicast traffic control and set up Unknown Multicast Rate packet per second (pps) for each port. 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k and 1024k can be chosen from the pull-down menu of each port. By pulling down the menu in **All** port row, you can set up the Unknown Multicast Rate for all ports with the same value at a time as well.

**Broadcast Rate:** Enable or disable Broadcast traffic control and set up Broadcast Rate packet per second (pps) for each port. 1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1k, 2k, 4k, 8k, 16k, 32k, 64k, 128k, 256k, 512k and 1024k can be chosen from the pull-down menu of each port. By pulling down the menu in **All** port row, you can set up the Broadcast Rate for all ports with the same value at a time as well.

**Action:** Either “Drop” or “Shutdown” two types of the action can be chosen by clicking on the pull-down menu. The selected action will be taken when the broadcast/unknown multicast/unknown unicast packets per second exceed the value of Unknown Unicast Rate/Unknown Multicast Rate/Broadcast Rate you configure. Please note that if the port acts as the uplink port, it is highly recommended NOT to configure this value as “Shutdown” when its storm control is activated. Default setting is “Drop”.

### 4.4.13.9 MAC Limiters

This is to set number of threshold within which MAC address can be learned. After it reaches the threshold, any other incoming MAC address would be dropped or port would be shutdown until the recovery mechanism activates. Please note that MAC address table will be erased if the Mac Limit function is enabled.

Besides, the Sticky MAC address function is also provided to keep the event that the packets with the same source MAC address are received by different ports from being taken place. In case this function of the specified port is enabled (the port is also known as the sticky MAC port), then, other ports of the switch cannot receive the packets with the same source MAC address learned by this sticky MAC port anymore. If other ports receive the packets with the same source MAC address again, these packets will be dropped by the switch.

Generally, any auto-learned MAC address from the switch will be a dynamic MAC address. Through this Sticky MAC address function, however, the MAC address learned by the sticky MAC port will automatically be turned into a static one in MAC address table. But, this kind of static MAC address is regarded as a "Sticky" type of MAC address, and it still does not write into the running configuration file. To transfer the MAC address type from "Sticky" into "Manual", and write it into the running configuration file, you may refer to [Section 4.4.6.2 "Static MAC Table Configuration"](#).

Select the option **MAC Limiters** from the **Security Configuration** menu to set up MAC Limit, Sticky and Action parameters for ports and then the following screen page appears.

**MAC Limiters**

MAC Limit Disabled ▼

Notification  
Threshold Interval 120 (120-86400)Secs

Port	1	2	3	4	5	6	7	8
Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Limit	1	1	1	1	1	1	1	1
Sticky	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Action	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼
Port	9	10	11	12	13	14	15	16
Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Limit	1	1	1	1	1	1	1	1
Sticky	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Action	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼
Port	17	18	19	20	21	22	23	24
Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Limit	1	1	1	1	1	1	1	1
Sticky	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Action	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼	Drop ▼
Port	25	26	27	28				
Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
Limit	1	1	1	1				
Sticky	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
Action	Drop ▼	Drop ▼	Drop ▼	Drop ▼				

OK

**MAC Limit:** Globally enable the MAC Limit function of the switch. After that, proceed to further port settings as shown below.

**Threshold Interval for Notification:** To set up the time interval of sending the alarm trap or system log if the number of source MAC address learned exceeds the limit continuously.

**Port:** The number of each port.

**Enable:** Click on the checkbox of the corresponding port number to enable the MAC Limit function on the specific port(s). Please note that port MAC address table will be erased if the Mac Limit function is enabled.

**Limit:** Specify the maximum number of source MAC address that can be learned. The range of number that can be configured is 1~50.

**Sticky:** Enable or disable the Stick MAC address function for a port individually. Click on the checkbox of the corresponding port number to enable this function on the specific port(s). Default setting is "Disabled".

**Action:** Either "Drop" or "Shutdown" two types of the action can be chosen by clicking on the pull-down menu. The selected action will be taken when the MAC addresses learned exceed the limit you configure. Please note that if the port acts as the uplink port, it is highly recommended NOT to configure this value as "Shutdown" when its MAC Limit is enabled. Default setting is "Drop".

---

**NOTE1:** *Once a sticky MAC port's counts of MAC address has reached the threshold (e.g. 30 counts), the packet (e.g. No.31) with the same source MAC address received by other port will not be dropped and this MAC address will be learned as a dynamic one in MAC address table.*


**NOTE2:** *If the user needs to modify the limit of MAC address to a value (e.g. 5 counts) less than the threshold while the port's counts of MAC address have reached the threshold (e.g. 30 counts). An error message of "Maximum is less than number of currently secured MAC addresses" will be pop up.*

---

#### 4.4.13.10 Port Linkup Delay

**Port Linkup Delay** is to set up a period of time for postponing the specific port(s) to be active in the stage of the system initialization. As for the remaining ports of the switch, they will be normally activated and be able to learn the MAC address first.

Select the option **Port Linkup Delay** from the **Security Configuration** menu to set up delay time, delay port list and release delay rule, and then the following screen page appears.

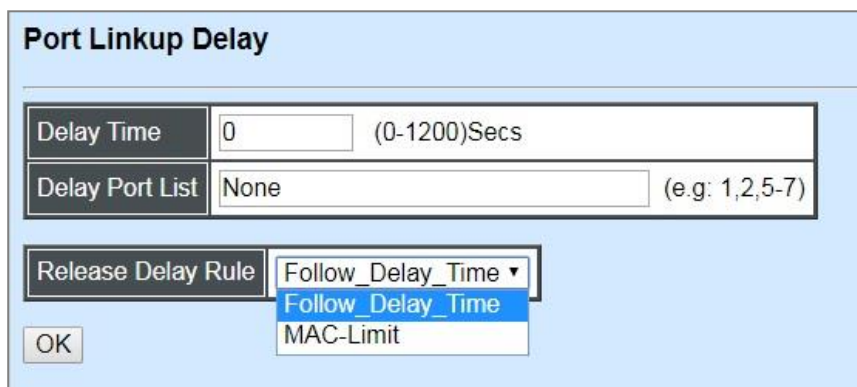

**Delay Time:** Specify the desired time the designated delay port(s) will delay to be activated. Valid range: 0~1200 seconds. Default setting is “0”. “0” indicates “Disabled”.

**Delay Port List:** Specify the port(s) that will not be activated until the configured delay time ends.

**Release Delay Rule:** From the pull-down menu, you can configure either “Follow\_Delay\_Time” or “MAC\_Limit” option as the delay rule. Default setting is “Follow\_Delay\_Time”. For more details on these settings, refer to the examples described in the following Sections 4.4.13.10.1 and 4.4.13.10.2.

##### 4.4.13.10.1 Configure Port Linkup Delay based on “Follow\_Delay\_Time” Delay Rule

When **Release Delay Rule** is configured as “Follow\_Delay\_Time”, the system will delay to activate the port(s) specified in the **Delay Port List** parameter by following the delay time you configure.

For example,

In case that **Delay Time** is configured as 15 seconds and **Delay Port List** is configured as port number 1-26 (see the figure below), then, the system will only activate Port 27 as well as Port 28 first, and wait for 15 seconds to activate Ports 1-26 in the next device’s boot-up (initialization) stage.





#### 4.4.13.10.2 Configure Port Linkup Delay based on “MAC\_Limit” Delay Rule

When **Release Delay Rule** is configured as “MAC\_Limit”, and the field of **Release Delay Trigger Port List** will be displayed for the user to set up the trigger port(s) for the port linkup delay.

For example,

In case that **Release Delay Rule** is configured as "MAC-Limit", **Delay Port List** is configured as port number 1-26, and **Release Delay Trigger Port List** is configured as port number 27-28 with the following MAC limiter settings (see the figure below), then, Port 1-26 open time will be decided by the following 2 situations:

**Port Linkup Delay**

Delay Time: 15 (0-1200)Secs

Delay Port List: 1-26 (e.g: 1,2,5-7)

Release Delay Rule: MAC-Limit

Release Delay Trigger Port List: 27,28 (e.g: 1,2,5-7)

OK

27	28
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
30	30
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Drop	Drop

- **[Situation 1]** : Ports 1-26 will be activated immediately in the next device’s boot-up (initialization) stage when either Port 27 or Port 28 already has learned 30 counts of MAC addresses, even if the delay time does not end.
- **[Situation 2]** : Ports 1-26 will be activated only when the delay time ends in the next device’s boot-up (initialization) stage if Port 27 and Port 28 do not learn 30 counts of MAC addresses yet.



#### 4.4.13.11 Port Link Flap

**Port Link Flap** will notify the user the link-down and link-up alarm message of any port via SNMP trap and syslog when its port link flap times exceed the threshold. A port links down or links up, which will be considered as one time of this port's port link flap. Through this function, it will greatly help technicians in the network operations center (NOC) exactly know the last time when the port linked down and linked up, and easily find out the major causes of the network instability.

Select the option **Port Link Flap** from the **Security Configuration** menu to set up Port Link Flap parameters and then the following screen page appears.



The screenshot shows a configuration window titled "Port Link Flap". Inside the window, there is a section labeled "Notification". Below this label, there is a label "Link Flap Threshold" followed by a text input field containing the number "6". To the right of the input field, the text "(1-20) Times" indicates the valid range. At the bottom left of the window, there is an "OK" button.

**Link Flap Threshold:** To configure the maximum time of each port's port link flap for sending the alarm trap and the syslog message. For example, if the threshold is configured as "3", it means that the Managed Switch will send the alarm trap and the syslog message out to the specified SNMP server and log server respectively when one port links down or links up 3 times. Valid range: 1~20 times. Default is 6 times.

## 4.4.14 Access Control List (ACL) Configuration

Creating an access control list allows users to define who has the authority to access information or perform tasks on the network. In the Managed Switch, users can establish rules applied to port numbers to permit or deny actions.

Select the option **ACL Configuration** from the **Switch Management** menu and then the following screen page appears.

ACL Configuration

Rule ID	Status	Rule ID	Status	Rule ID	Status	Rule ID	Status	Rule ID	Status	Rule ID	Status
1	Invalid	2	Invalid	3	Invalid	4	Invalid	5	Invalid	6	Invalid
7	Invalid	8	Invalid	9	Invalid	10	Invalid	11	Invalid	12	Invalid
13	Invalid	14	Invalid	15	Invalid	16	Invalid	17	Invalid	18	Invalid
19	Invalid	20	Invalid	21	Invalid	22	Invalid	23	Invalid	24	Invalid
25	Invalid	26	Invalid	27	Invalid	28	Invalid	29	Invalid	30	Invalid
31	Invalid	32	Invalid	33	Invalid	34	Invalid	35	Invalid	36	Invalid
37	Invalid	38	Invalid	39	Invalid	40	Invalid	41	Invalid	42	Invalid
43	Invalid	44	Invalid	45	Invalid	46	Invalid	47	Invalid	48	Invalid
49	Invalid	50	Invalid	51	Invalid	52	Invalid	53	Invalid	54	Invalid
55	Invalid	56	Invalid	57	Invalid	58	Invalid	59	Invalid	60	Invalid
61	Invalid	62	Invalid	63	Invalid	64	Invalid	65	Invalid	66	Invalid
67	Invalid	68	Invalid	69	Invalid	70	Invalid	71	Invalid	72	Invalid
73	Invalid	74	Invalid	75	Invalid	76	Invalid	77	Invalid	78	Invalid
79	Invalid	80	Invalid	81	Invalid	82	Invalid	83	Invalid	84	Invalid
85	Invalid	86	Invalid	87	Invalid	88	Invalid	89	Invalid	90	Invalid
91	Invalid	92	Invalid	93	Invalid	94	Invalid	95	Invalid	96	Invalid
97	Invalid	98	Invalid	99	Invalid	100	Invalid	101	Invalid	102	Invalid
103	Invalid	104	Invalid	105	Invalid	106	Invalid	107	Invalid	108	Invalid
109	Invalid	110	Invalid	111	Invalid	112	Invalid	113	Invalid	114	Invalid
115	Invalid	116	Invalid	117	Invalid	118	Invalid	119	Invalid	120	Invalid
121	Invalid	122	Invalid	123	Invalid	124	Invalid	125	Invalid	126	Invalid
127	Invalid	128	Invalid	129	Invalid	130	Invalid	131	Invalid	132	Invalid
133	Invalid	134	Invalid	135	Invalid	136	Invalid	137	Invalid	138	Invalid
139	Invalid	140	Invalid	141	Invalid	142	Invalid	143	Invalid	144	Invalid
145	Invalid	146	Invalid	147	Invalid	148	Invalid	149	Invalid	150	Invalid
151	Invalid	152	Invalid	153	Invalid	154	Invalid	155	Invalid	156	Invalid
157	Invalid	158	Invalid	159	Invalid	160	Invalid	161	Invalid	162	Invalid
163	Invalid	164	Invalid	165	Invalid	166	Invalid	167	Invalid	168	Invalid
169	Invalid	170	Invalid	171	Invalid	172	Invalid	173	Invalid	174	Invalid
175	Invalid	176	Invalid	177	Invalid	178	Invalid	179	Invalid	180	Invalid
181	Invalid	182	Invalid	183	Invalid	184	Invalid	185	Invalid	186	Invalid
187	Invalid	188	Invalid	189	Invalid	190	Invalid	191	Invalid	192	Invalid

EditDelete

Refresh

This is the overview of ACL status.

**Rule ID:** The identification number for each rule. The total number of ACL rule can be created is 192. Please note that only No.1~128 of Rule ID is provided for IPv4 ACL rule settings, and No.129~192 of Rule ID is provided for IPv6 ACL rule settings.

**Status:** The current status for each rule.

Click **Edit** to modify settings of the specified rule and then the following screen page appears. Click **Delete** to remove a rule configured. Click **Refresh** to update the latest status.

ACL Configuration	
Rule ID	1
Status	invalid
Ingress Port	<input type="radio"/> Any <input type="radio"/> <input type="text"/> Port List(1-28)
EtherType	<input type="radio"/> Any <input type="radio"/> 0x <input type="text"/> (0000-FFFF)
VLAN ID	<input type="radio"/> Any <input type="radio"/> <input type="text"/> (1-4094)
Source MAC	<input type="radio"/> Any <input type="radio"/> MAC: <input type="text"/> Mask: <input type="text"/>
Destination MAC	<input type="radio"/> Any <input type="radio"/> MAC: <input type="text"/> Mask: <input type="text"/>
TOS/Traffic Class	<input type="radio"/> Any <input type="radio"/> 0x <input type="text"/> (00-FF)
Protocol/Next Header	<input type="radio"/> Any <input type="radio"/> 0x <input type="text"/> (00-FF)
IPv4 Source IP	<input type="radio"/> Any <input type="radio"/> Network IP: <input type="text"/> Mask: <input type="text"/>
IPv4 Destination IP	<input type="radio"/> Any <input type="radio"/> Network IP: <input type="text"/> Mask: <input type="text"/>
IPv6 Source IP	<input type="radio"/> Any <input type="radio"/> Network IP: <input type="text"/> Prefix: <input type="text"/> (10-128)
IPv6 Destination IP	<input type="radio"/> Any <input type="radio"/> Network IP: <input type="text"/> Prefix: <input type="text"/> (10-128)
TCP/UDP Source Port	<input type="radio"/> Any <input type="radio"/> Port: <input type="text"/> (1-65535) Mask:0x <input type="text"/> (0000-FFFF)
TCP/UDP Destination Port	<input type="radio"/> Any <input type="radio"/> Port: <input type="text"/> (1-65535) Mask:0x <input type="text"/> (0000-FFFF)
Action	Permit ▼
Mirror/Redirect Port Number	<input type="text"/> (1-28)
Rate Limiter	<input type="text"/> (16-1048560) Kbps, 0:Disable
<input type="button" value="OK"/> <input type="button" value="Reset"/>	

**Rule ID:** View-only field that shows an identification number of the specified ACL rule. A port can only use one rule ID; however, a rule ID can be applied to many ports.

**Status:** View-only field that shows the status of this rule.

**Ingress Port:** Select “Any” or specify a port number (e.g. 1, 2, 3-5) as the ingress port.

**EtherType:** Select “Any” or specify an Ethernet type value (0x 0000-FFFF).

**VLAN ID:** Select “Any” or specify a VLAN ID.

**Source MAC:** Select “Any” or specify a source MAC address and Mask.

**Destination MAC:** Select “Any” or specify a destination MAC address and Mask.

**TOS/Traffic Class:** Select “Any” or specify a TOS/Traffic class (0x 00-FF).

**Protocol/Next Header:** Specify IPv4 protocol and IPv6 next header (0x 00-FF).

**IPv4 Source IP:** Select “Any” or specify an IPv4 Source IP address and Mask.

**IPv4 Destination IP:** Select “Any” or specify an IPv4 Destination IP address and Mask.

**IPv6 Source IP:** Select “Any” or specify an IPv6 Source IP address and prefix (10-128).

**IPv6 Destination IP:** Select “Any” or specify an IPv6 Destination IP address and prefix (10-128).

**TCP/UDP Source Port:** Select “Any” to filter frames from any source port or specify a source port number and Mask (0x 0000-FFFF).

**TCP/UDP Destination Port:** Select “Any” to filter frames bound for any destination port or specify a destination port number and Mask (0x 0000-FFFF).

**Action:** Specify the action, including Deny, Permit, Mirror or Redirect to the ACL-matched packet.

**Mirror/Redirect Port Number:** Specify a port number that you would like to configure for Mirror/Redirect.

**Rate Limiter:** Configure the rate limiter. Valid Range: 16-1048560 Kbps, the default value is “0”. “0” means “Disable”.

## 4.4.15 Layer 2 Protocol Tunnel Configuration

Select the option **Layer 2 Protocol Tunneling Configuration** from the **Switch Management** menu and then the following screen page appears.

Layer 2 Protocol Tunnel Configuration

Layer 2 Protocol Tunneling

Disabled ▼

Destination MAC Address

01:00:0C:CD:CD:00

Class of Service

5 (0-7)

Port	CDP	LLDP	STP	VTP	Point to Point		
					LACP	PAgP	UDLD
All	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
21	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
22	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
26	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
28	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

OK

Reset

**L2PT (Layer 2 protocol tunneling)** allows Layer 2 protocol data units (PDUs), including CDP(Cisco Discovery Protocol), LLDP(Link Layer Discovery Protocol), STP(Spanning Tree Protocol), VTP(Vlan Trunking Protocol), LACP(Link Aggregation Control Protocol), PAgP(Port Aggregation Protocol), and UDLD(Unidirectional Link Detection), to be tunneled through a network.



Without L2PT, the handling of the PDUs will create different spanning tree domains (different spanning tree roots) for the customer switches. To provide a single spanning tree domain for the customer switches, a generic scheme to tunnel BPDUs was created for control protocol PDUs. This process is referred to as Generic Bridge PDU Tunneling (GBPT).

GBPT provides a scalable approach to PDU tunneling by software encapsulating the PDUs in the ingress edge switches and then multicasting them in hardware. All switches inside the service provider network treat these encapsulated frames as data packets and forward them to the other end. The egress edge switch listens for these special encapsulated frames and decapsulates them; they are then forwarded out of the tunnel.

The encapsulation involves the rewriting of the destination media access control (MAC) address in the PDU. An ingress edge switch rewrites the destination MAC address of the PDUs received on a Layer 2 tunnel port with the desired multicast address.

**Layer 2 Protocol Tunneling:** Enable or disable the Layer 2 Protocol Tunneling function globally.

**Destination MAC Address:** Specify a MAC address for GBPT. User-defined. Default is 01:00:0C:CD:CD:D0.

**Class of Service:** There are eight priority levels (0~7) that you can choose to classify data packets. Specify the preferred priority bit value as L2PT class of service (cos). The default value is "5".

**CDP, LLDP, STP, VTP, LACP, PAgP, UDLD:** Configure the Layer 2 port as a Layer 2 protocol tunnel port by clicking on the corresponding PDUs' checkbox for the preferred port. To configure all ports with the same PDU at a time, just click on the checkbox of the desired PDU in **All** port row.

## 4.4.16 LLDP Configuration

LLDP stands for Link Layer Discovery Protocol and runs over data link layer which is used for network devices to send information about themselves to other directly connected devices on the network. By using LLDP, two devices running different network layer protocols can learn information about each other. A set of attributes are used to discover neighbor devices. These attributes contain type, length and value descriptions, and are referred to as TLVs. Details such as port description, system name, system description, system capabilities, management address can be sent and received on this Managed Switch. Use Spacebar to select “ON” if you want to receive and send the TLV.

Select the option **LLDP Configuration** from the **Switch Management** menu and then the following screen page appears.

LLDP Configuration								
Port Number	1	2	3	4	5	6	7	8
Port Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	9	10	11	12	13	14	15	16
Port Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	17	18	19	20	21	22	23	24
Port Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	25	26	27	28				
Port Enable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
Receiver Hold-Time(TTL)	120		1-3600(Second)					
Sending LLDP Packet Interval	5		1-180(Second)					
Sending LLDP Packets Per Discover	1		1-16(Packet)					
Selection of LLDP TLVs to send								
Port Description	<input checked="" type="checkbox"/>							
System Name	<input checked="" type="checkbox"/>							
System Description	<input checked="" type="checkbox"/>							
System Capabilities	<input checked="" type="checkbox"/>							
Management Address	<input checked="" type="checkbox"/>							
<input type="button" value="OK"/>								

**Port Number:** Click on the checkbox of corresponding port number to enable LLDP function on the specific port(s).

**Receiver Hold-Time (TTL):** Enter the amount of time for receiver hold-time in seconds. The Managed Switch will keep the information sent by the remote device for a period of time you specify here before discarding it.

**Sending LLDP Packet Interval:** Enter the time interval for updated LLDP packets to be sent.

**Sending LLDP Packets Per Discover:** Enter the amount of packets sent in each discover.

**Selection of LLDP TLVs to send:** LLDP uses a set of attributes to discover neighbor devices. These attributes contain type, length and value descriptions, and are referred to as TLVs. Details such as port description, system name, system description, system capabilities, management address can be sent from this Managed Switch.



## 4.4.17 Loop Detection Configuration

In a real network, it is possible the people misconnect the network cable to incur loop condition. In a worst case, the network is out of service thereafter. This section gives a guide to configure the Loop Detection function of the system to prevent the system from loop.

After a proper setting of Loop Detection function, the system detects loop condition by periodically sending loop detection packet. Once the system receives the loop detection packet from itself, it is claimed that it detects loop condition. Then, the system takes the following actions

1. It blocks the relevant port to prevent broadcast storms, and send out SNMP trap to inform the network administrator. In other words, the system stops forwarding all the traffic via the looped port. However, the system will process the Loop Detection, RSTP and LLDP packets received on the looped port.
2. It slowly blinks the LED of looped port in orange.
3. It periodically sends loop detection packet to detect the existence of loop condition.

When the system does not receive any loop detection packet from itself for a period of configured **Looped port unlock-interval**. The system claims the loop condition disappears. Then, the system takes the following actions

1. It un-blocks the relevant port. In other words, the system normally forwards all the traffic via the relevant port.
2. It stops slowly blinking the LED of looped port in orange.
3. It periodically sends loop detection packet to detect the existence of loop condition.

---

**Note:** Under loop condition, the LED of looped port continues to slowly blink orange even the connected network cable is unplugged out of looped port.

---

To set up Loop Detection function, select the option **Loop Detection Configuration** from the **Switch Management** menu and then the following screen page appears.

Loop Detection							
Loop Detection Enable		Disabled ▼					
Detection Interval		1 (1-180)Seconds					
Looped port unlock-interval		1440 (1-1440)Minutes					
All VLAN		<input type="checkbox"/>					
Specific VLAN		0					
		0					
		0					
		0					
1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				
<input type="button" value="OK"/>							

**Loop Detection Enable:** Enable or disable the Loop Detection function on a system basis. The default setting is disabled.

**Detection Interval:** This is the time interval (in seconds) that the device will periodically send loop detection packets to detect the presence of looped network. The valid range is from 1 to 180 seconds. The default setting is 1 seconds.

**Looped port unlock-interval:** This is the time interval for the system to detect the existence of loop condition. System un-blocks the looped port if it does not receive any loop-detection packet when the configured unlock-interval ends. The unlock-interval can be set from 1 to 1440 minutes. The default setting is 1440 minutes.

---

**Note:**

1. Be aware that Looped port unlock-interval converted into seconds should be greater than or equal to Detection Interval seconds multiplied by 10. The '10' is a magic number which is for the system to claim the loop detection disappears when the system does not receive the loop-detection packet from itself at least 10 times. In general, it can be summarized by a formula below:

$$60 * \text{"Looped port unlock-interval"} \geq 10 * \text{"Detection Interval"}$$

2. When a port is detected as a looped port, the system keeps the looped port in blocking status until loop situation is gone. In other words, the system stops forwarding all the traffic via the looped port. However, the system will process the loop-detection packet received on the looped port.

---

**All VLAN:** Check All VLAN box to enable loop detection on all trunk-VLAN-vid configured in the VLAN Interface under IEEE802.1q Tag VLAN (Refer to [Section 4.4.7.4.2](#))

---

**NOTE:** When All VLAN checkbox is checked, it invalidates the configured "Specific VLAN".

---

**Specific VLAN:** Set up loop detection on specified VLAN. The maximum number of VLAN ID is up to 4 sets.

---

**NOTE:** The configured "Specific VLAN" takes effect when All VLAN check-box is unchecked.

---

**Port No.:** Click on the checkbox of the corresponding port No. to enable the Loop Detection function on the specific port(s).

---

**NOTE:** Loop Detection and RSTP (Rapid Spanning Tree Protocol) is not allowed to be enabled on the same port at the same time.

---

## 4.4.18 Fast Redundancy Configuration

Besides RSTP and Ring Detection as we previously mentioned, the employment of CTS's proprietary fast redundancy on your network will help protect mission-critical links against failures, avoid the occurrence of network loops, and keep network downtime to a minimum to assure the reliability of the network. With these network redundancy, it allows the user to set up redundant loops in a network to provide a backup data transmission route in the event of the disconnection or damage of the cables. By means of this important feature in the network recovery applications, you can be totally free from any loss resulting from the time spent in locating the cable that fails to connect.

CTS's fast redundancy provides **Fast Ring v2** and **Chain** two redundancy protocols, which allows you to configure 2 rings, 2 chains, or 1 ring & 1 chain at most for a switch.

Please note that all switches on the same ring or chain must be the ones with the same brand and configured using the same redundancy protocol when configuring a redundant ring or chain. You are not allowed to use switches with different brands or mix the Ring Detection, Fast Ring v2 and Chain protocols within the same ring or chain.

In the following table, it lists the difference among forementioned redundancy protocols for your evaluation when employing network redundancy on your network.

	Ring Detection	Fast Ring v2	Chain	RSTP
Topology	Ring	Ring	Ring	Ring
Recovery Time	<30 ms	<50 ms	<1 second (for copper ports) <50 ms (for fiber ports)	Up to 5 seconds

To configure the Fast Ring v2 or Chain fast redundancy, click the option **Fast Redundancy** from the **Switch Management** menu and then the following screen page appears.

**Fast Redundancy**

<input type="checkbox"/>	Entry	Group ID	Description	Enable	Protocol	Role	1st Redundancy Port		2nd Redundancy Port	
							Port	Role	Port	Role

Click **New** to add a new fast redundancy and then the following screen page appears. Up to 2 sets of fast redundancy can be created.

Click **Edit** to modify the configuration of the selected fast redundancy by clicking on the checkbox of the corresponding entry.

Click **Delete** to remove an existing fast redundancy from the fast redundancy table by clicking on the checkbox of the corresponding entry.

**Fast Redundancy**

**Add Fast Redundancy**

Occupied/Max Entry	0/2
Entry	1
ID	1 ▾
Description	<input type="text"/>
Protocol	Fast Ring V2 ▾
Enable	Fast Ring V2 Chain
Role	Slave ▾
1st Redundancy Port	Disable ▾
2nd Redundancy Port	Disable ▾

Note: The blocked segment is the segment that connects to the 2nd redundancy port on the master.

### 4.4.18.1 Fast Ring v2 Protocol

Fast Ring v2 protocol, the newer version of our Ring Detection, is to optimize communication redundancy and achieve a fast recovery time (<50 ms) on the network for up to 200 switches. Like Ring Detection, Fast Ring v2 protocol manually specifies one switch as the master of the network to identify which segment in the redundant ring acts as the backup path, and then automatically block packets from traveling through any of the network's redundant loops.

In the event that one branch of the ring disconnects from the rest of the network, the protocol automatically readjusts the ring so that the part of the network that was disconnected can rebuild the communication with the rest of the network.

In the following subsection, we will explain how the backup path is selected for rings configured by Fast Ring v2 redundancy protocol.

**Fast Redundancy**

**Add Fast Redundancy**

Occupied/Max Entry	0/2
Entry	1
ID	1 ▾
Description	
Protocol	Fast Ring V2 ▾
Enable	Disabled ▾
Role	Slave ▾
1st Redundancy Port	Disable ▾
2nd Redundancy Port	Disable ▾

Note: The blocked segment is the segment that connects to the 2nd redundancy port on the master.

OKReset

**Occupied/Max Entry:** View-only field.

**Occupied:** This shows the amount of total fast redundancy that have already been created.

**Max:** This shows the maximum number available for fast redundancy. The maximum number is 2.

**Entry:** View-only field. This shows the number of fast redundancy that is currently created.

**ID:** The group ID of the fast redundancy. Up to 2 group IDs can be supported.

**Description:** The description of the group.

**Protocol:** Include “Fast Ring v2” and “Chain” two redundancy protocols. To configure a Fast Ring v2 ring redundancy, pull down the menu of **Protocol** and choose **Fast Ring v2** as the protocol for the fast redundancy you configure.

**Enable:** Enable or disable the ring you configure.

**Role:** Pull down the menu of **Role** to assign the role of the Managed Switch as either Slave or Master when Fast Ring v2 protocol is chosen.

**Master:** A role possesses the ability of blocking or forwarding packets. Please note that the blocked segment is the segment that connects to the 2nd redundancy port on the master.

**Slave:** A role possesses the ability of forwarding packets only.

**1st Redundancy Port:** Specify which port of the Managed Switch [to](#) be acted as the first redundant port. Default value is **Disable**.

**2nd Redundancy Port:** Specify which port of the Managed Switch [to](#) be acted as the secondary redundant port. Default value is **Disable**.

Click **OK**, the new settings will be taken effect immediately. This entry will be listed on the fast redundancy table.

#### 4.4.18.1.1 Configure a Ring Example using the Fast Ring v2 Protocol

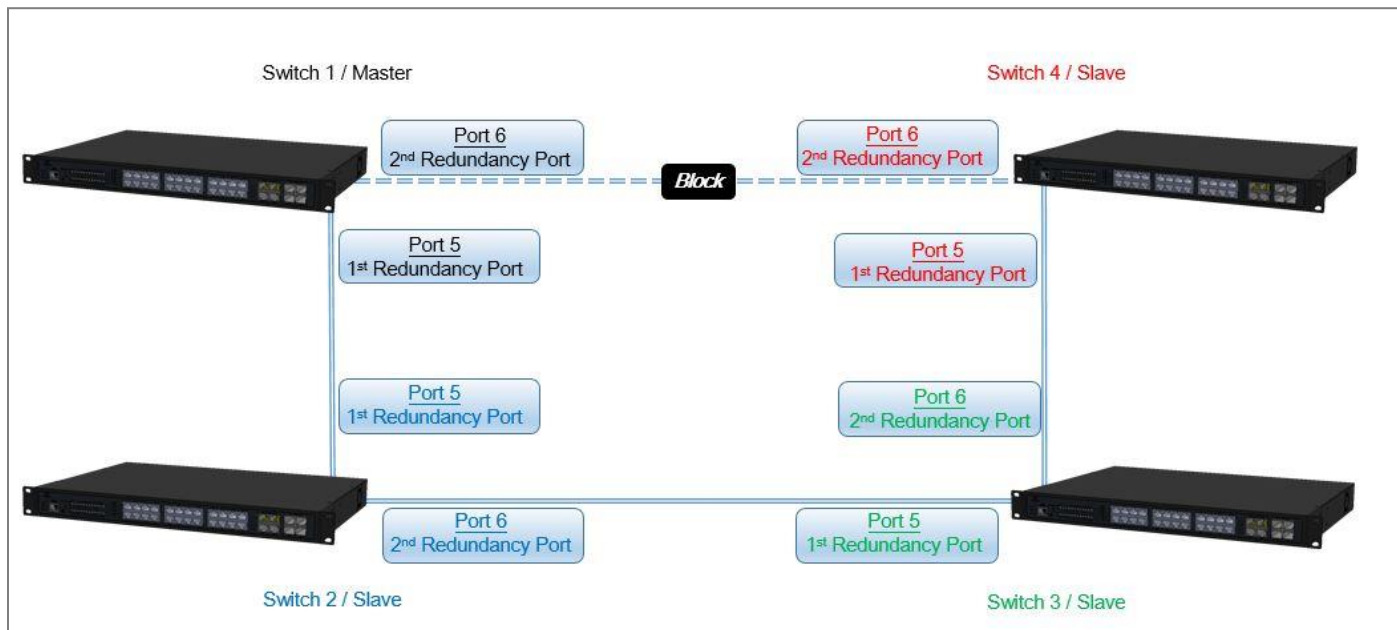


Fig. 4-1 Fast Ring v2 Example Diagram

The above topology often occurs using the Fast Ring v2 protocol and is configured as the following table.

Switch ID	Role	Redundancy Port	Physical Port
Switch 1	<b>Master</b>	1 <sup>st</sup> Redundancy Port	Port 5
		2 <sup>nd</sup> Redundancy Port	Port 6
Switch 2	Slave	1 <sup>st</sup> Redundancy Port	Port 5
		2 <sup>nd</sup> Redundancy Port	Port 6
Switch 3	Slave	1 <sup>st</sup> Redundancy Port	Port 5
		2 <sup>nd</sup> Redundancy Port	Port 6
Switch 4	Slave	1 <sup>st</sup> Redundancy Port	Port 5
		2 <sup>nd</sup> Redundancy Port	Port 6

Table 4-1 Fast Ring v2 Configuration

The scenario is described as below:

1. Disable DHCP client and set proper static IP address for Switch 1, 2, 3 & 4. In this example, Switch 1 is 192.168.0.101/24; Switch 2 is 192.168.0.102/24; Switch 3 is 192.168.0.103/24 and Switch 4 is 192.168.0.104/24.
2. On Switch 1~4, disable spanning tree protocol to avoid confliction with Fast Ring v2.



Just follow the procedures listed below for step-by-step instructions to configure a ring as Fig. 4-1 using the Fast Ring v2 protocol.

### Step 1: Set up the Fast Ring v2 configuration on Switch 1.

1-1. Connect a computer to Switch 1 directly; do not connect to Port 5 & 6.

1-2. Login into the Switch 1 and go to **Switch Management > Fast Redundancy** for the Fast Ring v2 configuration. Click the **New** button to create a Fast Ring v2.

**Fast Redundancy**

<input type="checkbox"/>	Entry	Group ID	Description	Enable	Protocol	Role	1st Redundancy Port		2nd Redundancy Port	
							Port	Role	Port	Role
<div>New Edit Delete</div>										

1-3. Please refer to each column parameter below, set “ID” = 1, “Protocol” = Fast Ring v2, “Enable” = Enabled, “Role” = Master, “1st Redundancy Port” = Port 5 & “2nd Redundancy Port” = Port 6, click **OK** when completing the Fast Ring v2 configuration for Switch 1.

**Add Fast Redundancy**

Occupied/Max Entry	0/2
Entry	1
ID	1 ▼
Description	
Protocol	Fast Ring V2 ▼
Enable	Enabled ▼
Role	Master ▼
1st Redundancy Port	Port 5 ▼
2nd Redundancy Port	Port 6 ▼

Note: The blocked segment is the segment that connects to the 2nd redundancy port on the master.

OK Reset

### Step 2: Set up the Fast Ring v2 configuration on Switch 2, 3 & 4.

2-1. Connect a computer to Switch 2, 3 & 4 directly; do not connect to Port 5 & 6.

2-2. Login into the Switch 2, 3 & 4 and also go to **Switch Management > Fast Redundancy** for the Fast Ring v2 configuration. Click the **New** button to create a Fast Ring v2.

2-3. Please refer to each column parameter below, set “ID” = 1, “Protocol” = Fast Ring v2, “Enable” = Enabled, “Role” = Slave, “1st Redundancy Port” = Port 5 & “2nd Redundancy Port” = Port 6, click **OK** when completing the Fast Ring v2 configuration for Switch 2, 3 & 4.



### Add Fast Redundancy

Occupied/Max Entry	0/2
Entry	1
ID	1 ▾
Description	<input type="text"/>
Protocol	Fast Ring V2 ▾
Enable	Enabled ▾
Role	Slave ▾
1st Redundancy Port	Port 5 ▾
2nd Redundancy Port	Port 6 ▾

Note: The blocked segment is the segment that connects to the 2nd redundancy port on the master.

---

**NOTE:** To avoid the occurrence of loop, please do not connect Switch 1, 2, 3 & 4 together in the ring topology before the end of Fast Ring v2 configuration.

---

**Step 3:** Follow the configuration to connect the Switch 1, 2, 3 & 4 together to establish the Fast Ring v2 application.

## 4.4.18.2 Chain Protocol

CTS's Chain is an advanced software technology that gives network administrators the flexibility to build any type of redundant network topology. It also enables the network to recover in less than 50ms for up to 200 switches if at any time a segment of the chain fails.

When employing a Chain in your network, you first connect the Managed Switches in a chain, and then simply link the two ends of this chain to an Ethernet network. All switches in the chain can be fallen into three parts:

- A Head switch,
- A Tail switch,
- Member switches.

The Head port of the Head switch usually acts as the external port for the entire chain, the Tail port of the Tail switch acts as the blocked port. When the Head port is disconnected, the Tail port will be immediately activated for the data transferring.

The Chain redundancy protocol can be applied to the networks with a complex topology. If the network uses a multi-ring architecture, CTS's Chain can be the best solution to create flexible and scalable topologies with a fast media recovery time.

In the following subsection, we will explain how the backup path is selected for chains configured by the Chain redundancy protocol.

**Fast Redundancy**

**Add Fast Redundancy**

Occupied/Max Entry	0/2	
Entry	1	
ID	1 ▼	
Description		
Protocol	Chain ▼	
Enable	Disabled ▼	
1st Redundancy Port	Port Number	Role
	Disable ▼	Member ▼
2nd Redundancy Port	Port Number	Role
	Disable ▼	Member

Note:

Interface	Port Number	Max. Recovery Time
Copper	25-28	1 Second
Fiber	1-28	50 milliseconds

**Occupied/Max Entry:** View-only field.

**Occupied:** This shows the amount of total fast redundancy that have already been created.

**Max:** This shows the maximum number available for fast redundancy. The maximum number is 2.

**Entry:** View-only field. This shows the number of fast redundancy that is currently created.

**ID:** The group ID of the fast redundancy. Up to 2 group IDs can be supported.

**Description:** The description of the group.

**Protocol:** Include “Fast Ring v2” and “Chain” two redundancy protocols. To configure a chain redundancy, pull down the menu of **Protocol** and choose **Chain** as the protocol for the fast redundancy you configure.

**Enable:** Enable or disable the chain you configure.

**Port Number of 1st Redundancy Port:** Specify which port of Managed Switch to be acted as the first redundant port. Default value is **Disable**.

**Role of 1st Redundancy Port:** Include **Head**, **Member** and **Tail** three types of roles.

**Port Number of 2nd Redundancy Port:** Specify which port of Managed Switch to be acted as the secondary redundant port. Default value is **Disable**.

**Role of 2nd Redundancy Port:** View-only field. Only **Member** role is allowed.

Click **OK**, the new settings will be taken effect immediately. This entry will be listed on the fast redundancy table.

#### 4.4.18.2.1 Configure a Chain Example using the Chain Protocol

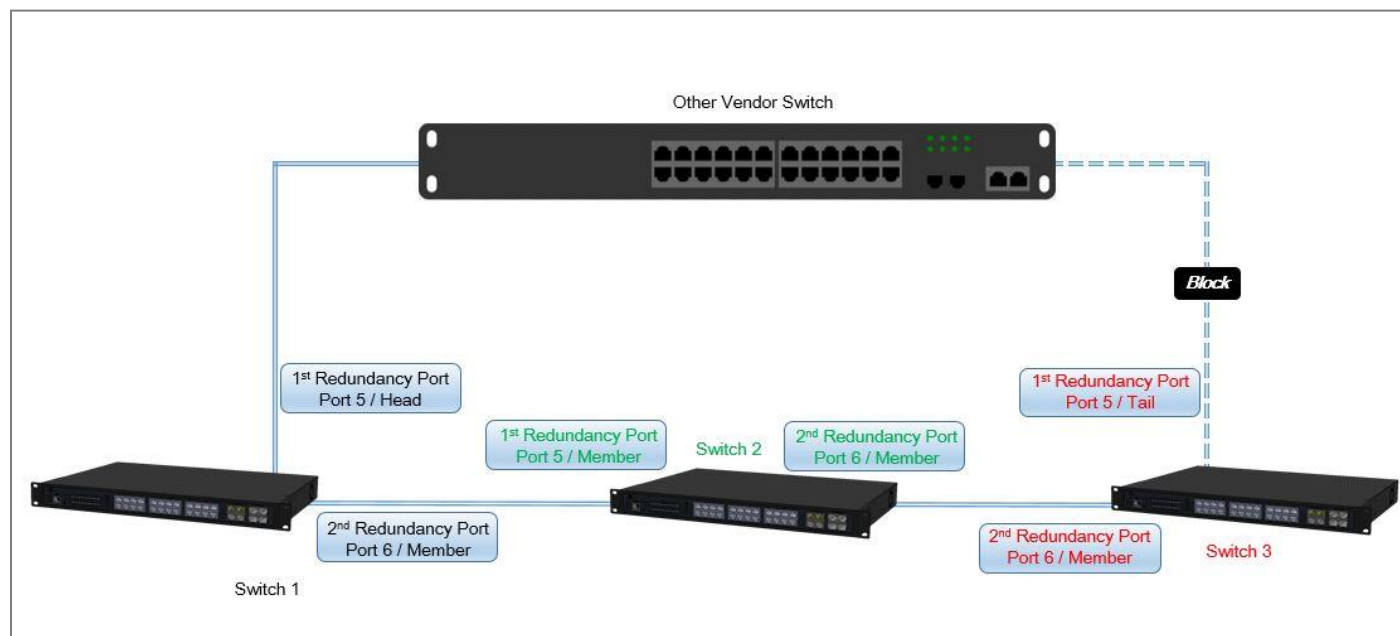


Fig. 4-2 Chain Example Diagram

The above topology often occurs using the Chain protocol and is configured as the following table.

Switch ID	Redundancy Port	Physical Port	Port Role
Switch 1	1 <sup>st</sup> Redundancy Port	Port 5	<b>Head</b>
	2 <sup>nd</sup> Redundancy Port	Port 6	Member
Switch 2	1 <sup>st</sup> Redundancy Port	Port 5	Member
	2 <sup>nd</sup> Redundancy Port	Port 6	Member
Switch 3	1 <sup>st</sup> Redundancy Port	Port 5	<b>Tail</b>
	2 <sup>nd</sup> Redundancy Port	Port 6	Member

Table 4-2 Chain Configuration

The scenario is described as below:

1. Disable DHCP client and set proper static IP address for Switch 1, 2, & 3. In this example, Switch 1 is 192.168.0.101/24; Switch 2 is 192.168.0.102/24 and Switch 3 is 192.168.0.103/24.
2. On Switch 1~3, disable spanning tree protocol to avoid confliction with Chain.

Just follow the procedures listed below for step-by-step instructions to configure a chain as Fig. 4-2 using the Chain protocol.

### Step 1: Set up the Chain configuration on Switch 1.

**1-1.** Connect a computer to Switch 1 directly; do not connect to Port 5 & 6.

**1-2.** Login into the Switch 1 and go to **Switch Management > Fast Redundancy** for the chain configuration. Click the **New** button to create a chain.

### Fast Redundancy

	Entry	Group ID	Description	Enable	Protocol	Role	1st Redundancy Port		2nd Redundancy Port	
							Port	Role	Port	Role
<input type="checkbox"/>										

**1-3.** Please refer to each column parameter below, set “ID” = 1, “Protocol” = Chain, “Enable” = Enabled, “1st Redundancy Port / Port Number” = Port 5, “1st Redundancy Port / Role” = Head, & “2nd Redundancy Port / Port Number” = Port 6, click **OK** when completing the chain configuration for Switch 1.

### Add Fast Redundancy

Occupied/Max Entry	0/2	
Entry	1	
ID	1 ▼	
Description		
Protocol	Chain ▼	
Enable	Enabled ▼	
1st Redundancy Port	Port Number	Role
	Port 5 ▼	Head ▼
2nd Redundancy Port	Port Number	Role
	Port 6 ▼	Member

### Step 2: Set up the Chain configuration on Switch 2.

**2-1.** Connect a computer to Switch 2 directly; do not connect to Port 5 & 6.

**2-2.** Login into the Switch 2 and also go to **Switch Management > Fast Redundancy** for the chain configuration. Click the **New** button to create a chain.

**2-3.** Please refer to each column parameter below, set “ID” = 1, “Protocol” = Chain, “Enable” = Enabled, “1st Redundancy Port / Port Number” = Port 5, “1st Redundancy Port / Role” = Member, & “2nd Redundancy Port / Port Number” = Port 6, click **OK** when completing the chain configuration for Switch 2.

### Add Fast Redundancy

Occupied/Max Entry	0/2	
Entry	1	
ID	1 ▼	
Description		
Protocol	Chain ▼	
Enable	Enabled ▼	
1st Redundancy Port	Port Number	Role
	Port 5 ▼	Member ▼
2nd Redundancy Port	Port Number	Role
	Port 6 ▼	Member

### Step 3: Set up the Chain configuration on Switch 3.

**3-1.** Connect a computer to Switch 3 directly; do not connect to Port 5 & 6.

**3-2.** Login into the Switch 3 and also go to **Switch Management > Fast Redundancy** for the chain configuration. Click the **New** button to create a chain.

**3-3.** Please refer to each column parameter below, set “ID” = 1, “Protocol” = Chain, “Enable” = Enabled, “1st Redundancy Port / Port Number” = Port 5, “1st Redundancy Port / Role” = Tail, & “2nd Redundancy Port / Port Number” = Port 6, click **OK** when completing the chain configuration for Switch 3.

### Add Fast Redundancy

Occupied/Max Entry	0/2	
Entry	1	
ID	1 ▼	
Description		
Protocol	Chain ▼	
Enable	Enabled ▼	
1st Redundancy Port	Port Number	Role
	Port 5 ▼	Tail ▼
2nd Redundancy Port	Port Number	Role
	Port 6 ▼	Member

---

**NOTE:** To avoid the occurrence of loop, please do not connect Switch 1, 2, & 3 together in the chain topology before the end of Chain configuration.

---

**Step 4: Follow the configuration to connect the Switch 1, 2, & 3 together to establish Chain application.**



## 4.5 Switch Monitor

**Switch Monitor** allows users to monitor the real-time operation status of the Managed Switch. Users may monitor the port link-up status or traffic counters for maintenance or diagnostic purposes. Select the folder **Switch Monitor** from the **Main Menu** and then several options and folders will be displayed for your selection

The screenshot displays the FOS-3128 Switch Monitor interface. On the left is a tree view of system folders, with 'Switch Monitor' selected. The main panel, titled 'CPU and Memory Statistics', contains configuration options and two data tables.

**Configuration Options:**

- Refresh Page Interval:** 10 (1-300) Seconds
- Start Auto Update** | **Stop Auto Update** | **Refresh**
- CPU Loading Threshold(1/100):** 850
- OK**

**CPU Statistics**

CPU Statistics	
CPU Usage (%)	6.93
Load Averages - 1 min	4.19
Load Averages - 5 min	4.43
Load Averages - 15 min	3.29

**Memory Statistics(KByte)**

Memory Statistics(KByte)	
Total Memory	127300
Memory Use	54668
Memory Free	72632
Memory Buffers	460
Memory Cached	25956

1. **CPU & Memory Statistics:** Manually or automatically update statistics of CPU & Memory and view them.
2. **CPU Temperature Status:** Manually or automatically update the current CPU temperature as well as the CPU temperature record, and configure the cpu-temperature alarm notification.
3. **Switch Port Status:** View current port media type, port state, etc.
4. **Port Traffic Statistics:** View each port's frames and bytes received or sent, utilization, etc..
5. **Port Packet Error Statistics:** View each port's traffic condition of error packets, e.g. CRC, fragment, Jabber, etc.
6. **Port Packet Analysis Statistics:** View each port's traffic analysis of packets, e.g. RX/TX frames of Multicast and Broadcast, etc.



- 7. IEEE 802.1q VLAN Table:** View the IEEE802.1q VLAN Table of the Managed Switch.
- 8. ARP Table:** View the list of all entries of mapping an IP address to a unique MAC address.
- 9. LACP Monitor:** View the LACP port status and statistics.
- 10. RSTP Monitor:** View RSTP VLAN Bridge, the port status, and statistics.
- 11. 802.1X Monitor:** View the 802.1X port status and statistics.
- 12. IGMP/MLD Monitor:** View the IGMP/MLD status and Groups table.
- 13. SFP Information:** View the current port's SFP information, e.g. speed, Vendor ID, Vendor S/N, etc.. SFP port state shows current DMI (Diagnostic monitoring interface) temperature, voltage, TX Bias, etc..
- 14. DHCP Snooping:** View the DHCP learning table, etc..
- 15. Storm Control Status:** View the status of Storm Control configuration.
- 16. MAC Limiters Status:** View the status of MAC limiting configuration.
- 17. MAC Address Table:** List the current MAC addresses automatically learned by the Managed Switch and the created static MAC addresses.
- 18. Layer 2 Protocol Tunneling Status:** View the state of Layer 2 protocol data units (PDUs) and their encapsulation and decapsulation counters of each port.
- 19. LLDP Status:** View the TLV information sent by the connected device with LLDP-enabled.
- 20. Loop Detection Status:** View the Loop Detection status of each port.
- 21. Fast Redundancy Status:** View the current Fast Ring v2 and Chain status.

## 4.5.1 CPU and Memory Statistics

**CPU & Memory Statistics** is to manually or automatically update statistics of CPU and Memory. Click “**CPU & Memory Statistics**” and the following screen appears.

**CPU and Memory Statistics**

Refresh Page Interval

10

(1-300) Seconds

Start Auto Update

Stop Auto Update

Refresh

CPU Loading Threshold(1/100)

850

OK

CPU Statistics	
CPU Usage (%)	38.61
Load Averages - 1 min	5.00
Load Averages - 5 min	4.74
Load Averages - 15 min	4.49

Memory Statistics(KByte)	
Total Memory	127300
Memory Use	54724
Memory Free	72576
Memory Buffers	460
Memory Cached	25964

**Refresh Page Interval:** Automatically updates statistics of CPU & Memory at a specified interval in seconds. Please note that the value you assign in this parameter is temporarily used and will not be saved into the configuration file of the Managed Switch. This value will not be applied into the next system boot-up.

**Start Auto Update:** Click “**Start Auto Update**” to activate auto-update.

**Stop Auto Update:** Click “**Stop Auto Update**” to deactivate auto-update.

**Refresh:** Click “**Refresh**” to update the latest statistics of CPU & Memory at a time.

**CPU Loading Threshold(1/100):** Specify CPU loading threshold. Valid range: 10-3000 (Unit: 1/100 sec.)

**CPU Usage (%):** The percentage of current CPU usage of the system.

**Load Averages – 1 min:** The average active tasks percentage in last 1 minute.

**Load Averages – 5 min:** The average active tasks percentage in last 5 minutes.

**Load Averages – 15 min:** The average active tasks percentage in last 15 minutes.

**Total Memory:** It shows the entire memory in kilobytes.

**Memory Use:** The memory in kilobytes that is in use.

**Memory Free:** The memory in kilobytes that is idle.

**Memory Buffers:** The memory in kilobytes temporarily stored in a buffer area. Buffer allows the computer to be able to focus on other matters after it writes up the data in the buffer; as oppose to constantly focus on the data until the device is done.

**Memory Cached:** The memory in kilobytes stored in a cache area that is where the data can be accessed faster in the future. The data can be retrieved more quickly from the cache than from its source origin.

## 4.5.2 CPU Temperature Status

With the built-in temperature sensor, the Managed Switch is capable of detecting whether CPU temperature is at normal status or not. In addition, by the the notification via trap, syslog and event log, the user can realize the real-time CPU temperature to prevent the device's lifespan from being shorten due to the abnormal operation environment.

The alarm message will be sent in the event of abnormal situations, including CPU temperature is over the temperature threshold, CPU temperature exceeds the range of threshold (from 0 to 60 degrees centigrade), or the temperature sensor fails to detect CPU temperature. A normal message will also be sent to notify the user when CPU temperature higher the threshold returns to the normal status.

### CPU Temperature Status

Refresh Page Interval

10

(1-300) Seconds

Start Auto Update

Stop Atuo Update

Refresh

#### Notification

High Temperature Threshold	40	(0-60) °C
Threshold Interval	600	(120-86400) Seconds
Continuous Alarm	<input checked="" type="checkbox"/>	

OK

CPU Temperature(°C)		Elapsed Time
Current	3.0	--
Historical High	3.0	0 day 01:57:25
Historical Low	3.0	0 day 01:57:25

**Refresh Page Interval:** Automatically updates CPU temperature of the system at a specified interval in seconds. Please note that the value you assign in this parameter is temporarily used and will not be saved into the configuration file of the Managed Switch. This value will not be applied into the next system boot-up.

**Start Auto Update:** Click “**Start Auto Update**” to activate auto-update.

**Stop Auto Update:** Click “**Stop Auto Update**” to deactivate auto-update.

**Refresh:** Click “**Refresh**” to update the latest CPU temperature at a time.

**High Temperature Threshold:** Specify CPU temperature threshold. Valid range: 0~60 degrees centigrade.

If the detected CPU temperature is over the threshold you configure, the alarm message “CPU temperature is over threshold” will be sent based on the configuration in the following **Threshold Interval** and **Continuous Alarm** parameters.

---

**NOTE:** Any new changes done on this parameter will be taken effect immediately during the system execution, the temperature sensor will begin to check CPU temperature and decide whether to send the alarm/normal message or not upon the last status. Refer to Table 4-3.

---

<div>Last Status</div> <div>Detected Status</div>	Normal	Over the Threshold
Normal	No message will be sent.	Send the “CPU temperature is at or under threshold” normal message.
Over the Threshold	Send the “CPU temperature is over threshold” alarm message.	No message will be sent.

Table 4-3

**Threshold Interval:** Specify the time interval of sending cpu-temperature alarm message in seconds.

---

**NOTE:** Any new changes done on this parameter will be taken effect immediately during the system execution, the temperature sensor will begin to check CPU temperature and decide whether to send the alarm/normal message or not upon the last status. Refer to Table 4-4.

---

<div> <div>Last Status</div> <div>Detected Status</div> </div>	Normal	Over the Threshold
Normal	No message will be sent.	Send the “CPU temperature is at or under threshold” normal message.
Over the Threshold	Send the “CPU temperature is over threshold” alarm message.	Send the “CPU temperature is over threshold” alarm message.

Table 4-4

**Continuous Alarm:** Enable or disable the continuous alarm message sending function for CPU temperature of the system. Default is “Enabled”.

In case this function is enabled, the alarm message will be sent continuously upon the time interval configured in **Threshold Interval** parameter to notify the user once CPU temperature is at the abnormal status.

In case this function is disabled, the alarm message will be sent only one time to notify the user once CPU temperature is at the abnormal status.

Click **OK**, the new configuration will be taken effect immediately.

**Current:** Display CPU temperature currently detected by the temperature sensor. It will be shown in red color if the current CPU temperature is higher than the value you configured in the **High Temperature Threshold** parameter, or show “Failed” in red color if the temperature sensor fails.

**Historical High:** Display the highest record of CPU temperature that had ever been reached since this system boot-up. It will show “Failed” in red color if the temperature sensor fails.

**Historical Low:** Display the lowest record of CPU temperature that had ever been reached since this system boot-up. It will show “Failed” in red color if the temperature sensor fails.

**Elapsed Time of Historical High:** The period of time passed by since the highest CPU temperature has been reached.

**Elapsed Time of Historical Low:** The period of time passed by since the lowest CPU temperature has been reached.

### 4.5.3 Switch Port Status

In order to view the real-time port status of the Managed Switch, select **Switch Port Status** from the **Switch Monitor** menu and then the following screen page appears.

Switch Port Status							
Port	Media Type	Port State	Link State	Speed (Mbps)	Duplex	Flow Control	Description
1	FX	Forwarding	down	--	--	--	
2	FX	Forwarding	down	--	--	--	
3	FX	Forwarding	down	--	--	--	
4	FX	Forwarding	down	--	--	--	
5	FX	Forwarding	down	--	--	--	
6	FX	Forwarding	down	--	--	--	
7	FX	Forwarding	down	--	--	--	
8	FX	Forwarding	down	--	--	--	
9	FX	Forwarding	down	--	--	--	
10	FX	Forwarding	down	--	--	--	
11	FX	Forwarding	up	1000	full	off	
12	FX	Forwarding	down	--	--	--	
13	FX	Forwarding	down	--	--	--	
14	FX	Forwarding	down	--	--	--	
15	FX	Forwarding	down	--	--	--	
16	FX	Forwarding	down	--	--	--	
17	FX	Forwarding	down	--	--	--	
18	FX	Forwarding	down	--	--	--	
19	FX	Forwarding	down	--	--	--	
20	FX	Forwarding	down	--	--	--	
21	FX	Forwarding	down	--	--	--	
22	FX	Forwarding	down	--	--	--	
23	FX	Forwarding	down	--	--	--	
24	FX	Forwarding	down	--	--	--	
25	TX	Forwarding	up	100	full	off	
26	TX	Forwarding	down	--	--	--	
27	TX	Forwarding	down	--	--	--	
28	TX	Forwarding	down	--	--	--	

**Port Number:** The number of the port.

**Media Type:** The media type of the port, either TX or FX.

**Port State:** This shows each port's state, which can be Disabled, Blocking/Listening, Learning or Forwarding.

**Disabled:** A port in this state does not participate in frame relay or the operation of the Spanning Tree Algorithm and Protocol if any.

**Blocking:** A Port in this state does not participate in frame relay; thus, it prevents frame duplication arising from multiple paths existing in the active topology of Bridged LAN.

**Learning:** A port in this state prepares to participate in frame relay. Frame relay is temporarily disabled in order to prevent temporary loops, which may occur in a Bridged LAN during the lifetime of this state as the active topology of the Bridged LAN changes. Learning is enabled to allow information to be acquired prior to frame relay in order to reduce the number of frames that are unnecessarily relayed.

**Forwarding:** A port in this state participates in frame relay. Packets can be forwarded only when port state is forwarding.

**Link State:** The current link status of the port, either up or down.

**Speed (Mbps):** The current operation speed of ports, which can be 10M, 100M or 1000M.

**Duplex:** The current operation Duplex mode of the port, either Full or Half.

**Flow Control:** The current state of Flow Control, either on or off.

**Description:** Display the port description you set up in Port Configuration.

## 4.5.4 Port Traffic Statistics

In order to view the real-time port traffic statistics of the Managed Switch, select **Port Traffic Statistics** from the **Switch Monitor** menu and then the following screen page appears.

Port Traffic Statistics								
Select <span>Rate</span>								
Port	Bytes Received	Frames Received	Received Utilization	Bytes Sent	Frames Sent	Sent Utilization	Total Bytes	Total Utilization
1	0	0	0.00%	0	0	0.00%	0	0.00%
2	0	0	0.00%	0	0	0.00%	0	0.00%
3	0	0	0.00%	0	0	0.00%	0	0.00%
4	0	0	0.00%	0	0	0.00%	0	0.00%
5	0	0	0.00%	0	0	0.00%	0	0.00%
6	0	0	0.00%	0	0	0.00%	0	0.00%
7	0	0	0.00%	0	0	0.00%	0	0.00%
8	0	0	0.00%	0	0	0.00%	0	0.00%
9	0	0	0.00%	0	0	0.00%	0	0.00%
10	0	0	0.00%	0	0	0.00%	0	0.00%
11	0	0	0.00%	59	0	0.00%	59	0.00%
12	0	0	0.00%	0	0	0.00%	0	0.00%
13	0	0	0.00%	0	0	0.00%	0	0.00%
14	0	0	0.00%	0	0	0.00%	0	0.00%
15	0	0	0.00%	0	0	0.00%	0	0.00%
16	0	0	0.00%	0	0	0.00%	0	0.00%
17	0	0	0.00%	0	0	0.00%	0	0.00%
18	0	0	0.00%	0	0	0.00%	0	0.00%
19	0	0	0.00%	0	0	0.00%	0	0.00%
20	0	0	0.00%	0	0	0.00%	0	0.00%
21	0	0	0.00%	0	0	0.00%	0	0.00%
22	0	0	0.00%	0	0	0.00%	0	0.00%
23	0	0	0.00%	0	0	0.00%	0	0.00%
24	0	0	0.00%	0	0	0.00%	0	0.00%
25	861	5	0.00%	2122	4	0.01%	2983	0.00%
26	0	0	0.00%	0	0	0.00%	0	0.00%
27	0	0	0.00%	0	0	0.00%	0	0.00%
28	0	0	0.00%	0	0	0.00%	0	0.00%

**Select:** Choose the way of representing Port Traffic Statistics from the pull-down menu. Either “Rate” or “Event” option can be chosen.

**Bytes Received:** Total bytes received from each port.

**Frames Received:** Total frames received from each port.

**Received Utilization:** The ratio of each port receiving traffic and current port’s total bandwidth.

**Bytes Sent:** The total bytes sent from current port.

**Frames Sent:** The total frames sent from current port.

**Sent Utilization:** The ratio of real sent traffic to the total bandwidth of current ports.

**Total Bytes:** Total bytes of receiving and sending from current port.

**Total Utilization:** The ratio of real received and sent traffic to the total bandwidth of current ports.



**Clear** button in **Clear Counters** field: Clear the statistics of the corresponding port if “Event” option is chosen from **Select** pull-down menu.

**Clear All:** All ports’ counter values will be cleared and set back to zero if “Event” option is chosen from **Select** pull-down menu.

## 4.5.5 Port Packet Error Statistics

**Port Packet Error Statistics** mode counters allow users to view the port error of the Managed Switch. The event mode counters are calculated since the last time that counter was reset or cleared. Select **Port Packet Error Statistics** from the **Switch Monitor** menu and then the following screen page appears.

Port Packet Error Statistics										
Select <input type="button" value="Rate"/> ▼										
Port	Rx CRC Error	Rx Align Error	Rx Undersize	Rx Fragments	Rx Jabbers	RX Oversize(1518 Bytes) Frames	RX Dropped Frames	Tx Collisions	TX Dropped Frames	Total Errors
1	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0	0	0	0
14	0	0	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0	0	0	0
17	0	0	0	0	0	0	0	0	0	0
18	0	0	0	0	0	0	0	0	0	0
19	0	0	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0	0	0
21	0	0	0	0	0	0	0	0	0	0
22	0	0	0	0	0	0	0	0	0	0
23	0	0	0	0	0	0	0	0	0	0
24	0	0	0	0	0	0	0	0	0	0
25	0	0	0	0	0	0	0	0	0	0
26	0	0	0	0	0	0	0	0	0	0
27	0	0	0	0	0	0	0	0	0	0
28	0	0	0	0	0	0	0	0	0	0

**Select:** Choose the way of representing the Port Packet Error Statistics from the pull-down menu. Either “Rate” or “Event” option can be chosen.

**RX CRC/Align Error:** CRC/Align Error frames received.

**RX Undersize:** Undersize frames received.

**RX Fragments:** Fragments frames received.

**RX Jabbers:** Jabber frames received.

**RX Oversize(1518 Bytes) Frames:** The frames that are over 1518 bytes received.

**RX Dropped Frames:** Drop frames received.

**TX Collisions:** Each port’s Collision frames.

**TX Dropped Frames:** Drop frames sent.

**Total Errors:** Total error frames received.

**Clear** button in **Clear Counters** field: Clear the statistics of the corresponding port if “Event” option is chosen from **Select** pull-down menu.

**Clear All:** This will clear all ports’ counter values and be set back to zero if “Event” option is chosen from **Select** pull-down menu.

## 4.5.6 Port Packet Analysis Statistics

**Port Packet Analysis Statistics** mode counters allow users to view the port analysis history of the Managed Switch. The event mode counters are calculated since the last time that counter was reset or cleared. Select **Port Packet Analysis Statistics** from the **Switch Monitor** menu and then the following screen page appears.

Port Packet Analysis Statistics											
Select Rate ▾											
Port	Rx Frames 64 Bytes	Rx Frames 65-127 Bytes	Rx Frames 128-255 Bytes	Rx Frames 256-511 Bytes	Rx Frames 512-1023 Bytes	Rx Frames 1024-1518 Bytes	Rx Frames 1519-Max Bytes	Rx Multicast Frames	Tx Multicast Frames	Rx Broadcast Frames	Tx Broadcast Frames
1	0	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0	0	0	0	0
14	0	0	0	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0	0	0	0	0
17	0	0	0	0	0	0	0	0	0	0	0
18	0	0	0	0	0	0	0	0	0	0	0
19	0	0	0	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0	0	0	0
21	0	0	0	0	0	0	0	0	0	0	0
22	0	0	0	0	0	0	0	0	0	0	0
23	0	0	0	0	0	0	0	0	0	0	0
24	0	0	0	0	0	0	0	0	0	0	0
25	4	1	0	0	0	0	0	0	0	0	0
26	0	0	0	0	0	0	0	0	0	0	0
27	0	0	0	0	0	0	0	0	0	0	0
28	0	0	0	0	0	0	0	0	0	0	0

**Select:** Choose the way of representing Port Packet Analysis Statistics from the pull-down menu. Either “Rate” or “Event” option can be chosen.

**RX Frames 64 Bytes:** 64 bytes frames received.

**RX Frames 65-127 Bytes:** 65-127 bytes frames received.

**RX Frames 128-255 Bytes:** 128-255 bytes frames received.

**RX Frames 256-511 Bytes:** 256-511 bytes frames received.

**RX Frames 512-1023 Bytes:** 512-1023 bytes frames received.

**RX Frames 1024-1518 Bytes:** 1024-1518 bytes frames received.

**RX Frames 1519-MAX Bytes:** Over 1519 bytes frames received.

**RX Multicast Frames:** Good multicast frames received.

**TX Multicast Frames:** Good multicast packets sent.

**RX Broadcast Frames:** Good broadcast frames received.

**TX Broadcast Frames:** Good broadcast packets sent.

**Clear** button in **Clear Counters** field: Clear the statistics of the corresponding port if “Event” option is chosen from **Select** pull-down menu.

**Clear All:** This will clear all ports’ counter values and be set back to zero if “Event” option is chosen from **Select** pull-down menu.

## 4.5.7 IEEE 802.1q VLAN Table

Select **IEEE 802.1q VLAN Table** from the **Switch Monitor** menu and then the following screen page appears.

IEEE 802.1q VLAN Table

U :Untagged    T :Tagged    D :Dot1q-Tunnel    V :Member    - :Not Member																														
VLAN Name	VID	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	CPU
Default_VLAN	1	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	V	

**VLAN Name:** View-only field that shows the VLAN name.

**VID:** View-only field that shows the VID.

## 4.5.8 ARP Table

Address Resolution Protocol (ARP), a communication protocol, maps an IP address to a MAC Address that can be identified in the network. Select **ARP Table** from the **Switch Monitor** menu and then the following screen page appears. From this ARP table, it lists all entries of mapping an IP address to a unique MAC address.

ARP Table	
IP Address	MAC Address
192.168.0.79	00:60:6e:b0:0d:de
Refresh	

**IP Address:** View-only field that shows the IP address belongs to the device connecting to Managed Switch.

**MAC Address:** View-only field that shows the MAC address mapped by IP address of the device connecting to Managed Switch.

**Refresh:** Click **Refresh** to update the latest ARP Table status.

## 4.5.9 LACP Monitor

Click the **LACP Monitor** folder and then two options within this folder will be displayed.

**FOS-3128**

- System Information
- User Authentication
- Network Management
- Switch Management
- Switch Monitor
  - CPU & Memory Statistics
  - CPU Temperature Status
  - Switch Port Status
  - Port Traffic Statistics
  - Port Packet Error Statistic
  - Port Packet Analysis Stati
  - IEEE 802.1q VLAN Table
  - ARP Table
  - LACP Monitor**
    - LACP Port Status
    - LACP Statistics
  - RSTP Monitor
  - 802.1X Monitor
  - IGMP/MLD Monitor
  - SFP Information
  - DHCP Snooping
  - Storm Control Status
  - MAC Limiters Status
  - MAC Address Table
  - Layer 2 Protocol Tunneling

**LACP Port Status**

Refresh

Port	LACP Operational State	Key	Aggr ID	Partner ID	Partner Port
1	no	1	01	00:00:00:00:00:00	0
2	no	1	02	00:00:00:00:00:00	0
3	no	1	03	00:00:00:00:00:00	0
4	no	1	04	00:00:00:00:00:00	0
5	no	1	05	00:00:00:00:00:00	0
6	no	1	06	00:00:00:00:00:00	0
7	no	1	07	00:00:00:00:00:00	0
8	no	1	08	00:00:00:00:00:00	0
9	no	1	09	00:00:00:00:00:00	0
10	no	1	10	00:00:00:00:00:00	0
11	no	1	11	00:00:00:00:00:00	0
12	no	1	12	00:00:00:00:00:00	0
13	no	1	13	00:00:00:00:00:00	0
14	no	1	14	00:00:00:00:00:00	0
15	no	1	15	00:00:00:00:00:00	0



### 4.5.9.1 LACP Port Status

**LACP Port Status** allows users to view a list of all LACP ports' information. Select **LACP Port Status** from the **LACP monitor** menu and then the following screen page appears.

LACP Port Status					
<input type="button" value="Refresh"/>					
Port	LACP Operational State	Key	Aggr ID	Partner ID	Partner Port
1	no	1	01	00:00:00:00:00:00	0
2	no	1	02	00:00:00:00:00:00	0
3	no	1	03	00:00:00:00:00:00	0
4	no	1	04	00:00:00:00:00:00	0
5	no	1	05	00:00:00:00:00:00	0
6	no	1	06	00:00:00:00:00:00	0
7	no	1	07	00:00:00:00:00:00	0
8	no	1	08	00:00:00:00:00:00	0
9	no	1	09	00:00:00:00:00:00	0
10	no	1	10	00:00:00:00:00:00	0
11	no	1	11	00:00:00:00:00:00	0
12	no	1	12	00:00:00:00:00:00	0
13	no	1	13	00:00:00:00:00:00	0
14	no	1	14	00:00:00:00:00:00	0
15	no	1	15	00:00:00:00:00:00	0
16	no	1	16	00:00:00:00:00:00	0
17	no	1	17	00:00:00:00:00:00	0
18	no	1	18	00:00:00:00:00:00	0
19	no	1	19	00:00:00:00:00:00	0
20	no	1	20	00:00:00:00:00:00	0
21	no	1	21	00:00:00:00:00:00	0
22	no	1	22	00:00:00:00:00:00	0
23	no	1	23	00:00:00:00:00:00	0
24	no	1	24	00:00:00:00:00:00	0
25	no	1	25	00:00:00:00:00:00	0
26	no	1	26	00:00:00:00:00:00	0
27	no	2	27	00:00:00:00:00:00	0
28	no	1	28	00:00:00:00:00:00	0

In this page, you can find the following information about LACP port status:

**Refresh:** Click **Refresh** to update the latest LACP port status.

**Port:** The number of the port.

**LACP Operational State:** The current operational state of LACP

**Key:** The current operational key for the LACP group.

**Aggr ID:** The ID of the LACP group.

In LACP mode, link aggregation control protocol data unit (LACPDU) is used for exchanging information among LACP-enabled devices. After LACP is enabled on a port, the port sends LACPDUs to notify the remote system of its system LACP priority, system MAC address, port

LACP priority, port number and operational key. Upon receipt of an LACPDU, the remote system compares the received information with the information received on other ports to determine the ports that can operate as selected ports. This allows the two systems to reach an agreement on the states of the related ports when aggregating ports, link aggregation control automatically assigns each port an operational key based on its rate, duplex mode and other basic configurations. In an LACP aggregation group, all ports share the same operational key; in a manual or static LACP aggregation, the selected ports share the same operational key.

**Partner ID:** The ID (MAC address) of the partner port.

**Partner Port:** The corresponding port numbers that connect to the partner switch in LACP mode.



## 4.5.9.2 LACP Statistics

In order to view the real-time LACP statistics of the Managed Switch, select **LACP Statistics** from the **LACP Monitor** menu and then the following screen page appears.

LACP Statistics					
<input type="button" value="Refresh"/> <input type="button" value="Clear All"/>					
Port	LACP Transmitted	LACP Received	Illegal Received	Unknown Received	Clear Counters
1	0	0	0	0	<input type="button" value="Clear"/>
2	0	0	0	0	<input type="button" value="Clear"/>
3	0	0	0	0	<input type="button" value="Clear"/>
4	0	0	0	0	<input type="button" value="Clear"/>
5	0	0	0	0	<input type="button" value="Clear"/>
6	0	0	0	0	<input type="button" value="Clear"/>
7	0	0	0	0	<input type="button" value="Clear"/>
8	0	0	0	0	<input type="button" value="Clear"/>
9	0	0	0	0	<input type="button" value="Clear"/>
10	0	0	0	0	<input type="button" value="Clear"/>
11	0	0	0	0	<input type="button" value="Clear"/>
12	0	0	0	0	<input type="button" value="Clear"/>
13	0	0	0	0	<input type="button" value="Clear"/>
14	0	0	0	0	<input type="button" value="Clear"/>
15	0	0	0	0	<input type="button" value="Clear"/>
16	0	0	0	0	<input type="button" value="Clear"/>
17	0	0	0	0	<input type="button" value="Clear"/>
18	0	0	0	0	<input type="button" value="Clear"/>
19	0	0	0	0	<input type="button" value="Clear"/>
20	0	0	0	0	<input type="button" value="Clear"/>
21	0	0	0	0	<input type="button" value="Clear"/>
22	0	0	0	0	<input type="button" value="Clear"/>
23	0	0	0	0	<input type="button" value="Clear"/>
24	0	0	0	0	<input type="button" value="Clear"/>
25	0	0	0	0	<input type="button" value="Clear"/>
26	0	0	0	0	<input type="button" value="Clear"/>
27	0	0	0	0	<input type="button" value="Clear"/>
28	0	0	0	0	<input type="button" value="Clear"/>

**Refresh:** Click **Refresh** to update the latest LACP statistics.

**Port:** The port that LACP packets (LACPDU) are transmitted or received.

**LACP Transmitted:** The current LACP packets transmitted from the port.

**LACP Received:** The current LACP packets received from the port.

**Illegal Received:** The current Illegal packets received from the port.

**Unknown Received:** The current unknown packets received from the port.

**Clear** button in **Clear Counters** field: Clear the statistics of the corresponding port.

**Clear All:** Clear the statistics of all ports.

## 4.5.10 RSTP Monitor

Click the **RSTP Monitor** folder and then three options within this folder will be displayed.

The screenshot shows the FOS-3128 web interface. On the left is a navigation tree with the following structure:

- FOS-3128
  - System Information
  - User Authentication
  - Network Management
  - Switch Management
    - Switch Monitor
      - CPU & Memory Statistics
      - CPU Temperature Status
      - Switch Port Status
      - Port Traffic Statistics
      - Port Packet Error Statistics
      - Port Packet Analysis Statistic
      - IEEE 802.1q VLAN Table
      - ARP Table
    - LACP Monitor
    - RSTP Monitor**
      - RSTP Bridge Overview
      - RSTP Port Status
      - RSTP Statistics
    - 802.1X Monitor
    - IGMP/MLD Monitor
    - SFP Information
      - DHCP Snooping
      - Storm Control Status
      - MAC Limiters Status
      - MAC Address Table

The main content area displays the **RSTP Bridge Overview** page. It features a **Refresh** button and a table with the following data:

Bridge ID	Max Age	Hello Time	Fwd Delay	Topology	Root ID	Root Port
32769:00-06-19-57-31-28	20	2	15	Steady	32769:00-06-19-57-31-28	0

### 4.5.10.1 RSTP Bridge Overview

**RSTP Bridge Overview** allows users to view a list of RSTP brief information, such as Bridge ID, topology status and Root ID. Select **RSTP Bridge Overview** from the **RSTP Monitor** menu and then the following screen page appears.

The screenshot shows the **RSTP Bridge Overview** page. It features a **Refresh** button and a table with the following data:

Bridge ID	Max Age	Hello Time	Fwd Delay	Topology	Root ID	Root Port
32769:00-06-19-57-31-28	20	2	15	Steady	32769:00-06-19-57-31-28	0

In this webpage, you can find the following information about RSTP bridge:

**Refresh:** Click **Refresh** to update the current status.

**Bridge ID:** RSTP Bridge ID of the Managed Switch.

**Max Age:** Max Age setting of the Managed Switch.

**Hello Time:** Hello Time setting of the Managed Switch.

**Fwd Delay:** The Managed Switch's setting of Forward Delay Time.

**Topology:** The state of the topology.

**Root ID:** Display this Managed Switch's Root ID.

**Root port:** Display this Managed Switch's Root Port Number.

## 4.5.10.2 RSTP Port Status

**RSTP Port Status** allows users to view a list of all RSTP ports' information. Select **RSTP Port Status** from the **RSTP Monitor** menu and then the following screen page appears.

RSTP Port Status						
Refresh						
Port	Path Cost	Edge Port	P2p Port	Protocol	Role	Port State
1	0	no	yes	RSTP	Non-STP	Non-STP
2	0	no	yes	RSTP	Non-STP	Non-STP
3	0	no	yes	RSTP	Non-STP	Non-STP
4	0	no	yes	RSTP	Non-STP	Non-STP
5	0	no	yes	RSTP	Non-STP	Non-STP
6	0	no	yes	RSTP	Non-STP	Non-STP
7	0	no	yes	RSTP	Non-STP	Non-STP
8	0	no	yes	RSTP	Non-STP	Non-STP
9	0	no	yes	RSTP	Non-STP	Non-STP
10	0	no	yes	RSTP	Non-STP	Non-STP
11	0	no	yes	RSTP	Non-STP	Non-STP
12	0	no	yes	RSTP	Non-STP	Non-STP
13	0	no	yes	RSTP	Non-STP	Non-STP
14	0	no	yes	RSTP	Non-STP	Non-STP
15	0	no	yes	RSTP	Non-STP	Non-STP
16	0	no	yes	RSTP	Non-STP	Non-STP
17	0	no	yes	RSTP	Non-STP	Non-STP
18	0	no	yes	RSTP	Non-STP	Non-STP
19	0	no	yes	RSTP	Non-STP	Non-STP
20	0	no	yes	RSTP	Non-STP	Non-STP
21	0	no	yes	RSTP	Non-STP	Non-STP
22	0	no	yes	RSTP	Non-STP	Non-STP
23	0	no	yes	RSTP	Non-STP	Non-STP
24	0	no	yes	RSTP	Non-STP	Non-STP
25	0	no	yes	RSTP	Non-STP	Non-STP
26	0	no	yes	RSTP	Non-STP	Non-STP
27	0	no	yes	RSTP	Non-STP	Non-STP
28	0	no	yes	RSTP	Non-STP	Non-STP
LLAG1	0	no	no	RSTP	Non-STP	Non-STP
LLAG2	0	no	no	RSTP	Non-STP	Non-STP
LLAG3	0	no	no	RSTP	Non-STP	Non-STP
LLAG4	0	no	no	RSTP	Non-STP	Non-STP
LLAG5	0	no	no	RSTP	Non-STP	Non-STP
LLAG6	0	no	no	RSTP	Non-STP	Non-STP
LLAG7	0	no	no	RSTP	Non-STP	Non-STP
LLAG8	0	no	no	RSTP	Non-STP	Non-STP
LLAG9	0	no	no	RSTP	Non-STP	Non-STP
LLAG10	0	no	no	RSTP	Non-STP	Non-STP
LLAG11	0	no	no	RSTP	Non-STP	Non-STP
LLAG12	0	no	no	RSTP	Non-STP	Non-STP
LLAG13	0	no	no	RSTP	Non-STP	Non-STP
LLAG14	0	no	no	RSTP	Non-STP	Non-STP

In this webpage, you can find the following information about RSTP status:

**Refresh:** Click **Refresh** to update the latest RSTP status.

**Port:** The number of the port.

**Path Cost:** The Path Cost of the port.

**Edge Port:** “Yes” is displayed if the port is the Edge port connecting to an end station and does not receive BPDU.

**P2p Port:** “Yes” is displayed if the port link is connected to another STP device.

**Protocol:** Display RSTP or STP.

**Role:** Display the Role of the port (non-STP, forwarding or blocked).

**Port State:** Display the state of the port (non-STP, forwarding or blocked).

### 4.5.10.3 RSTP Statistics

In order to view the real-time RSTP statistics of the Managed Switch, select **RSTP Statistics** from the **RSTP Monitor** menu and then the following screen page appears.

RSTP Statistics								
Refresh								
Port	RSTP Transmitted	STP Transmitted	TCN Transmitted	RSTP Received	STP Received	TCN Received	Illegal Received	Unknown Received
1	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0	0
14	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0	0
17	0	0	0	0	0	0	0	0
18	0	0	0	0	0	0	0	0
19	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0
21	0	0	0	0	0	0	0	0
22	0	0	0	0	0	0	0	0
23	0	0	0	0	0	0	0	0
24	0	0	0	0	0	0	0	0
25	0	0	0	0	0	0	0	0
26	0	0	0	0	0	0	0	0
27	0	0	0	0	0	0	0	0
28	0	0	0	0	0	0	0	0
LLAG1	0	0	0	0	0	0	0	0
LLAG2	0	0	0	0	0	0	0	0
LLAG3	0	0	0	0	0	0	0	0
LLAG4	0	0	0	0	0	0	0	0
LLAG5	0	0	0	0	0	0	0	0
LLAG6	0	0	0	0	0	0	0	0
LLAG7	0	0	0	0	0	0	0	0
LLAG8	0	0	0	0	0	0	0	0
LLAG9	0	0	0	0	0	0	0	0
LLAG10	0	0	0	0	0	0	0	0
LLAG11	0	0	0	0	0	0	0	0
LLAG12	0	0	0	0	0	0	0	0
LLAG13	0	0	0	0	0	0	0	0
LLAG14	0	0	0	0	0	0	0	0

**Refresh:** Click **Refresh** to update the latest RSTP statistics.

**Port:** The number of the port.

**RSTP Transmitted:** The total transmitted RSTP packets from the current port.

**STP Transmitted:** The total transmitted STP packets from the current port.

**TCN Transmitted:** The total transmitted TCN (Topology Change Notification) packets from the current port.

**RSTP Received:** The total received RSTP packets from the current port.

**STP Received:** The total received STP packets from the current port.

**TCN Received:** The total received TCN packets from the current port.

**Illegal Received:** The total received illegal packets from the current port.

**Unknown Received:** The total received unknown packets from the current port.



## 4.5.11 802.1X Monitor

Click the **802.1X Monitor** folder and then two options within this folder will be displayed.

The screenshot shows the FOS-3128 web interface. On the left is a tree menu with the following items: System Information, User Authentication, Network Management, Switch Management, Switch Monitor (expanded), CPU & Memory Statistics, CPU Temperature Status, Switch Port Status, Port Traffic Statistics, Port Packet Error Statistics, Port Packet Analysis Statistics, IEEE 802.1q VLAN Table, ARP Table, LACP Monitor, RSTP Monitor, 802.1X Monitor (selected), 802.1X Port Status, 802.1X Statistics, IGMP/MLD Monitor, SFP Information, DHCP Snooping, Storm Control Status, MAC Limiters Status, MAC Address Table, Layer 2 Protocol Tunneling Status, LLDP Status, Loop Detection Status, and Fast Redundancy Status. On the right, the '802.1X Port Status' page is displayed, featuring a 'Refresh' button and a table with four columns: Port, State, Last Source, and Last ID. The table lists 19 ports, all of which are in a 'Disabled' state.

Port	State	Last Source	Last ID
1	Disabled		
2	Disabled		
3	Disabled		
4	Disabled		
5	Disabled		
6	Disabled		
7	Disabled		
8	Disabled		
9	Disabled		
10	Disabled		
11	Disabled		
12	Disabled		
13	Disabled		
14	Disabled		
15	Disabled		
16	Disabled		
17	Disabled		
18	Disabled		
19	Disabled		

### 4.5.11.1 802.1X Port Status

**802.1X Port Status** allows users to view a list of all 802.1x ports' information. Select **802.1X Port Status** from the **802.1x Monitor** menu and then the following screen page appears. In this webpage, you can find the following information about 802.1X ports:

**Refresh:** Click **Refresh** to update the latest 802.1X port status.

**Port:** The number of the port.

**Port State:** Display the link state "Disabled", "LinkDown", "Authorized" or "Unauthorized" of each 802.1x port.

**Last Source:** Display the MAC address of the port's last source.

**Last ID:** Display the username of the port's last login.

802.1X Port Status			
Refresh			
Port	State	Last Source	Last ID
1	Disabled		
2	Disabled		
3	Disabled		
4	Disabled		
5	Disabled		
6	Disabled		
7	Disabled		
8	Disabled		
9	Disabled		
10	Disabled		
11	Disabled		
12	Disabled		
13	Disabled		
14	Disabled		
15	Disabled		
16	Disabled		
17	Disabled		
18	Disabled		
19	Disabled		
20	Disabled		
21	Disabled		
22	Disabled		
23	Disabled		
24	Disabled		
25	Disabled		
26	Disabled		
27	Disabled		
28	Disabled		

### 4.5.11.2 802.1X Statistics

In order to view the real-time 802.1X port statistics of the Managed Switch, select **802.1X Statistics** from the **802.1x Monitor** menu and then the following screen page shows up. Click **Refresh** to update the latest 802.1X statistics.


802.1X Statistics

Refresh

Port	Rx Total	Rx Response ID	Rx Response	Rx Start	Rx Logout	Rx Invalid Type	Rx Invalid Length	Rx Access Challenges	Rx Other Requests	Rx Auth. Successes	Rx Auth. Failures	Tx Total	Tx Request ID	Tx Request	Tx Responses
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
14	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
17	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
18	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
19	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
21	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
22	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
23	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
24	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
25	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
26	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
27	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
28	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

## 4.5.12 IGMP/MLD Monitor

Click the **IGMP/MLD Monitor** folder and then four options within this folder will be displayed.

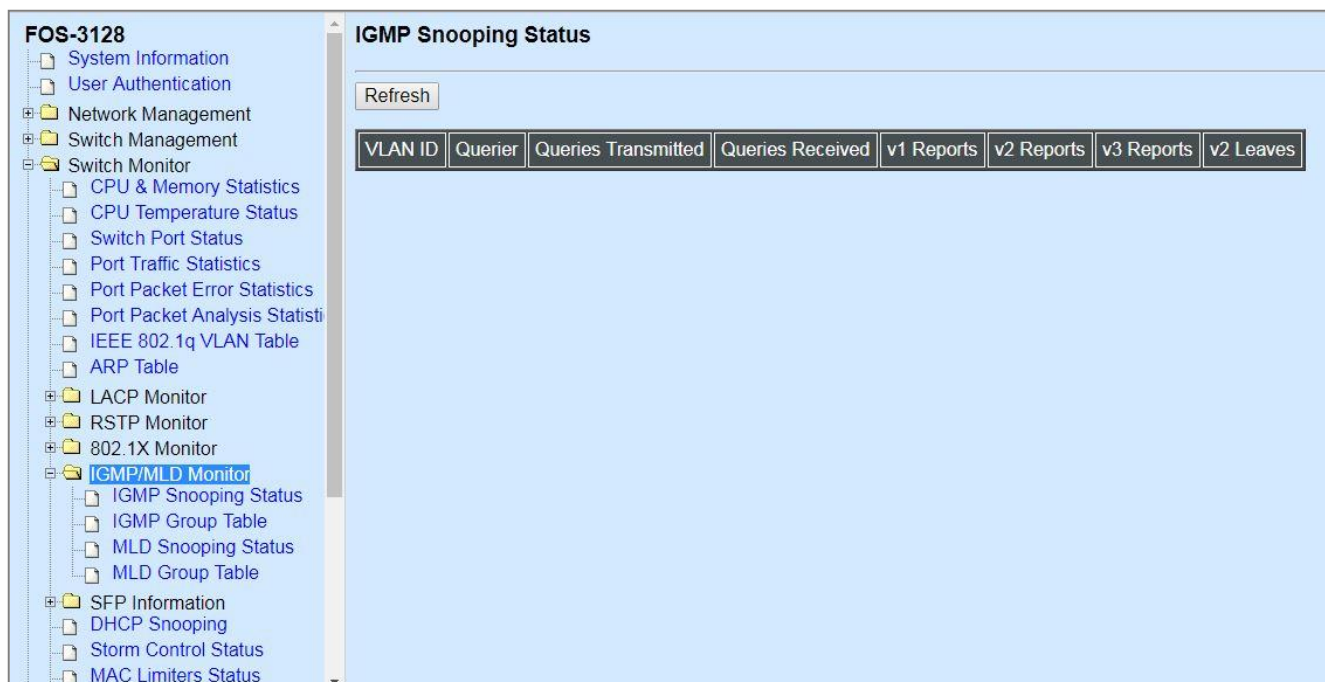

### 4.5.12.1 IGMP Snooping Status

**IGMP Snooping Status** allows users to view a list of IGMP queries' information in VLAN(s) such as VLAN ID, Querier and Queries Transmitted/Received packets. Select **IGMP Snooping Status** from the **IGMP/MLD Monitor** menu and then the following screen page appears.



**Refresh:** Click **Refresh** to update the latest IGMP snooping status.

**VLAN ID:** VID of the specific VLAN.

The IGMP querier periodically sends IGMP general queries to all hosts and routers (224.0.0.1) on the local subnet to find out whether active multicast group members exist on the subnet.

Upon receiving an IGMP general query, the Managed Switch forwards it through all ports in the VLAN except the receiving port.



**Querier:** The state of IGMP querier in the VLAN.

**Queries Transmitted:** The total amount of IGMP general queries transmitted will be sent to IGMP hosts.

**Queries Received:** The total amount of received IGMP general queries from IGMP querier.

**v1 Reports:** The total amount of received IGMP Version 1 reports (packets).

**v2 Reports:** The total amount of received IGMP Version 2 reports (packets).

**v3 Reports:** The total amount of received IGMP Version 3 reports (packets).

**v2 Leaves:** The total amount of received IGMP Version 2 leaves (packets).

### 4.5.12.2 IGMP Group Table

In order to view the real-time IGMP multicast group status of the Managed Switch, select **IGMP Group Table** from the **IGMP/MLD Monitor** menu and then the following screen page appears.



**Refresh:** Click **Refresh** to update the latest IGMP group table.

**VLAN ID:** VID of the specific VLAN.

**Group:** The multicast IP address of IGMP querier.

**Port:** The port(s) grouped in the specific multicast group.

### 4.5.12.3 MLD Snooping Status

**MLD Snooping Status** allows users to view a list of MLD queries' information in VLAN(s) such as VLAN ID, Querier and Queries Transmitted/Received packets. Select **MLD Snooping Status** from the **IGMP/MLD Monitor** menu and then the following screen page appears.



VLAN ID	Querier	Queries Transmitted	Queries Received	v1 Reports	v2 Reports	Done
---------	---------	---------------------	------------------	------------	------------	------

**Refresh:** Click **Refresh** to update the latest MLD snooping status.

**VLAN ID:** VID of the specific VLAN.

**Querier:** The state of MLD querier in the VLAN.

**Queries Transmitted:** The total amount of MLD general queries transmitted will be sent to MLD hosts.

**Queries Received:** The total amount of received MLD general queries from MLD querier.

**v1 Reports:** The total amount of received MLD Version 1 reports (packets).

**v2 Reports:** The total amount of received MLD Version 2 reports (packets).

**Done:** The total amount of received MLD Version 1 done (packets).

### 4.5.12.4 MLD Group Table

In order to view the real-time MLD multicast group status of the Managed Switch, select **MLD Group Table** from the **IGMP/MLD Monitor** menu and then the following screen page appears.



VLAN ID	Group	Port
---------	-------	------

**Refresh:** Click **Refresh** to update the latest MLD group table.

**VLAN ID:** VID of the specific VLAN

**Group:** The multicast IP address of MLD querier.

**Port:** The port(s) grouped in the specific multicast group.

## 4.5.13 SFP Information

Click the **SFP Information** folder and then two options within this folder will be displayed.

FOS-3128

System Information

User Authentication

Network Management

Switch Management

Switch Monitor

CPU & Memory Statistics

CPU Temperature Status

Switch Port Status

Port Traffic Statistics

Port Packet Error Statistic

Port Packet Analysis Stati

IEEE 802.1q VLAN Table

ARP Table

LACP Monitor

RSTP Monitor

802.1X Monitor

IGMP/MLD Monitor

SFP Information

SFP Port Info

SFP Port State

DHCP Snooping

Storm Control Status

MAC Limiters Status

MAC Address Table

Layer 2 Protocol Tunnelin

SFP Port Info

Port	Speed	Distance	Vendor Name	Vendor PN	Vendor SN
1	----	----	----	----	----
2	----	----	----	----	----
3	----	----	----	----	----
4	----	----	----	----	----
5	----	----	----	----	----
6	----	----	----	----	----
7	----	----	----	----	----
8	----	----	----	----	----
9	----	----	----	----	----
10	----	----	----	----	----
11	1000Mbps	20 km	CTS INC.	SFP-31W2ASM-20-I	4DE914BB0000165
12	----	----	----	----	----
13	----	----	----	----	----
14	----	----	----	----	----
15	----	----	----	----	----
16	----	----	----	----	----

### 4.5.13.1 SFP Port Info

**SFP Port Info** displays each port's slide-in SFP Transceiver information e.g. the speed of transmission, the distance of transmission, vendor Name, vendor PN, vendor SN, etc. Select **SFP Port Info** from the **SFP Information** menu and then the following screen page appears.

**Port:** The number of the port.

**Speed:** Data rate of the slide-in SFP Transceiver.

**Distance:** Transmission distance of the slide-in SFP Transceiver.

**Vendor Name:** Vendor name of the slide-in SFP Transceiver.

**Vendor PN:** Vendor PN of the slide-in SFP Transceiver.

**Vendor SN:** Vendor SN of the slide-in SFP Transceiver.

SFP Port Info					
Port	Speed	Distance	Vendor Name	Vendor PN	Vendor SN
1	----	----	----	----	----
2	----	----	----	----	----
3	----	----	----	----	----
4	----	----	----	----	----
5	----	----	----	----	----
6	----	----	----	----	----
7	----	----	----	----	----
8	----	----	----	----	----
9	----	----	----	----	----
10	----	----	----	----	----
11	1000Mbps	20 km	CTS INC.	SFP-31W2ASM-20-I	4DE914BB0000165
12	----	----	----	----	----
13	----	----	----	----	----
14	----	----	----	----	----
15	----	----	----	----	----
16	----	----	----	----	----
17	----	----	----	----	----
18	----	----	----	----	----
19	----	----	----	----	----
20	----	----	----	----	----
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	----	----	----	----	----
28	----	----	----	----	----

### 4.5.13.2 SFP Port State

**SFP Port State** displays each port's slide-in SFP Transceiver information e.g. the currently detected temperature, voltage, TX Bias, etc.. Select **SFP Port State** from the **SFP Information** menu and then the following screen page appears.

**Port:** The number of the SFP module slide-in port.

**Temperature (C):** The operation temperature of slide-in SFP module currently detected.

**Voltage (V):** The operation voltage of slide-in SFP module currently detected.

**TX Bias (mA):** The operation current of slide-in SFP module currently detected.

**TX Power (dBm):** The optical transmission power of slide-in SFP module currently detected.

**RX Power (dBm):** The optical receiving power of slide-in SFP module currently detected.

SFP Port State					
Port	Temperature(C)	Voltage(V)	TX Bias(mA)	TX Power(dBm)	RX Power(dBm)
1	----	----	----	----	----
2	----	----	----	----	----
3	----	----	----	----	----
4	----	----	----	----	----
5	----	----	----	----	----
6	----	----	----	----	----
7	----	----	----	----	----
8	----	----	----	----	----
9	----	----	----	----	----
10	----	----	----	----	----
11	35.0	3.35	30.80	-5.8	-8.7
12	----	----	----	----	----
13	----	----	----	----	----
14	----	----	----	----	----
15	----	----	----	----	----
16	----	----	----	----	----
17	----	----	----	----	----
18	----	----	----	----	----
19	----	----	----	----	----
20	----	----	----	----	----
21	----	----	----	----	----
22	----	----	----	----	----
23	----	----	----	----	----
24	----	----	----	----	----
25	----	----	----	----	----
26	----	----	----	----	----
27	----	----	----	----	----
28	----	----	----	----	----

## 4.5.14 DHCP Snooping

**DHCP Snooping** displays the Managed Switch's DHCP Snooping table. Select **DHCP Snooping** option from the **Switch Monitor** menu and then the following screen page appears.

**DHCP Snooping Table**

Refresh

Index	CliPort	SrvPort	VID	CliIPAddr	CliMACAddr	SrvIPAddr	TimeLeft
-------	---------	---------	-----	-----------	------------	-----------	----------

**Refresh:** Click **Refresh** to update the latest DHCP snooping table.

**CliPort:** View-only field that shows where the DHCP client binding port is.

**SrvPort:** View-only field that shows the port where the IP address is obtained from

**VID:** View-only field that shows the VLAN ID of the client port.

**CliIPAddr:** View-only field that shows client IP address.

**CliMACAddr:** View-only field that shows client MAC address.

**SrvIPAddr:** View-only field that shows DHCP server IP address.

**TimeLeft:** View-only field that shows DHCP client lease time.

## 4.5.15 Storm Control Status

**Storm Control Status** displays the storm control status of each port. Select **Storm Control Status** from the **Switch Monitor** menu and then the following screen page appears.

Storm Control Status				
Refresh				
Port	Action	Status	Reason of being locked	Unlock
1	Drop	--	--	Unlock
2	Drop	--	--	Unlock
3	Drop	--	--	Unlock
4	Drop	--	--	Unlock
5	Drop	--	--	Unlock
6	Drop	--	--	Unlock
7	Drop	--	--	Unlock
8	Drop	--	--	Unlock
9	Drop	--	--	Unlock
10	Drop	--	--	Unlock
11	Drop	--	--	Unlock
12	Drop	--	--	Unlock
13	Drop	--	--	Unlock
14	Drop	--	--	Unlock
15	Drop	--	--	Unlock
16	Drop	--	--	Unlock
17	Drop	--	--	Unlock
18	Drop	--	--	Unlock
19	Drop	--	--	Unlock
20	Drop	--	--	Unlock
21	Drop	--	--	Unlock
22	Drop	--	--	Unlock
23	Drop	--	--	Unlock
24	Drop	--	--	Unlock
25	Drop	--	--	Unlock
26	Drop	--	--	Unlock
27	Drop	--	--	Unlock
28	Drop	--	--	Unlock

**Action:** View-only field that shows each port's configured action that will be taken when the Unknown Unicast/Unknown Multicast/Broadcast rate is over the threshold.

**Status:** View-only field that shows each port's locked/unlocked status of storm control. The port will only be locked if its storm control is enabled, the port's action is configured as "shutdown", and the current Unknown Unicast/Unknown Multicast/Broadcast rate exceeds the threshold. It will show "--" when the "Drop" action of the port is chosen.

**Reason of being locked:** View-only field that shows the cause why the port is locked.

**Unlock:** If the storm control-enabled port's current broadcast/unknown multicast/unknown unicast packets per second exceed the threshold and the port action is set as "Shutdown", the **Unlock** button can be pressed to unlock the specific port.



## 4.5.16 MAC Limiters Status

**MAC Limiters Status** displays the valid MAC Limit Status of each port. Select **MAC Limiters Status** option from the **Switch Monitor** menu and then the following screen page appears.

MAC Limit Status								
Refresh								
Port	1	2	3	4	5	6	7	8
Limit	--	--	--	--	--	--	--	--
Current	--	--	--	--	--	--	--	--
Status	--	--	--	--	--	--	--	--
Unlock	--	--	--	--	--	--	--	--
Port	9	10	11	12	13	14	15	16
Limit	--	--	--	--	--	--	--	--
Current	--	--	--	--	--	--	--	--
Status	--	--	--	--	--	--	--	--
Unlock	--	--	--	--	--	--	--	--
Port	17	18	19	20	21	22	23	24
Limit	--	--	--	--	--	--	--	--
Current	--	--	--	--	--	--	--	--
Status	--	--	--	--	--	--	--	--
Unlock	--	--	--	--	--	--	--	--
Port	25	26	27	28				
Limit	--	--	--	--				
Current	--	--	--	--				
Status	--	--	--	--				
Unlock	--	--	--	--				

**Refresh:** Click **Refresh** to update the latest MAC Limiters status.

**Port:** The number of each port.

**Limit:** The MAC address threshold configured.

**Current:** The current number of MAC addresses that have been learned by each port.

**Status:** View-only field that shows each port's locked/unlocked status of MAC Limit. The port will only be locked if its MAC Limiter is enabled, the port's action is configured as "shutdown", and the number of current MAC address learned exceeds the threshold. It will show "--" when the "Drop" action of the port is chosen.

**Unlock:** If the MAC Limit-enabled port's action is set as "Shutdown" and the number of **Limit**  $\geq$  the number of **Current**, the **Unlock** button cannot be pressed; however, if the number of **Limit**  $<$  the number of **Current**, the **Unlock** button can be pressed to unlock the specific port.

## 4.5.17 MAC Address Table

**MAC Address Table** displays MAC addresses learned when MAC Address Learning is enabled. Select **MAC Address Table** option from the **Switch Monitor** menu and then the following screen page appears.

MAC Address Table

Capacity	Free	Used	Dynamic	Static	Internal
16384	16382	2	1	1	1

Condition	Filter Setting	Clear MAC
<input checked="" type="radio"/> All		Clear
<input type="radio"/> Static		
<input type="radio"/> MAC	00:00:00 00:00:00	
<input type="radio"/> VLAN	0 (0-4094)	
<input type="radio"/> Port List		Clear
Sort by	Port ▼	

Search

Search Count	2				
Index	Type	MAC Address	VID	Port	Add to Static
1	dynamic	00:60:6E:B0:0D:DE	1	25	<input type="checkbox"/>
2	static	00:06:19:12:A7:B0	1	CPU	

Add to Static

First

Previous

Page 1 ▼

Next

Last

The table above is composed of the MAC addresses that are automatically learned from each port of Managed Switch or manually created by the users.

Click **Search** to update the MAC Address table by selecting **All/Static/MAC/VLAN/Port List** five conditions, and sort these searched MAC addresses by selecting **Port/MAC/VID** option from the **Sort by** pull-down menu.

Click **Clear** located in the row of **All** condition to clear all dynamic MAC addresses in the MAC address table. Or click **Clear** located in the row of **Port List** condition to clear the dynamic MAC addresses for the specified port(s).

To transfer the MAC address type from "dynamic" into "static", please click on the checkbox belonging to the specific dynamic MAC address in the **Add to Static** field, and then press the **Add to Static** button below the table. The specified dynamic MAC address will be turned into a static one when clicking **Search** to refresh the MAC address table.

To view the the MAC addresses that are searched, you may use **First**, **Previous**, **Next** or **Last** to move to the first/previous/next/last page of MAC address table or pull down the page list to directly go to the desired page.

## 4.5.18 Layer 2 Protocol Tunneling Status

**Layer 2 Protocol Tunneling Status** displays the state of each Layer 2 protocol data units (PDUs), and each PDU's encapsulation as well as decapsulation statistics. Select **Layer 2 Protocol Tunneling Status** option from the **Switch Monitor** menu and then the following screen page appears.

Layer 2 Protocol Tunnel Status									
Refresh Clear All									
Port	Protocol	CDP	LLDP	STP	VTP	Point to Point			Clear Counters
						LACP	PagP	UDLD	
1	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	
2	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	
3	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	
4	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	
5	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	
6	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	

⋮

26	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	
27	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	
28	State	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Clear
	Encapsulation Counter	0	0	0	0	0	0	0	
	Decapsulation Counter	0	0	0	0	0	0	0	

**Refresh:** Click **Refresh** to update the latest Layer 2 Protocol Tunneling Status table.

**Clear** button in **Clear Counters** field: Clear the encapsulation and decapsulation statistics of each PDU for the corresponding port.

**Clear All:** Clear all ports' encapsulation and decapsulation statistics of each PDU.

## 4.5.19 LLDP Status

Select **LLDP Status** from the **Switch Monitor** menu and then the following screen page appears.

LLDP Status										
<input type="button" value="Refresh"/>										
Local Port	Chassis ID	Remote Port	System Name	Port Description	System Capabilities	Management1 Address	Management2 Address	Management3 Address	Management4 Address	Management5 Address
1										
2										
3										
4										
5										
6										
7										
8										
9										
10										
11										
12										
13										
14										
15										
16										
17										
18										
19										
20										
21										
22										
23										
24										
25										
26										
27										
28										

**Refresh:** Click **Refresh** to update the latest LLDP Status table.

**Local Port:** View-only field that shows the port number on which LLDP frames are received.

**Chassis ID:** View-only field that shows the MAC address of the LLDP frames received (the MAC address of the neighboring device).

**Remote Port:** View-only field that shows the port number of the neighboring device.

**System Name:** View-only field that shows the system name advertised by the neighboring device.

**Port Description:** View-only field that shows the port description of the remote port.

**System Capabilities:** View-only field that shows the capability of the neighboring device.

**Management (1~5) Address:** View-only field that shows the IP address (1~5) of the neighboring device.

## 4.5.20 Loop Detection Status

Select **Loop Detection Status** from the **Switch Monitor** menu and then the following screen page appears.

Loop Detection Status		
Refresh		
Port	Status	Lock Cause
1	Un-lock	
2	Un-lock	
3	Un-lock	
4	Un-lock	
5	Un-lock	
6	Un-lock	
7	Un-lock	
8	Un-lock	
9	Un-lock	
10	Un-lock	
11	Un-lock	
12	Un-lock	
13	Un-lock	
14	Un-lock	
15	Un-lock	
16	Un-lock	
17	Un-lock	
18	Un-lock	
19	Un-lock	
20	Un-lock	
21	Un-lock	
22	Un-lock	
23	Un-lock	
24	Un-lock	
25	Un-lock	
26	Un-lock	
27	Un-lock	
28	Un-lock	

**Refresh:** Click **Refresh** to update the latest Loop Detection Status table.

**Status:** View-only field that shows the loop status of each port.

**Lock Cause:** View-only field that shows the cause why the port is locked.

## 4.5.21 Fast Redundancy Status

**Fast Redundancy Status** is to manually or automatically update the fast redundancy status, the information of topology transformation and the redundant ports' transmitting/receiving statistics for the configured Fast Ring v2 and/or Chain. Select **Fast Redundancy Status** from the **Switch Monitor** menu and then the following screen page appears.

**Fast Redundancy Status**

Refresh Page Interval  (1-300) Seconds

**Topology Change Status**

Topology Change			Clear Counters
Times	Last Change Time	Elapsed Time	
13	2019/05/22 20:58:34	0 day 00:00:38	<input type="button" value="Clear"/>

**Fast Redundancy Status**

Entry	Group ID	Description	Enable	Protocol	Role	Status	1st Redundancy Port			2nd Redundancy Port		
							Port	Role	Status	Port	Role	Status
1	2		Enable	Fast Ring V2	Master	Healthy	27	--	Forwarding	28	--	Blocked
2	1		Enable	Chain	--	Break	24	Head	Forwarding	26	Member	Forwarding

**Fast Redundancy Statistics**

Entry	Tx		Rx		Clear Counters
	Normal	Failure	Normal	Failure	
1	78419	168	375324	29	<input type="button" value="Clear"/>
2	0	19157	0	0	<input type="button" value="Clear"/>

**Refresh Page Interval:** Automatically updates the related fast redundancy statistics and status at a specified interval in seconds. Please note that the value you assign in this parameter is temporarily used and will not be saved into the configuration file of the Managed Switch. This value will not be applied into the next system boot-up.

**Start Auto Update:** Click “**Start Auto Update**” to activate auto-update.

**Stop Auto Update:** Click “**Stop Auto Update**” to deactivate auto-update.

**Refresh:** Click “**Refresh**” to update the latest statistics and status of fast redundancy at a time.

**Times of Topology Change:** View-only field that shows the total times of topology transformation for the configured Fast Ring v2 and Chain.

**Last Change Time of Topology Change:** View-only field that shows the time when the last transformation of topology takes place.

**Elapsed Time of Topology Change:** The period of time passed by since the last transformation of topology has been taken place.

**Clear** button in **Clear Counters** field for Topology Change Status: The counter value of **Times** will set back to zero and the information related to the last transformation of topology will also be cleared.

**Entry:** View-only field. This shows the number of each fast redundancy you configured.

**Group ID:** View-only field. This shows the group ID of each fast redundancy you configured.

**Description:** View-only field that shows the description of each group you configured.

**Enable:** View-only field that shows the enabled or disabled status of each fast redundancy you configured.

**Protocol:** View-only field that shows the redundancy protocol you use for each fast redundancy you configured.

**Role:** View-only field that shows the role that the Managed Switch plays in each fast redundancy you configured when the “Fast Ring v2” protocol is chosen. It will show “--” when the “Chain” protocol is chosen.

**Status:** View-only field that shows the connection status of each fast redundancy you configured. Include **Healthy**, **Break** and **Signal Fail** 3 types of state. Each state is described as below.

**Healthy:** It indicates that the connection of the fast redundancy is in normal status.

**Break:** It indicates that the failure of fast redundancy connection occurs on other switch and its backup link is activated to transmit the data.

**Signal Fail:** It indicates that the failure of fast redundancy connection occurs on the switch itself and its backup link is activated to transmit the data.

**1st Redundancy Port:** View-only field that shows the port on the Managed Switch acts as the first redundant port.

**2nd Redundancy Port:** View-only field that shows the port on the Managed Switch acts as the secondary redundant port.

**Role of 1st/2nd Redundancy Port:** View-only field. It shows the role (Head, Member and Tail) that the port acting as the first/secondary redundant port plays when the Chain protocol is chosen. It will show “--” when the Fast Ring v2 protocol is chosen.

**Status of 1st/2nd Redundancy Port:** View-only field. It shows the connection status of the port that acts as the first/secondary redundant port. Include **Forwarding**, **Blocked** and **Link down** 3 types of port state. Each state is described as below.

**Forwarding:** It indicates that the port connection of the fast redundancy is in normal status.

**Blocked:** It indicates that the port is connected to a backup path and the path is blocked.

**Link down:** It indicates that no port connection exists.

**Tx Normal:** Total packets transmitted from the specific entry when its configured Fast Ring v2/Chain is at the normal status.

**Rx Normal:** Total packets received by the specific entry when its configured Fast Ring v2/Chain is at the normal status.

**Tx Failure:** Total packets transmitted from the specific entry when its configured Fast Ring v2/Chain is at the abnormal status.

**Rx Failure:** Total packets received by the specific entry when its configured Fast Ring v2/Chain is at the abnormal status.

**Clear** button in **Clear Counters** field for Fast Redundancy Statistics: Clear the fast redundancy Tx/Rx Normal and Tx/Rx Failure statistics of redundant ports for the corresponding entry.



## 4.6 System Utility

**System Utility** allows users to easily operate and maintain the system. Select the folder **System Utility** from the **Main Menu** and then the following screen page appears.

The screenshot displays the FOS-3128 System Utility interface. On the left is a tree view of system utilities, with 'System Utility' selected. The main area is titled 'Ping' and contains a form for configuring a ping test. The form has three input fields: 'Ping IP/IPv6 Address' with the value '0.0.0.0', 'Count' with the value '3', and 'Size' with the value '64'. Below these fields are 'Start' and 'Stop' buttons. A large rectangular area labeled 'Ping State' is positioned below the buttons, intended for displaying the results of the ping test.

1. **Ping:** Ping can help you test the network connectivity between the Managed Switch and the host. You can also specify the counts and size of Ping packets.
2. **Event Log:** Event log can keep a record of system's log events such as system warm start, cold start, link up/down, user login/logout, etc. They will be kept only when your CPU version is A06 with Boot ROM version A08 or later version. If your CPU or Boot ROM version is older than the one mentioned above, all events will lose when the system is shut down or rebooted.
3. **Port Link Flap Log:** Count and record each port's port link flap (a port's linkdown or linkup) history, causes, and so on.
4. **HTTP/FTP/TFTP Upgrade:** This allows users to update the latest firmware, save the current configuration or restore the previous configuration to the Managed Switch.
5. **Firmware Copy:** Do the copy of the running firmware image.
6. **Load Factory Settings:** Load Factory Settings will set the configuration of the Managed Switch back to the factory default settings. The IP and Gateway addresses will be reset to the factory default as well.
7. **Load Factory Settings Except Network Configuration:** Selecting this function will also restore the configuration of the Managed Switch to its original factory default settings. However, this will not reset the IP and Gateway addresses to the factory default.
8. **Auto-Backup Configuration:** Periodically execute the automatic backup of the start-up configuration files based on the given time you set up.
9. **Warm Reload:** Use **Up-Time** or **Ping** method to decide whether the system needs to reboot and recover the start-up-config or not.

## 4.6.1 Ping

**Ping** can help you test the network connectivity between the Managed Switch and the host. Select **Ping** from the **System Utility** menu and then the following screen page appears.

**Ping**

Ping IP/IPv6 Address192.168.0.1

Count3Size64

StartStop

Ping State

PING 192.168.0.1 (192.168.0.1): 64 data bytes  
64 bytes from 192.168.0.1: seq=0 ttl=64 time=30.000 ms  
64 bytes from 192.168.0.1: seq=1 ttl=64 time=0.000 ms  
64 bytes from 192.168.0.1: seq=2 ttl=64 time=0.000 ms  
  
--- 192.168.0.1 ping statistics ---  
3 packets transmitted, 3 packets received, 0% packet loss  
round-trip min/avg/max = 0.000/10.000/30.000 ms

Enter the IPv4/IPv6 address of the host you would like to ping. You can also specify count and size of the Ping packets. Click **Start** to start the Ping process or **Stop** to pause this Ping process.

## 4.6.2 Event Log

**Event log** keeps a record of switch-related information, such as user login, logout timestamp and so on. In the **Type** field, “**I**” is the abbreviation of “Information”, “**W**” is the abbreviation of “Warning”, and “**E**” is the abbreviation of “Error”.

Select **Event Log** from the **System Utility** menu and then the following screen page appears. All event logs will be cleared when the system reset occurs.

Event Log								
Index	Type	NTP Time	Up Time	Description	Source	Event	Name/Community	Address
38	I		0 day 02:03:02	User from web login succeeded.	web	login	admin	192.168.0.79
37	I		0 day 01:30:01	User from telnet disconnected.	telnet	disconnected	admin	192.168.0.79
36	I		0 day 01:29:25	User from web login succeeded.	web	login	admin	192.168.0.79
35	I		0 day 01:23:36	User from telnet login succeeded.	telnet	login	admin	192.168.0.79
34	I		0 day 01:13:12	User from telnet disconnected.	telnet	disconnected	admin	192.168.0.79
33	I		0 day 01:07:42	User from telnet login succeeded.	telnet	login	admin	192.168.0.79
32	I		0 day 00:12:36	User from web login succeeded.	web	login	admin	192.168.0.79
31	W		0 day 00:01:52	Fan 2 fails.	local	fan failed		
30	W		0 day 00:01:52	Fan 1 fails.	local	fan failed		
29	I		0 day 00:01:24	Local port 28 copper link down.	local	link down		
28	I		0 day 00:01:24	Local port 27 copper link down.	local	link down		
27	I		0 day 00:01:24	Local port 26 copper link down.	local	link down		
26	I		0 day 00:01:24	Local port 25 copper link down.	local	link down		
25	I		0 day 00:01:24	Local port 24 fiber link down.	local	link down		
24	I		0 day 00:01:24	Local port 23 fiber link down.	local	link down		
23	I		0 day 00:01:24	Local port 22 fiber link down.	local	link down		
22	I		0 day 00:01:24	Local port 21 fiber link down.	local	link down		
21	I		0 day 00:01:24	Local port 20 fiber link down.	local	link down		
20	I		0 day 00:01:24	Local port 19 fiber link down.	local	link down		
19	I		0 day 00:01:24	Local port 18 fiber link down.	local	link down		
18	I		0 day 00:01:24	Local port 17 fiber link down.	local	link down		
17	I		0 day 00:01:24	Local port 16 fiber link down.	local	link down		
16	I		0 day 00:01:24	Local port 15 fiber link down.	local	link down		
15	I		0 day 00:01:24	Local port 14 fiber link down.	local	link down		
14	I		0 day 00:01:24	Local port 13 fiber link down.	local	link down		
13	I		0 day 00:01:24	Local port 12 fiber link down.	local	link down		
12	I		0 day 00:01:24	Local port 11 fiber link down.	local	link down		
11	I		0 day 00:01:24	Local port 10 fiber link down.	local	link down		
10	I		0 day 00:01:24	Local port 9 fiber link down.	local	link down		
9	I		0 day 00:01:24	Local port 8 fiber link down.	local	link down		
8	I		0 day 00:01:24	Local port 7 fiber link down.	local	link down		
7	I		0 day 00:01:24	Local port 6 fiber link down.	local	link down		
6	I		0 day 00:01:24	Local port 5 fiber link up.	local	link up		
5	I		0 day 00:01:24	Local port 4 fiber link down.	local	link down		
4	I		0 day 00:01:24	Local port 3 fiber link down.	local	link down		
3	I		0 day 00:01:24	Local port 2 fiber link down.	local	link down		
2	I		0 day 00:01:24	Local port 1 fiber link down.	local	link down		
1	I		0 day 00:01:21	System cold start.	local	cold start		

Clear All

Click **Clear All** to clear the record of all event logs.

## 4.6.3 Port Link Flap Log

**Port Link Flap Log** shows each port's log history of trigger events such as the port link flap (a port's linkdown or linkup), the count of port's port link flap, the reason that causes these triggered events, the time duration that the port link flap lasts, Rx power(dBm) of SFP ports, and so on.

In the Port Link Flap Log table, up to 100 entries can be accommodated for each port. Like the event log, the oldest record will be overwritten by the newly-generated one when total records reach the limit. Select **Port Link Flap Log** from the **System Utility** menu and then the following screen page appears.

To view the latest log data of the port link flap, just pull down the menu of **Port Number** and choose the preferred port. The logs belonging to the designated port will be listed. All logs will be cleared as well when the system reset occurs.

**Port Link Flap Log**

Port Number

Port 1 ▾

Refresh

Clear

Local Time

2019/05/23 Thu 17:23:56

Total Port Flaps

0

Index	NTP Time	Up Time	Port Status	Description	When Flapped	Status Duration	SFP RX Power(dBm)
-------	----------	---------	-------------	-------------	--------------	-----------------	-------------------

**Refresh:** Click **Refresh** to update the latest Port Link Flap Log table.

**Clear:** Click **Clear** to remove all logs of the triggered event for the specified port.

**Local Time:** Display the local time of the system. To obtain the correct local time, please make sure that the device's NTP function is enabled. (For more details on NTP settings, refer to [Section 4.3.4 "Time Server Configuration"](#).)

**Total Port Flaps:** Total times of the linkdown or linkup for the specific port.

**Index:** The number of the specific port's triggered events arranged in order of time.

**NTP Time:** Display the local time when the specific port's triggered event occurred.

**Up Time:** Display the up time since the specific port's triggered event has been occurred.

**Port Status:** This shows each port's link state, which can be Link up, Link down, or "--".

**Description:** Display the reason why the specific port is triggered.

**When Flapped:** The period of time passed by since the specific port's port link flap has been taken place. This value is equal to the above parameters "**Local Time**" – "**NTP Time**" of the specific index or system's "**Up Time**" displayed on the **System Information** webpage – "**Up Time**" of the specific index. The value of this parameter will be updated over time.

**Status Duration:** The period of time that the specific port's port link flap lasts until a new one occurs. This value is equal to the above parameters "**Up Time**" of the next index – "**Up Time**" of the specific index. (e.g. Index 5's status duration = Index 6's "Up Time" – Index 5's "Up Time".)

As to the status duration of the newest link flap, it will be equal to system's "**Up Time**" displayed on the **System Information** webpage – "**Up Time**" of this newest link flap, which will be updated over time until the next port link flap occurs.

**SFP RX Power(dBm):** The value of RX power in unit of dBm. Only the fiber ports will display this value based on the following cases, other TP ports will display "--".

- In case of the fiber port status is from *link-down* to *link-up*, it will display the value of current Rx power after this fiber port link is up and its power signal is steady (it may take 15 seconds around). The RX power value obtained is a fixed one that will not be changed over time.
- In case of the fiber port status is from *link-up* to *link-down*, it will display the last value of power signal before this fiber port link is down. The RX power value obtained is a fixed one that will not be changed over time.

## 4.6.4 HTTP Upgrade

Users may save or restore their configuration and update their firmware. Select **HTTP Upgrade** from the **System Utility** menu and then the following screen page appears.

The screenshot displays the 'HTTP Upgrade' web interface. It is divided into two main sections: 'Configuration Update' and 'Firmware Update'. The 'Configuration Update' section contains a 'Backup' area with a 'Config Type' dropdown set to 'Running-config' and a 'Backup' button, and a 'Restore' area with a 'Choose File' button, the text 'No file chosen', and a 'Restore' button. The 'Firmware Update' section contains an 'Upgrade Image Option' dropdown set to 'Image-1' and a 'Select File' area with a 'Choose File' button, the text 'No file chosen', and an 'Upload' button.

HTTP Upgrade	
<b>Configuration Update</b>	
Backup	Config Type: Running-config ▼
	device configuration to local file: Backup
Restore	Choose File: No file chosen Restore
<b>Firmware Update</b>	
Upgrade Image Option	Image-1 ▼
Select File	Choose File: No file chosen Upload

The related parameter description of the configuration update is as follows:

### Config Type:

There are three types of the configuration file: Running-config, Default-config and Start-up-config.

- **Running-config:** Back up the data you're processing.
- **Default-config:** Back up the data same as factory setting.
- **Start-up-config:** Back up the data same as last saved data.

**Device Configuration to Local File:** Click **Backup** to begin download the configuration file to your PC.

**Restore:** Click **Choose File** to select the designated data and then click **Restore**.

The related parameter description of the firmware update is as follows:

**Upgrade Image Option:** Pull down the list to choose the image you would like to upgrade.

**Select File:** Click **Choose File** to select the desired file and then click **Upload**.

## 4.6.5 FTP/TFTP Upgrade

The Managed Switch has both built-in TFTP and FTP clients. Users may save or restore their configuration and update their firmware. Select **FTP/TFTP Upgrade** from the **System Utility** menu and then the following screen page appears.

**FTP/TFTP Upgrade**

Protocol	FTP ▾
File Type	Configuration ▾
Config Type	Running-config ▾
Server IP/IPv6 Address	0.0.0.0
User Name	
Password	...
File Location	
<input type="button" value="Put"/> <input type="button" value="Update"/>	
Transmitting State	

**Protocol:** Select the preferred protocol, either FTP or TFTP.

**File Type:** Select the type of file to process, either Firmware or Configuration.

**Config Type:** Choose the type of the configuration file that will be saved or restored among “Running-config”, “Default-config” or “Start-up-config”.

**Server IP/IPv6 Address:** Enter the specific IPv4/IPv6 address of the FTP/TFTP file server.

**User Name:** Enter the specific username to access the FTP file server.

**Password:** Enter the specific password to access the FTP file server.

**File Location:** Enter the specific path and filename within the FTP/TFTP file server.

Click **Update** to start the download process and receive files from the server. A transmitting progress will be displayed during file transfer. Once completed, a process-completed message will pop up to remind the user.

Click **Put** to start the upload process and transmit files to the server. A transmitting progress will be displayed during file transfer. Once completed, a process-completed message will pop up to remind users.



## 4.6.6 Firmware Copy

**Firmware Copy** allows the currently running firmware image to be copied to the other firmware image by clicking the **Copy** button. It will take 50 seconds around, and please do NOT power off Managed Switch during the firmware copying.

**Firmware Copy**

Firmware Copy

Copy

(Current image-1 copy to backup image-2)

Current Boot Image	Image-1
Configured Boot Image	Image-1
Image-1 Version	1.00.27
Image-2 Version	1.00.24

## 4.6.7 Load Factory Settings

**Load Factory Setting** will set all the configurations of the Managed Switch back to the factory default settings, including the IP and Gateway address. **Load Factory Setting** is useful when network administrators would like to re-configure the system. A system reset is required to make all changes effective after Load Factory Setting.

Select **Load Factory Setting** from the **System Utility** menu and then the following screen page appears.

**Load Factory Settings**

System Will Need to Be Reset

Load Factory Settings?

OK


Click **OK** to start loading factory settings.



## 4.6.8 Load Factory Settings Except Network Configuration

**Load Factory Settings Except Network Configuration** will set all the configurations of the Managed Switch back to the factory default settings. However, IP and Gateway addresses will not restore to the factory default. It is very useful when network administrators need to re-configure the system “REMOTELY” because conventional Factory Reset will bring network settings back to the default and lose all network connections.

Select **Load Factory Setting Except Network Configuration** from the **System Utility** menu, the following screen shows up.

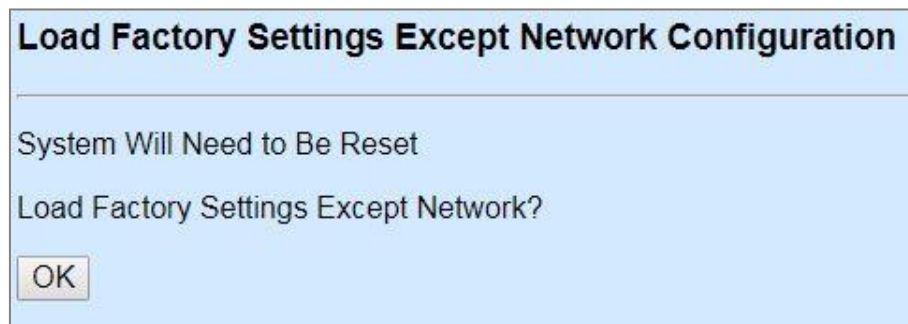

Click **OK** to start loading factory settings except network configuration.

## 4.6.9 Auto-Backup Configuration

In FOS-3128, the forementioned **HTTP Upgrade** and **FTP/TFTP Upgrade** functions are offered for the users to do the manual backup of the start-up configuration. Alternatively, you can choose the **Auto-backup configuration** function to do this backup automatically and periodically. It is useful to prevent the loss of users' important configuration if they forget to do the backup, or help do the file comparison if any error occurs. Please note that the device's NTP function must be enabled as well in order to obtain the correct local time.

To initiate this function, please select **Auto-Backup Configuration** from the **System Utility** menu, the following screen page shows up.

**Auto-Backup Configuration**

Note: In order for the Auto Backup function to work properly, the NTP function must be enabled for the device to acquire local time information.

NTP Status: Disable

Auto Backup	Disabled ▾
Backup Time	0 ▾ o'clock
Protocol	TFTP ▾
File Type	Configuration
Server IP/IPv6 Address	0.0.0.0
User Name	anonymous
Password	
File Directory	/
File Name	
Backup State	

OK

**NTP Status:** Display the current state of NTP server. Include Disable, Inactive and active 3 states.

**Disable:** NTP server is disabled.

**Inactive:** NTP server is enabled, but the Managed Switch does not obtain the local time from NTP server.

**Active:** NTP server is enabled, and the Managed Switch obtains the local time from NTP server.

**Auto Backup:** Enable/disable the auto-backup function for the start-up configuration files of the device.

**Backup Time:** Set up the time when the backup of the start-up configuration files will start every day for the system.

**Protocol:** Either FTP or TFTP server can be selected to backup the start-up configuration files.

**File Type:** Display the type of files that will be backed up.

**Server IP/IPv6 Address:** Set up the IPv4/IPv6 address of FTP/TFTP server.

**User Name and Password:** Input the required username as well as password for authentication if FTP is chosen in the Protocol field.

**File Directory:** Assign the back-up path where the start-up configuration files will be placed on FTP or TFTP server.

**File Name:** The filename assigned to the auto- backup configuration files. The format of filename generated automatically is as follows:

**ip address\_Device Name\_yyyyMMdd-HHmm.txt** , for example, 192.168.0.3\_FOS-3128\_20190606-1650.txt

**Backup State:** Display the status of the auto-backup you execute.

## 4.6.10 Warm Reload

In the remote configuration of Managed Switch, **Warm Reload** is supported for the sake of reducing the mistakes due to the human negligence that may result in the risk of the network failure. By means of **Up-Time** or **Ping** two methods of this function, the system will reboot and recover the start-up-config in case either of the following two conditions occur.

One condition is when the system checks the current running-config is different from the start-up-config after the countdown of Up-Time expires (if the system checks the current running-config is the same as the start-up-config, the session of warm reload will be stopped and do nothing.). If the users would like to restart this session of warm reload, they need to press the **Start** button again; the other condition is when the retry times of Ping reach the limit after the consecutive pings failed.

During the execution of this feature, please note that if there is any important configurations made, be sure that these new changes are saved; otherwise, they will be lost after the system reboots. And also note that Warm Reload is the one-time function, its settings are temporarily used and will not be saved into the configuration file of Managed Switch.

To initiate the warm reload via **Up-Time** or **Ping** method, click the option **Warm Reload** from the **System Utility** menu, the following screen page shows up. You may refer to the sub-sections below to configure the Warm Reload function upon your requirements.

**Warm Reload**

Condition	Up-Time ▼	
Set Up-Time	Up-Time Ping	(1-1440) Minutes
Status	disabled	
Configured Up-Time	10 minutes	
Remaining Up-Time		

Note: 1. This is one-time function, its settings can't be saved!  
2. If the running-config is different from the start-up-config, the system will do reboot while "Remaining Up-Time" countdown is over !

Start Stop Refresh

### 4.6.10.1 Configure Warm Reload via Up-Time

Pull down the **Condition** menu to select the method of Warm Reload to process, either Up-Time or Ping. If “Up-Time” option is chosen, the related parameters’ description of this warm reload is as follows.

**Warm Reload**

Condition	Up-Time ▼
Set Up-Time	10 (1-1440) Minutes
Status	disabled
Configured Up-Time	10 minutes
Remaining Up-Time	

Note: 1. This is one-time function, its settings can't be saved!  
2. If the running-config is different from the start-up-config, the system will do reboot while "Remaining Up-Time" countdown is over !

Start Stop Refresh

Configure the condition of Warm Reload as “Up-Time”

**Set Up-Time:** Specify the Up-Time between 1 and 1440 minutes for the configured warm reload session. Default is 10 minutes.

**Status:** View-only field that displays the current status of the configured warm reload session.

**Configured Up-Time:** View-only field that displays the time value of Up-Time you configure.

**Remaining Up-Time:** Display the time of Up-Time is left after clicking **Start** to activate the configured warm reload session. When the countdown of Up-Time expires, the system will start to check that whether the current running-config is the same as the start-up-config or not.


**Start:** Activate the session of warm reload and the Up-Time you configure will start to count down.

**Refresh:** Update the latest status of the configured warm reload session.

**Stop:** End the running session of warm reload.

## 4.6.10.2 Configure Warm Reload via Ping

Pull down the **Condition** menu to select the method of Warm Reload to process, either Up-Time or Ping. If “Ping” option is chosen, the related parameters’ description of this warm reload is as follows.

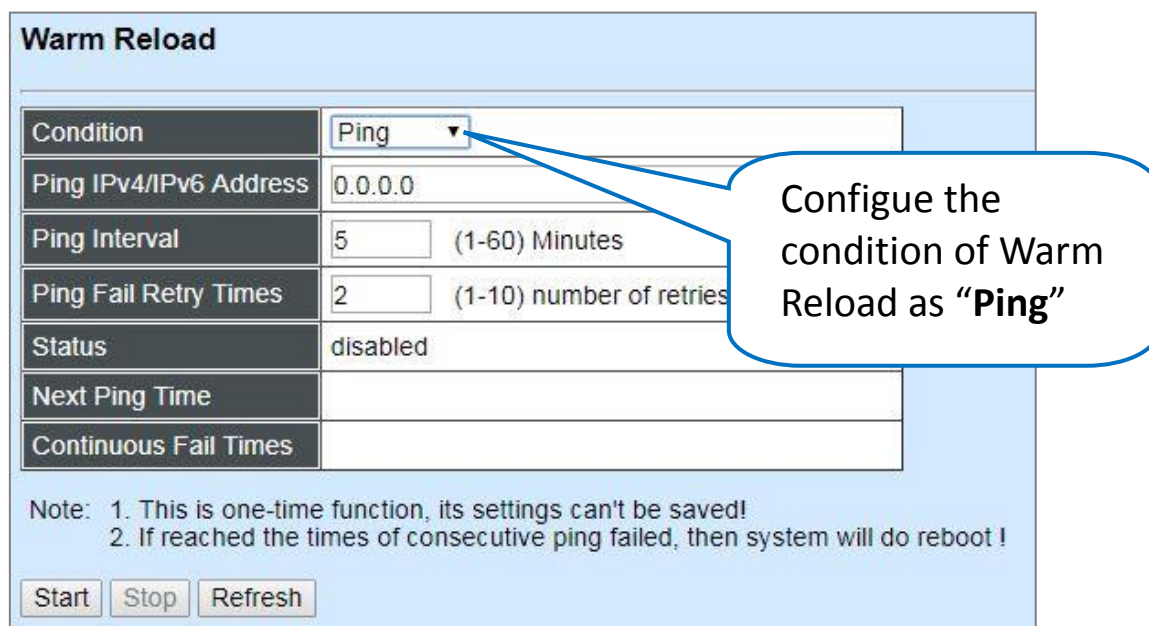

The screenshot shows a 'Warm Reload' configuration window. It contains a table with the following fields:

Warm Reload	
Condition	Ping
Ping IPv4/IPv6 Address	0.0.0.0
Ping Interval	5 (1-60) Minutes
Ping Fail Retry Times	2 (1-10) number of retries
Status	disabled
Next Ping Time	
Continuous Fail Times	

Below the table, there is a 'Note' section with two points:

Note: 1. This is one-time function, its settings can't be saved!  
2. If reached the times of consecutive ping failed, then system will do reboot !

At the bottom, there are three buttons: Start, Stop, and Refresh.

A callout bubble points to the 'Condition' dropdown menu, containing the text: 'Configure the condition of Warm Reload as “Ping”'.

**Ping IPv4/IPv6 Address:** Specify the IPv4/IPv6 address of the device that Managed Switch would like to ping. Make sure that IPv4 or IPv6 function in **Network Management** is enabled, or the user cannot execute the warm reload via the “Ping” method and the system will pop up an error message of “Cannot be executed, the IPv4/IPv6 address is not enabled !”.

**Ping Interval:** Specify the time interval in minutes when Managed Switch will ping the specific IP address of the device for the configured warm reload session. Valid range: 1-60.

**Ping Fail Retry Times:** Specify the desired times that Managed Switch will retry to ping the specific IP address of the device when its first ping fails until the retry times reach this limit. Valid range: 1-10.

**Status:** View-only field that displays the current status of the configured warm reload session.

**Next Ping Time:** Display the time when Managed Switch’s next ping to the specific IP address of the device will start.

**Continuous Fail Times:** The count of the times that the consecutive pings failed.


**Start:** Activate the session of warm reload.

**Refresh:** Update the latest status of the configured warm reload session.

**Stop:** End the running session of warm reload.

## 4.7 Save Configuration

In order to save the configuration permanently, users need to save configuration first before resetting the Managed Switch. Select **Save Configuration** from the the Main Menu and then the following screen page appears.

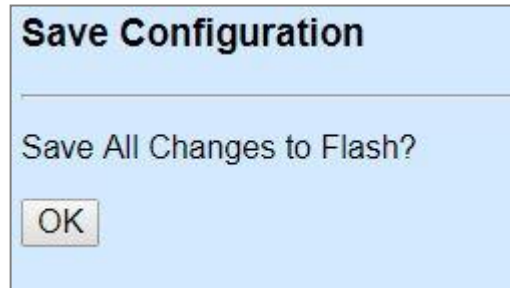


A light blue rectangular dialog box with a title bar at the top that says "Save Configuration". Below the title bar, the text "Save All Changes to Flash?" is displayed. At the bottom left of the dialog box is a button labeled "OK".

Click **OK** to save the configuration.

## 4.8 Reset System

To reboot the system, please select **Reset System** from the Main Menu and then the following screen page appears. From the pull-down menu of **New Configured Boot Image**, you can choose the desired image for the next system reboot if necessary.

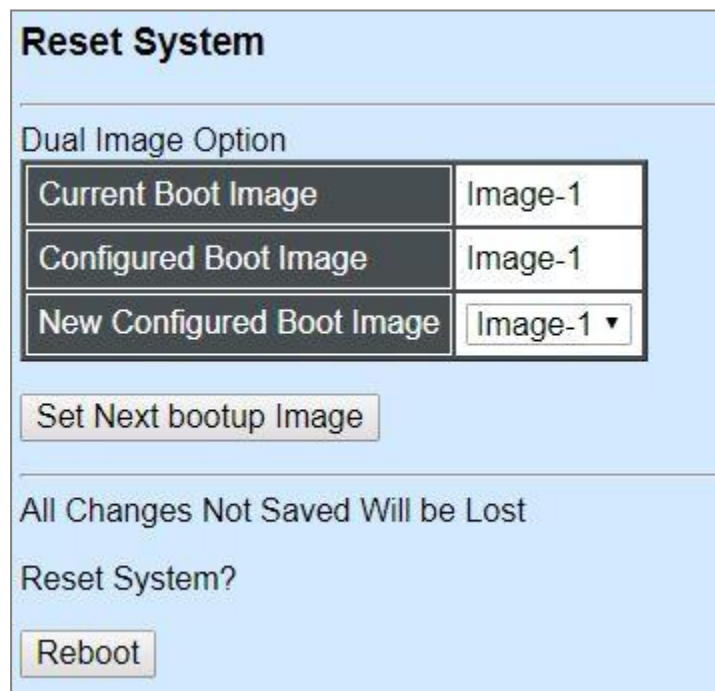

A light blue rectangular screen titled "Reset System". Below the title, the text "Dual Image Option" is displayed. Under this text is a table with three rows and two columns. The first two rows have labels in the left column and values in the right column. The third row has a label in the left column and a dropdown menu in the right column. Below the table is a button labeled "Set Next bootup Image". At the bottom of the screen, the text "All Changes Not Saved Will be Lost" is displayed, followed by "Reset System?" and a button labeled "Reboot".

Current Boot Image	Image-1
Configured Boot Image	Image-1
New Configured Boot Image	Image-1 ▼

Click **Set Next bootup Image** to change the image into the new boot-up image you select. Click **Reboot** to restart the Managed Switch.

# APPENDIX A: Free RADIUS readme

The advanced RADIUS Server Set up for **RADIUS Authentication** is described as below.

When free RADIUS client is enabled on the device,

On the server side, it needs to put this file "**dictionary.sample**" under the directory **/raddb**, and modify these three files - "**users**", "**clients.conf**" and "**dictionary**", which are on the disc shipped with this product.

\* Please use any text editing software (e.g. Notepad) to carry out the following file editing works.

In the file "**users**",

Set up user name, password, and other attributes.

In the file "**clients.conf**",

Set the valid range of RADIUS client IP address.

In the file "**dictionary**",  
Add this following line -

**\$INCLUDE dictionary.sample**



# APPENDIX B: Set Up DHCP Auto-Provisioning


Networking devices, such as switches or gateways, with DHCP Auto-provisioning function allow you to automatically upgrade firmware and configuration at startup process. Before setting up DHCP Server for auto-upgrade of firmware and configuration, please make sure the Managed Switch that you purchased can support DHCP Auto-provisioning. Setup procedures and auto-provisioning process are described below for your reference.

## A. Setup Procedures

Follow the steps below to set up Auto Provisioning server, modify dhcpd.conf file and generate a copy of configuration file.

### Step 1. Set up Environment


DHCP Auto-provisioning-enabled products that you purchased support the DHCP option 60 to work as a DHCP client. To make auto-provisioning function work properly, you need to prepare ISC DHCP server, File server (TFTP or FTP) and the switching device. See below for a possible network topology example.

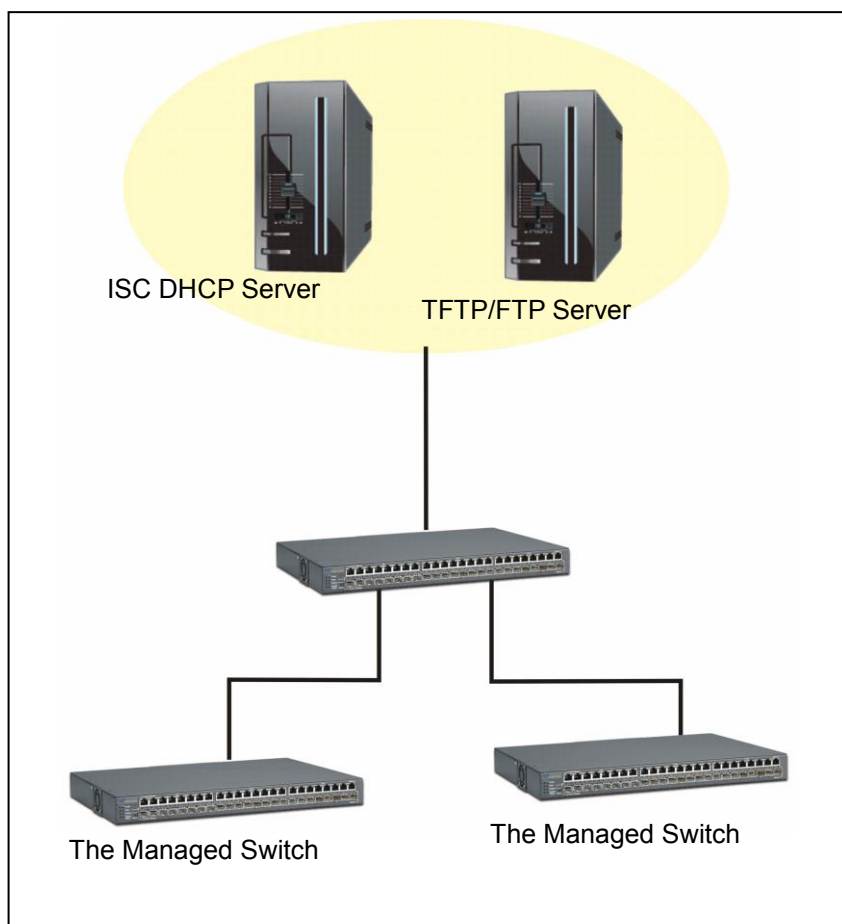

Topology Example


## Step 2. Set up Auto Provision Server

### ● Update DHCP Client

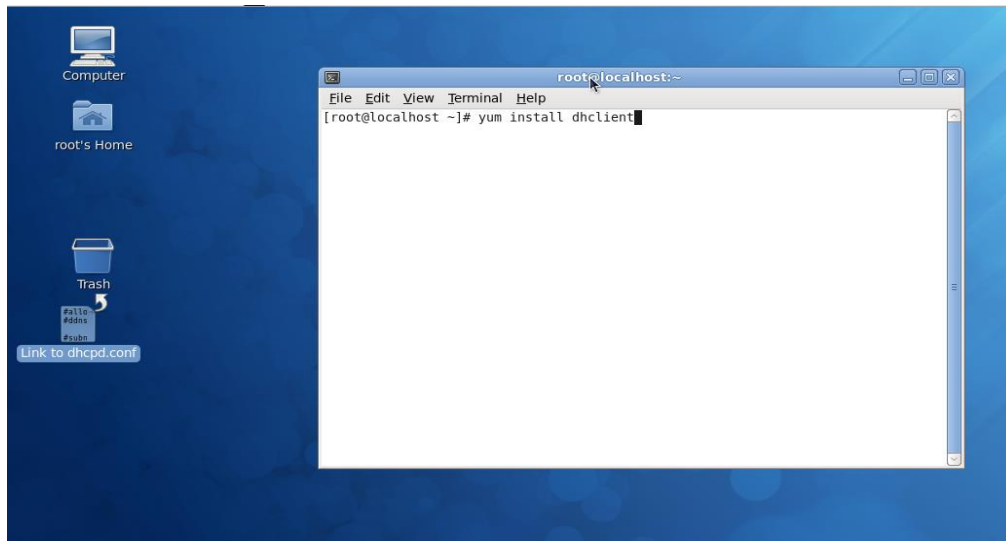


Linux Fedora 12 supports “yum” function by default. First of all, update DHCP client function by issuing “yum install dhclient” command.

### ● Install DHCP Server

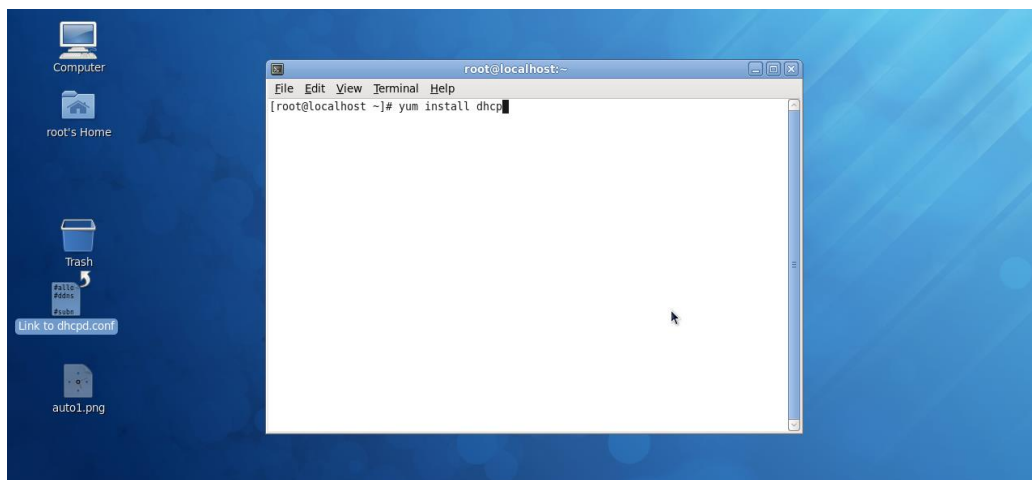

Issue “yum install dhcp” command to install DHCP server.


- **Copy dhcpd.conf to /etc/dhcp/ directory**

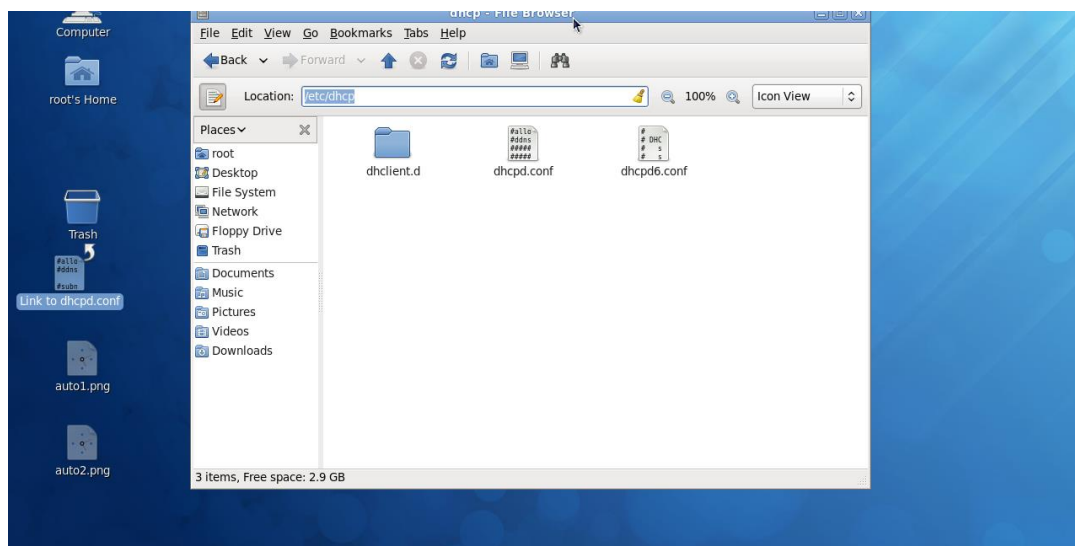

Copy dhcpd.conf file provided by the vendor to /etc/dhcp/ directory.


Please note that each vendor has their own way to define auto provisioning. Make sure to use the file provided by the vendor.

- **Enable and run DHCP service**

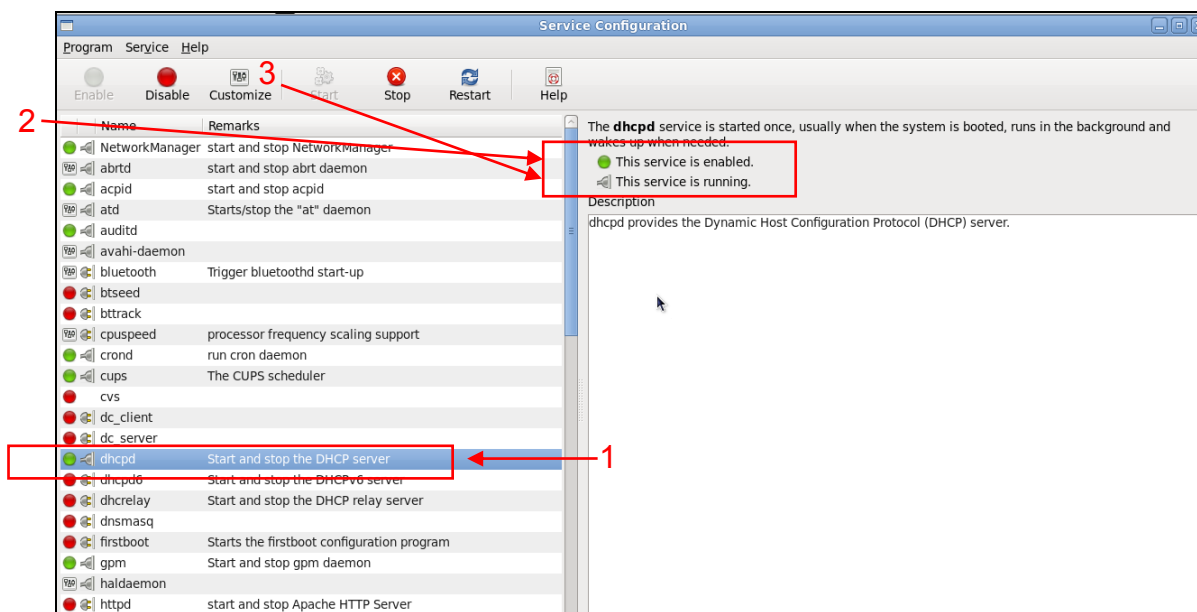

1. Choose dhcpd.
2. Enable DHCP service.
3. Start running DHCP service.


**NOTE:** DHCP service can also be enabled by CLI. Issue “dhcpd” command to enable DHCP service.

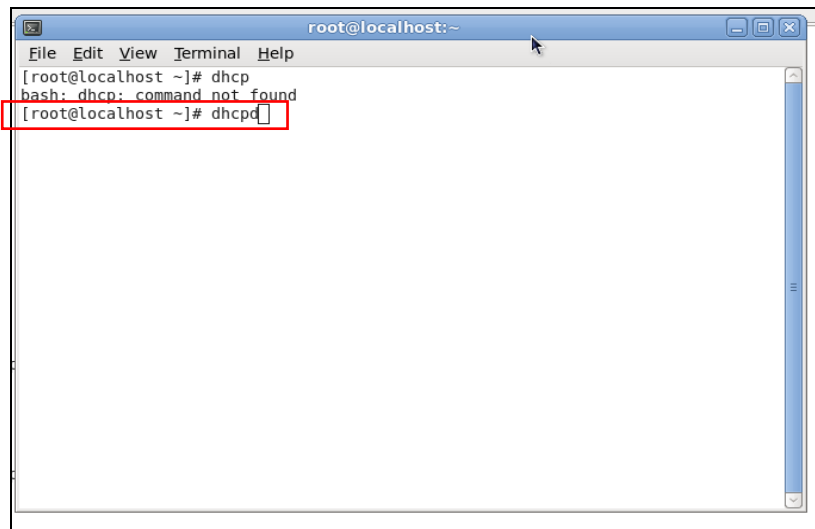

```
root@localhost:~  
File Edit View Terminal Help  
[root@localhost ~]# dhcp  
bash: dhcp: command not found  
[root@localhost ~]# dhcpd
```

### Step 3. Modify dhcpd.conf file


- Open dhcpd.conf file in /etc/dhcp/ directory

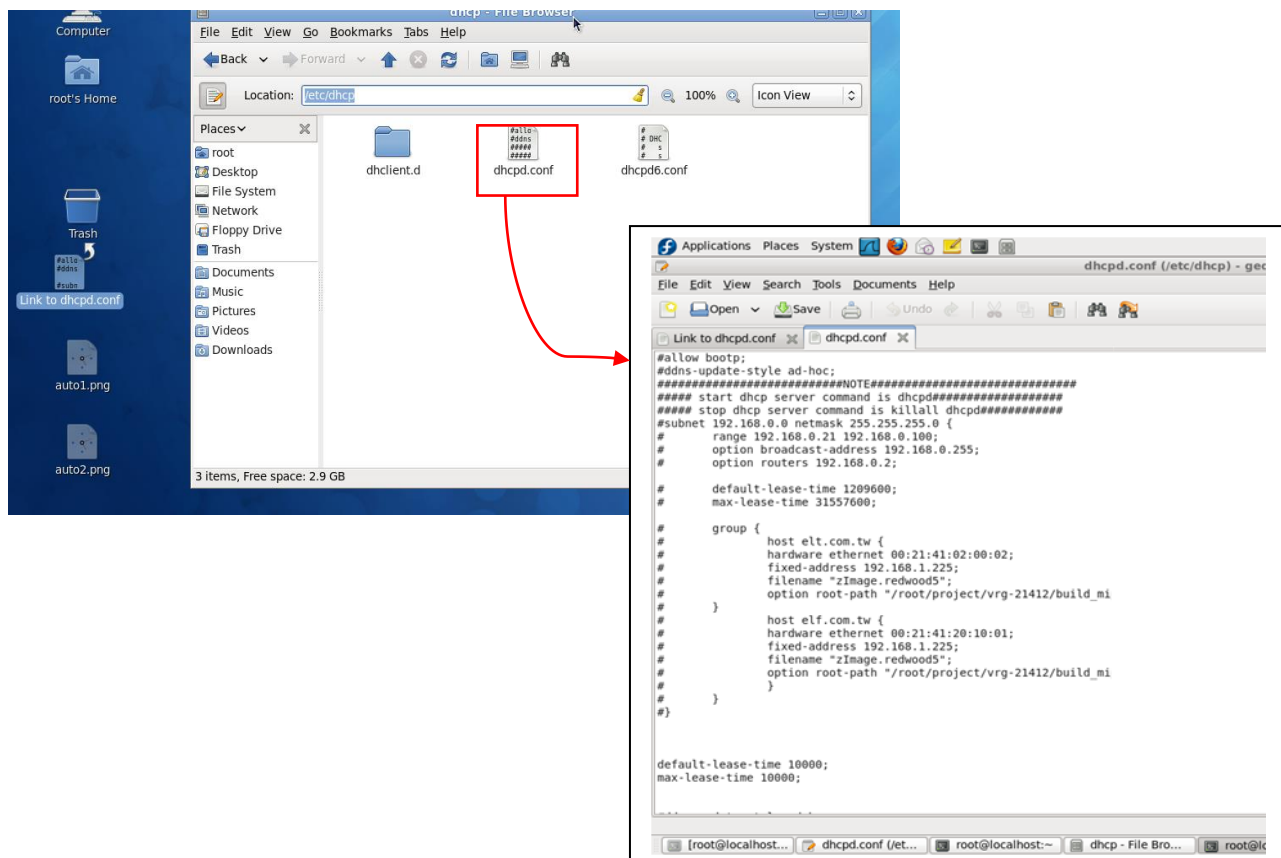

Double-click dhcpd.conf placed in /etc/dhcp/ directory to open it.

## ● Modify dhcpd.conf file

The following marked areas in dhcpd.conf file can be modified with values that work with your networking environment.

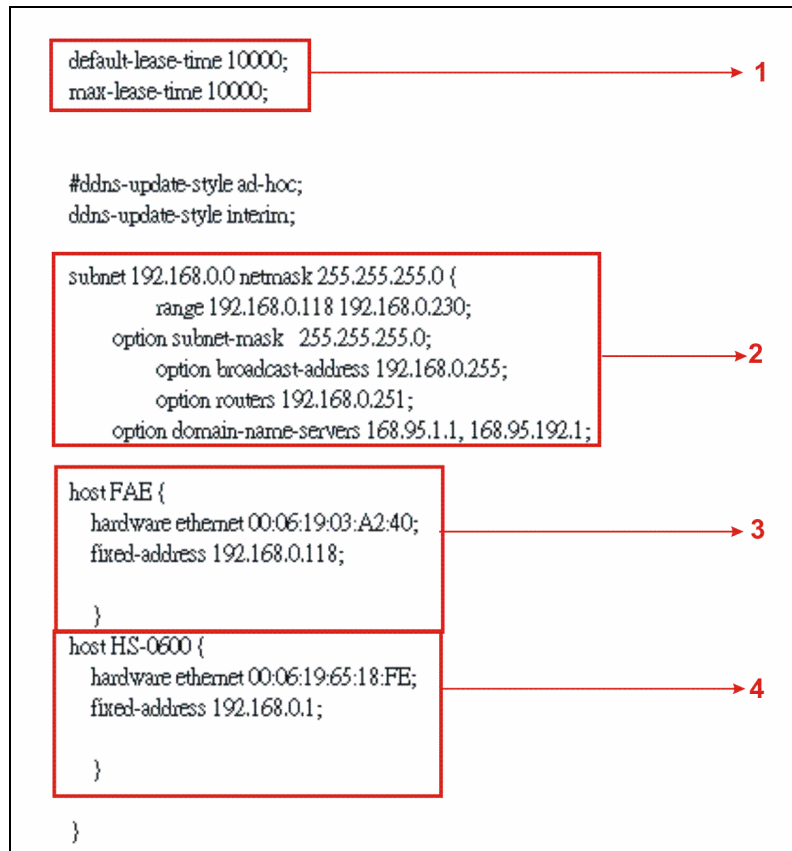


1. Define DHCP default and maximum lease time in seconds.

Default lease time: If a client does not request a specific IP lease time, the server will assign a default lease time value.

Maximum lease time: This is the maximum length of time that the server will lease for.

2. Define subnet, subnet mask, IP range, broadcast address, router address and DNS server address.
3. Map a host's MAC address to a fixed IP address.
4. Map a host's MAC address to a fixed IP address. Use the same format to create multiple MAC-to-IP address bindings.

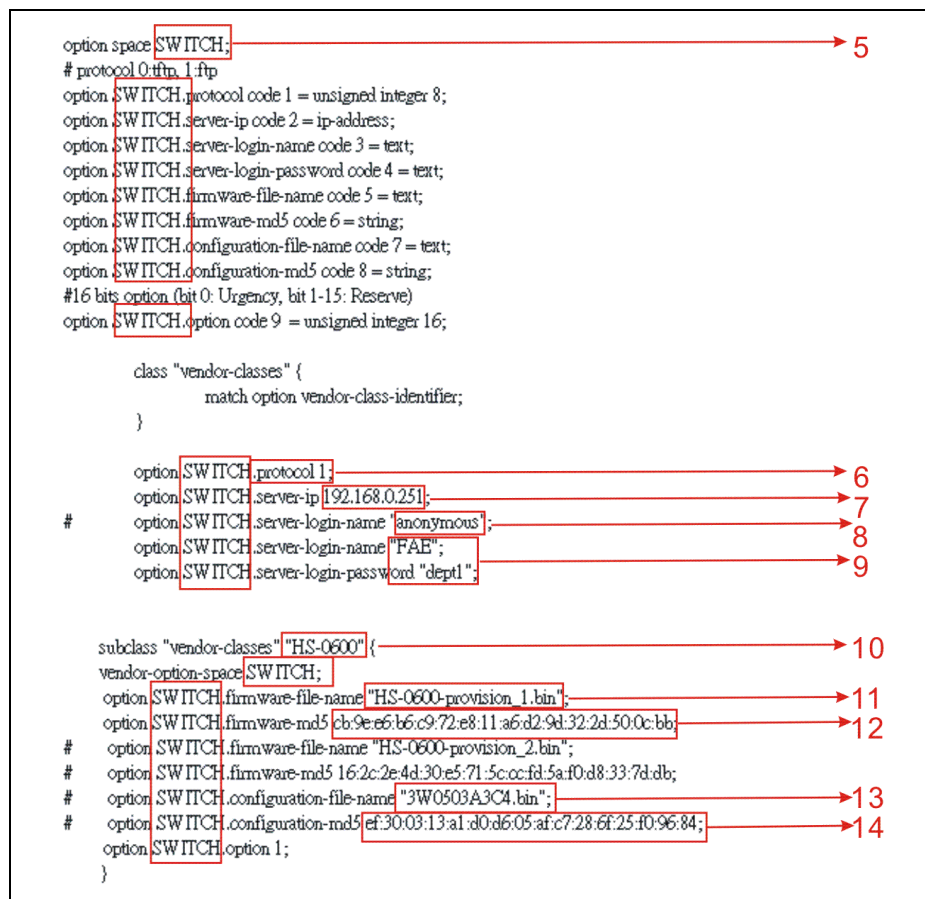

5. This value is configurable and can be defined by users.
6. Specify the protocol used (Protocol 1: FTP; Protocol 0: TFTP).
7. Specify the FTP or TFTP IP address.
8. Login TFTP server anonymously (TFTP does not require a login name and password).
9. Specify FTP Server login name and password.
10. Specify the product model name.
11. Specify the firmware filename.
12. Specify the MD5 for firmware image.
13. Specify the configuration filename.
14. Specify the MD5 for configuration file.

**NOTE 1:** The text beginning with a pound sign (#) will be ignored by the DHCP server. For example, in the figure shown above, firmware-file-name “HS-0600-provision\_2.bin” and firmware-md5 (line 5 & 6 from the bottom) will be ignored. If you want DHCP server to process these two lines, remove pound signs in the initial of each line.

**NOTE 2:** You can use either free software program or Linux default md5sum function to get MD5 checksum for firmware image and configuration file.

The screenshot shows a terminal window with the command `md5sum HS-0600-provision_2.bin` being executed, resulting in the output `162c2e4d30e5713cctf05a7e0d8337dbd HS-0600-provision_2.bin`. The terminal is then used to edit the `dhcpd.conf` file. The configuration file contains settings for a DHCP server, including protocol options, vendor classes, and a subclass for "HS-0600".

```
option space SWITCH;
# protocol 0 tftp, 1 tftp;
option SWITCH.protocol code 1 = unsigned integer 8;
option SWITCH.server-ip code 2 = ip-address;
option SWITCH.server-login-name code 3 = text;
option SWITCH.server-login-password code 4 = text;
option SWITCH.firmware-file-name code 5 = text;
option SWITCH.firmware-md5 code 6 = string;
option SWITCH.configuration-file-name code 7 = text;
option SWITCH.configuration-md5 code 8 = string;
#16 bits option (bit 0: Urgency, bit 1-15: Reserve)
option SWITCH.option code 9 = unsigned integer 16;

class "vendor-classes" {
    match option vendor-class-identifier;
}

option SWITCH.protocol 1;
option SWITCH.server-ip 192.168.0.251;
option SWITCH.server-login-name "anonymous";
option SWITCH.server-login-name "FAE";
option SWITCH.server-login-password "depl";

subclass "vendor-classes" "HS-0600" {
    vendor-option-space SWITCH;
    option SWITCH.firmware-file-name "HS-0600-provision_1.bin";
    option SWITCH.firmware-md5 "cb9e6b6c972e811a6d29d322d500cbb";
    # option SWITCH.firmware-file-name "HS-0600-provision_2.bin";
    # option SWITCH.firmware-md5 "162c2e4d30e5713cctf05a7e0d8337dbd";
    # option SWITCH.configuration-file-name "3W0503A3C4 bin";
    # option SWITCH.configuration-md5 "ef300313a1d0d605afc7286f25f09684";
    option SWITCH.option 1;
}
```

## ● Restart DHCP service

The screenshot shows the DHCP service being restarted. The `dhcpd` command is executed, followed by `killall dhcpd` to stop the existing service. The output shows the DHCP server version 4.1.1-P1 and various warnings and status messages.

```
[root@localhost ~]# dhcpd
Internet Systems Consortium DHCP Server 4.1.1-P1
Copyright 2004-2010 Internet Systems Consortium.
All rights reserved.
For info, please visit https://www.isc.org/software/dhcp/
WARNING: Host declarations are global. They are not limited to the scope you
clared them in.
Not searching LDAP since ldap-server, ldap-port and ldap-base-dn were not sp
ied in the config file
Wrote 0 class decls to leases file.
Wrote 0 deleted host decls to leases file.
Wrote 0 new dynamic host decls to leases file.
Wrote 6 leases to leases file.
Listening on LPF/eth0/00:0c:29:ef:f8:4f/192.168.0.0/24
Sending on LPF/eth0/00:0c:29:ef:f8:4f/192.168.0.0/24
Sending on Socket/fallback/fallback-net
[root@localhost ~]# killall dhcpd
[root@localhost ~]#
```

This screenshot is identical to the previous one, showing the DHCP service being restarted. The `dhcpd` command is executed, followed by `killall dhcpd` to stop the existing service. The output shows the DHCP server version 4.1.1-P1 and various warnings and status messages.

```
[root@localhost ~]# dhcpd
Internet Systems Consortium DHCP Server 4.1.1-P1
Copyright 2004-2010 Internet Systems Consortium.
All rights reserved.
For info, please visit https://www.isc.org/software/dhcp/
WARNING: Host declarations are global. They are not limited to the scope you
clared them in.
Not searching LDAP since ldap-server, ldap-port and ldap-base-dn were not sp
ied in the config file
Wrote 0 class decls to leases file.
Wrote 0 deleted host decls to leases file.
Wrote 0 new dynamic host decls to leases file.
Wrote 6 leases to leases file.
Listening on LPF/eth0/00:0c:29:ef:f8:4f/192.168.0.0/24
Sending on LPF/eth0/00:0c:29:ef:f8:4f/192.168.0.0/24
Sending on Socket/fallback/fallback-net
[root@localhost ~]#
```

Every time when you modify `dhcpd.conf` file, DHCP service must be restarted. Issue “`killall dhcpd`” command to disable DHCP service and then issue “`dhcpd`” command to enable DHCP service.

#### **Step 4. Backup a Configuration File**

Before preparing a configuration file in TFTP/FTP Server, make sure the device generating the configuration file is set to “**Get IP address from DHCP**” assignment. This is because that DHCP Auto-provisioning is running under DHCP mode, so if the configuration file is uploaded by the network type other than DHCP mode, the downloaded configuration file has no chance to be equal to DHCP when provisioning, and it results in MD5 never matching and causing the device to reboot endless.

In order for your Managed Switch to retrieve the correct configuration image in TFTP/FTP Server, please make sure the filename of your configuration file is defined exactly the same as the one specified in in **`dhcpd.conf`**. For example, if the configuration image’s filename specified in `dhcpd.conf` is “`metafile`”, the configuration image filename should be named to “`metafile`” as well.

#### **Step 5. Place a copy of Firmware and Configuration File in TFTP/FTP**

The TFTP/FTP File server should include the following items:


1. Firmware image (This file is provided by the vendor.)
2. Configuration file (This file is generally created by users.)
3. User account for your device (For FTP server only.)



## B. Auto-Provisioning Process

This switching device is setting-free (through auto-upgrade and configuration) and its upgrade procedures are as follows:

1. The ISC DHCP server will recognize the device whenever it sends an IP address request to it, and it will tell the device how to get a new firmware or configuration.
2. The device will compare the firmware and configuration MD5 code form of DHCP option every time when it communicates with DHCP server.
3. If MD5 code is different, the device will then upgrade the firmware or configuration. However, it will not be activated right after.
4. If the Urgency Bit is set, the device will be reset to activate the new firmware or configuration immediately.
5. The device will retry for 3 times if the file is incorrect, and then it gives up until getting another DHCP ACK packet again.

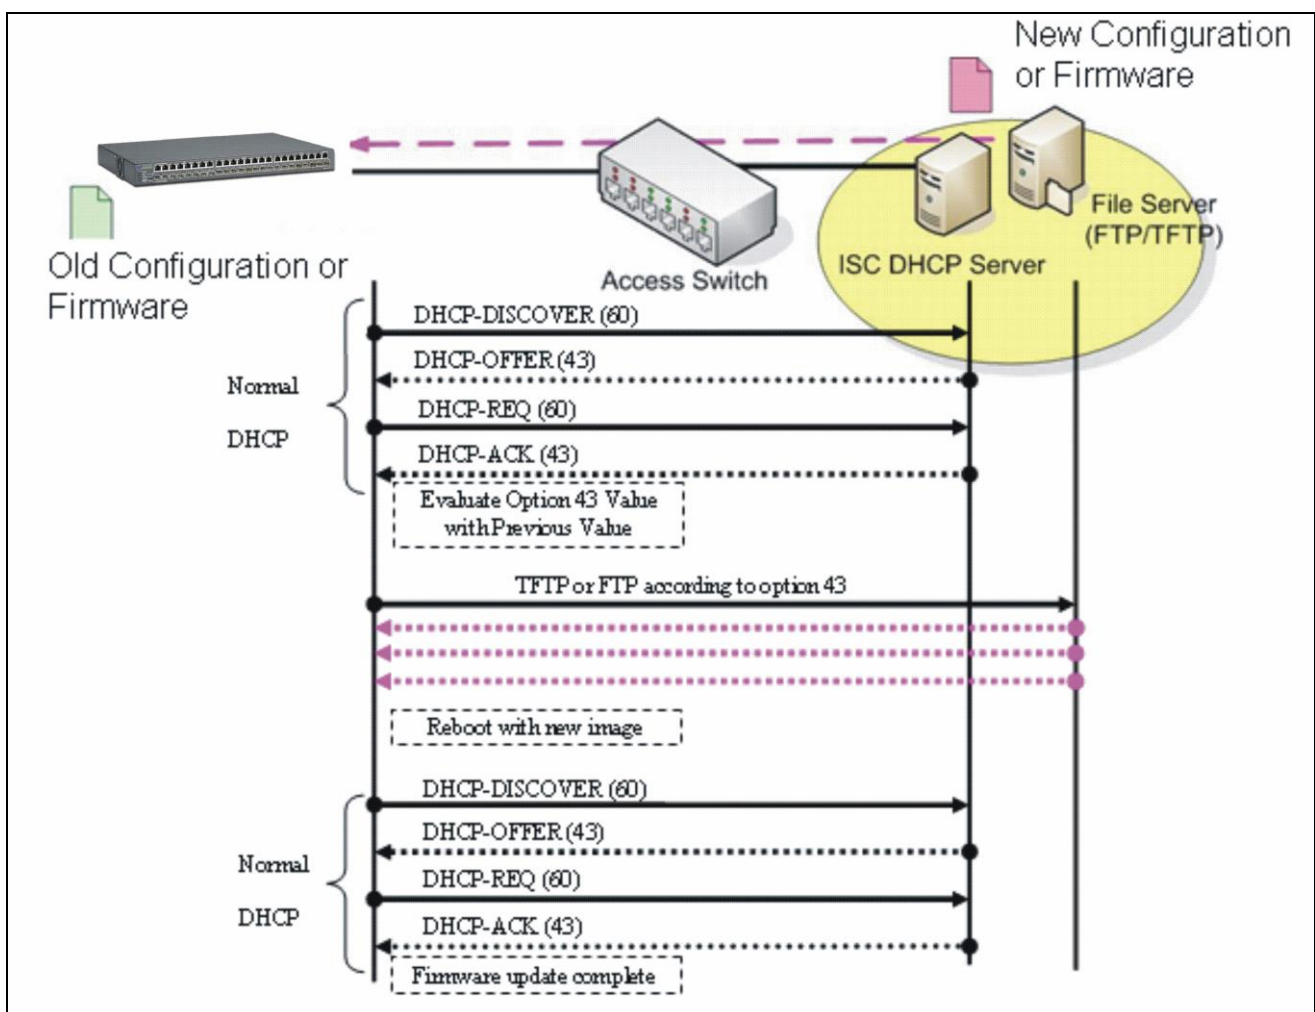

# APPENDIX C: VLAN Application Note

## Overview

A Virtual Local Area Network (VLAN) is a network topology configured according to a logical scheme instead of the physical layout. It can be used to combine any collection of LAN segments into a group that appears as a single LAN so as to logically segment the network into different broadcast domains. All broadcast, multicast, and unknown packets entering the Switch on a particular VLAN will only be forwarded to the stations or ports that are members of that VLAN.

Generally, end nodes that frequently communicate with each other are assigned to the same VLAN, regardless of where they are physically on the network. In this way, the use of VLANs can enhance performance by conserving bandwidth and improve security by limiting traffic to specific domains. Another benefit of VLAN is that you can change the network topology without physically moving stations or changing cable connections. Stations can be 'moved' to another VLAN and thus communicate with its members and share its resources, simply by changing the port VLAN settings from one VLAN to another VLAN. This allows VLAN to accommodate network moves, changes and additions with the utmost flexibility.

The Managed Switch supports Port-based VLAN implementation and IEEE 802.1Q standard tagging mechanism that enables the switch to differentiate frames based on a 12-bit VLAN ID (VID) field. Besides, the Managed Switch also provides double tagging function. The IEEE 802.1Q double tagging VLAN is also referred to Q-in-Q or VLAN stacking (IEEE 802.1ad). Its purpose is to expand the 802.1Q VLAN space by tagging the inner tagged packets. In this way, a "double-tagged" frame is created so as to separate customer traffic within a service provider network. Moreover, the addition of double-tagged space increases the number of available VLAN tags which allow service providers to use a single SP-VLAN (Service Provider VLAN) tag per customer over the Metro Ethernet network.


While this application note can not cover all of the real-life applications that are possible on this Managed Switch, it does provide the most common applications largely deployed in most situations. In particular, this application note provides a couple of network examples to help users implement Port-Based VLAN, Data VLAN, Management VLAN and Double-Tagged VLAN. Step-by-step configuration instructions using CLI and Web Management on setting up these examples are also explained. Examples described below include:

Examples	Configuration Procedures	
I. <a href="#">Port-Based VLAN</a>	<a href="#">CLI</a>	<a href="#">WEB</a>
II. <a href="#">Data VLAN</a>	<a href="#">CLI</a>	<a href="#">WEB</a>
III. <a href="#">Management VLAN</a>	<a href="#">CLI</a>	<a href="#">WEB</a>
IV. <a href="#">Q-in-Q</a>	<a href="#">CLI</a>	<a href="#">WEB</a>

# I. Port-Based VLAN

Port-Based VLAN is uncomplicated in implementation and is useful for network administrators who wish to quickly and easily set up VLANs to isolate the effect of broadcast packets on their network. In the network diagram provided below, the network administrator is required to set up VLANs to separate traffic based on the following design conditions:

- Switch 1 is used in the Marketing Department to provide network connectivity to client PCs or other workstations. Switch 1 also connects to Port 1 in Managed Switch.
- Client PCs in the Marketing Department can access the Server 1 and Public Server.
- Switch 2 is used in the RD Department to provide network connectivity to Client PCs or other workstations. Switch 2 also connects to Port 2 in Managed Switch.
- Client PCs in the RD Department can access the Server 2 and Public Server.
- Client PCs in the Marketing and RD Department can access the Internet.

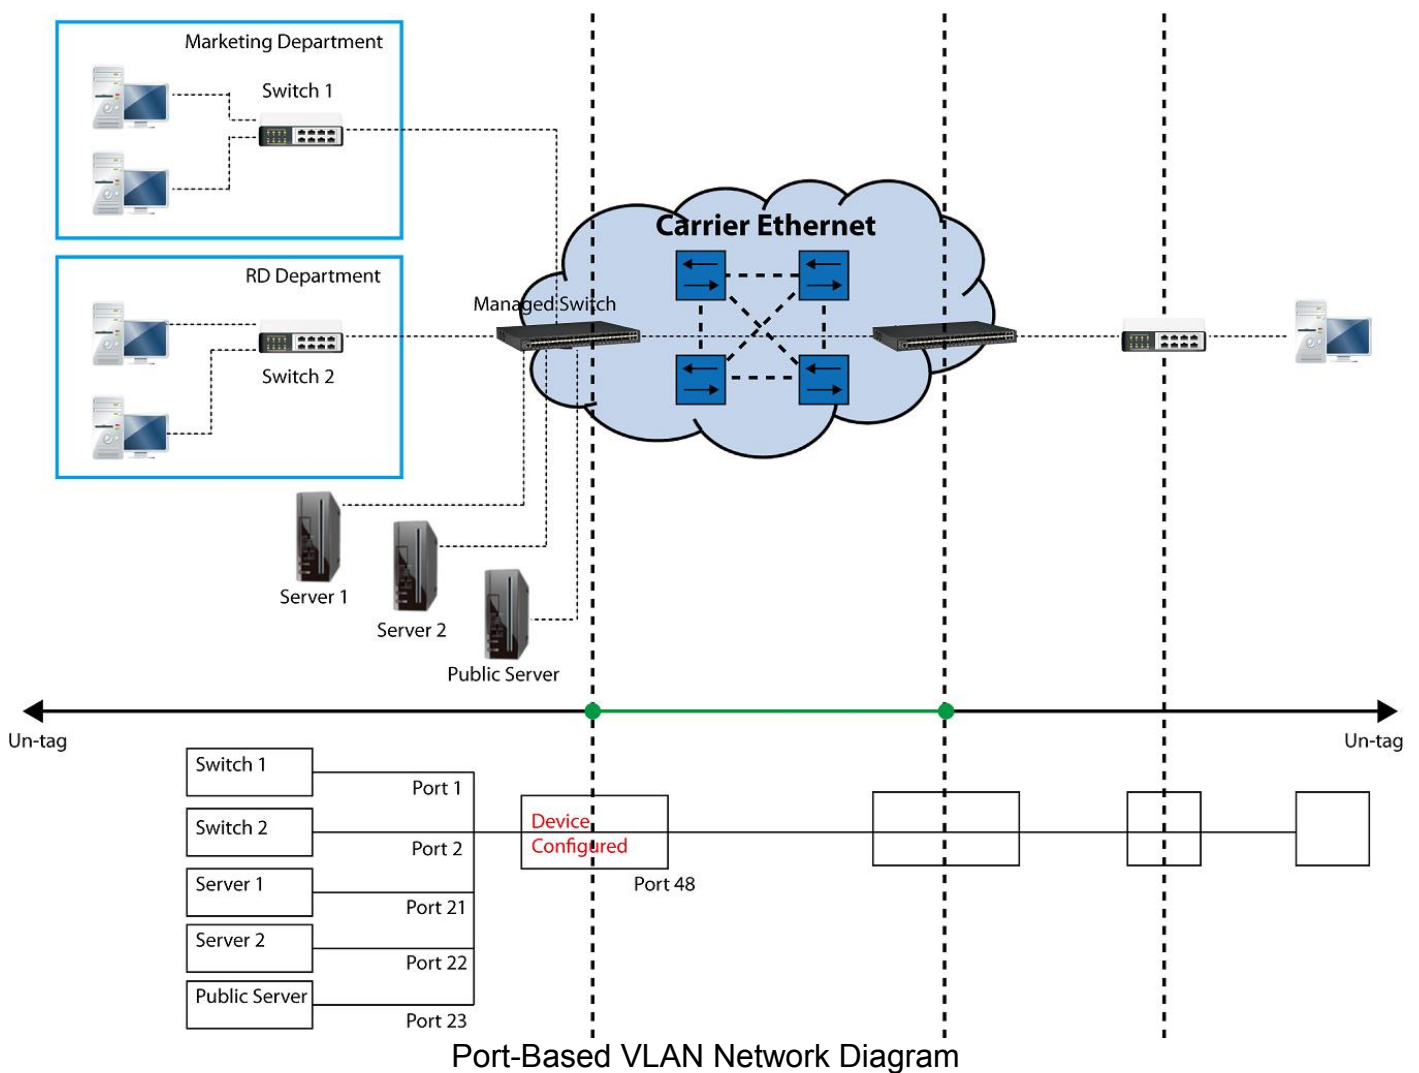

Based on design conditions described above, port-based VLAN assignments can be summarized in the table below.

VLAN Name	Member ports
Marketing	1, 21, 23, 48
RD	2, 22, 23, 48


## CLI Configuration:

Steps...	Commands...								
1. Enter Global Configuration mode.	SWH> enable Password: SWH# config SWH(config)#								
2. Create port-based VLANs "Marketing" and "RD"	SWH(config)# vlan port-based Marketing OK ! SWH(config)# vlan port-based RD OK !								
3. Select port 1, 21, 23 and 48 to configure.	SWH(config)# interface 1,21,23,48 SWH(config-if-1,21,23,48)#								
4. Assign the ports to the port-based VLAN "Marketing".	SWH(config-if-1,21,23,48)# vlan port-based Marketing OK !								
5. Return to Global Configuration mode, and select port 2, 22, 23 and 48 to configure.	SWH(config-if-1,21,23,48)# exit SWH(config)# interface 2,22,23,48 SWH(config-if-2,22,23,48)#								
6. Assign the ports to the port-based VLAN "RD".	SWH(config-if-2,22,23,48)# vlan port-based RD OK !								
7. Return to Global Configuration mode, and show currently configured port-based VLAN membership.	SWH(config-if-2,22,23,48)# exit SWH(config)# show vlan port-based When you enable Port Isolation, Port Based VLAN is automatically invalid. =====								
	Port Based VLAN : =====								
	<table> <thead> <tr> <th>Name</th><th>Port Member</th></tr> </thead> <tbody> <tr> <td>Default_VLAN</td><td>1-48,CPU</td></tr> <tr> <td>Marketing</td><td>1,21,23,48</td></tr> <tr> <td>RD</td><td>2,22,23,48</td></tr> </tbody> </table>	Name	Port Member	Default_VLAN	1-48,CPU	Marketing	1,21,23,48	RD	2,22,23,48
Name	Port Member								
Default_VLAN	1-48,CPU								
Marketing	1,21,23,48								
RD	2,22,23,48								
	<i>Note: By default, all ports are member ports of the Default_VLAN. Before removing the Default_VLAN from the VLAN table, make sure you have correct management VLAN and VLAN mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.</i>								

## Web Management Configuration:


### 1. Select "Configure VLAN" option in Port Based VLAN menu.

Switch Management>VLAN Configuration>Port Based VLAN>Configure VLAN

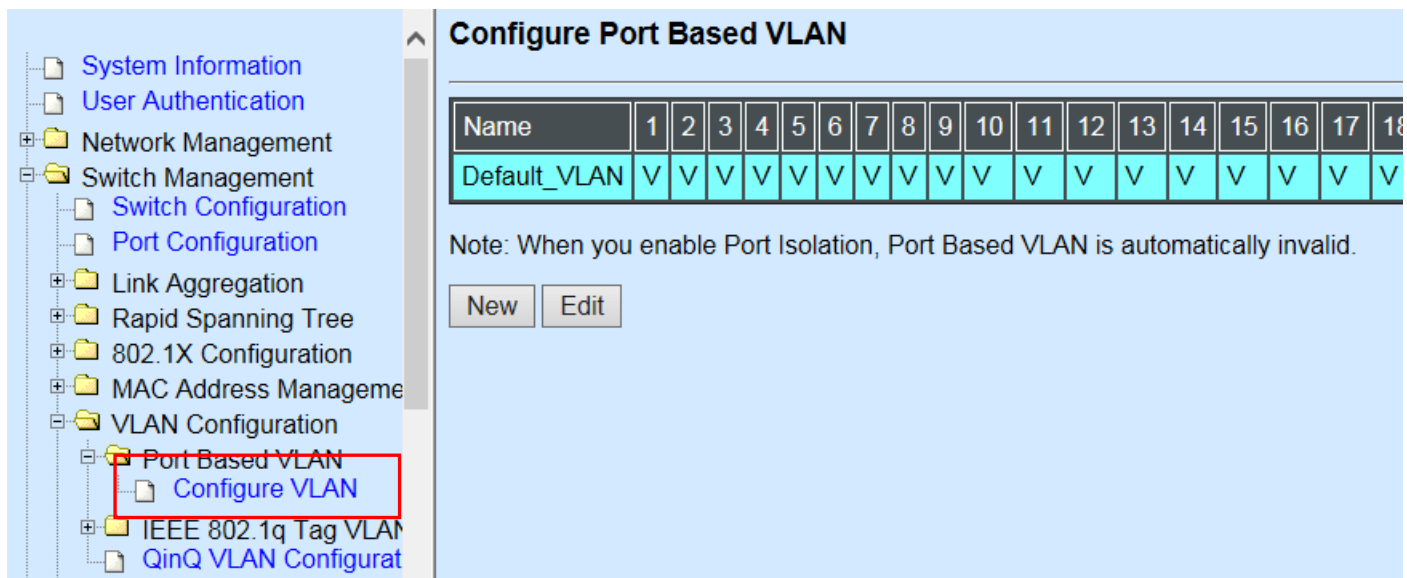

**2. Click “New” to add a new Port-Based VLAN**

Switch Management>VLAN Configuration>Port Based VLAN>Configure VLAN

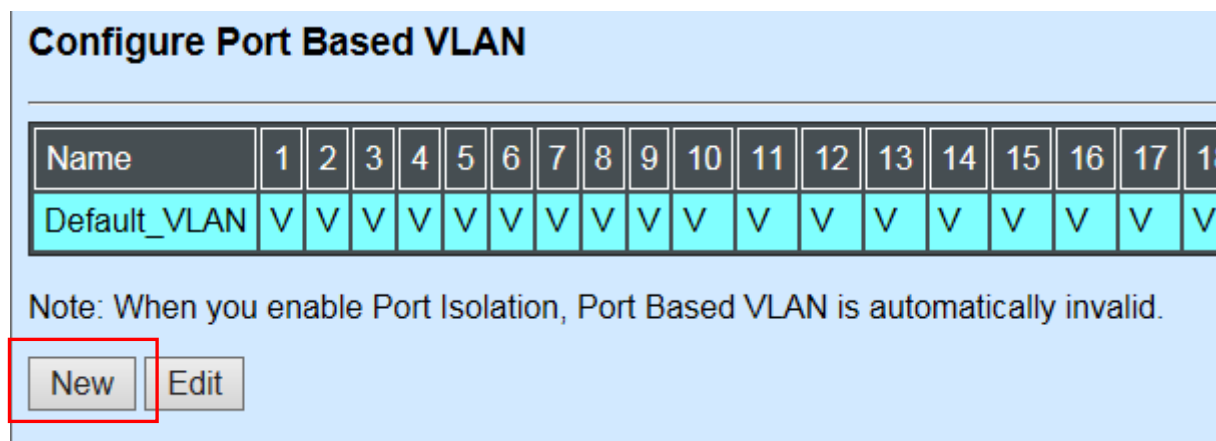

**3. Add Port 1, 21, 23 and 48 in a group and name it to “Marketing”.**

Switch Management>VLAN Configuration>Port Based VLAN>Configure VLAN

### Configure Port Based VLAN

Current/Total/Max	2/ 1/48																							
Name	Marketing																							
Port Number	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	CPU																							
	<input type="checkbox"/>																							

OK

Click “OK” to apply the settings.

#### 4. Click “New” to add a new Port-Based VLAN

Switch Management>VLAN Configuration>Port Based VLAN>Configure VLAN

### Configure Port Based VLAN

Name	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
Default_VLAN	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	
Marketing	V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	V	-	V	-	-	-	-	-	-	

Note: When you enable Port Isolation, Port Based VLAN is automatically invalid.

New Edit Delete

**5. Add Port 2, 22, 23 and 48 in a group and name it to “RD”.**

Switch Management>VLAN Configuration>Port Based VLAN>Configure VLAN

**Configure Port Based VLAN**

Current/Total/Max: 3/2/48

Name:

Port Number:

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
25	26	27	28	29	30	31	32
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
33	34	35	36	37	38	39	40
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
41	42	43	44	45	46	47	48
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

CPU: ☒

OK

Click “OK” to apply the settings.

**6. Check Port-Based VLAN settings.**

Switch Management>VLAN Configuration>Port Based VLAN>Configure VLAN

Configure Port Based VLAN

Name	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	CPU
Default_VLAN	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	
Marketing	V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	V	-	V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	V	-			
RD	-	V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	V	V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	V	-			

Note: When you enable Port Isolation, Port Based VLAN is automatically invalid.

New

Edit

Delete

**NOTE:** By default, all ports are member ports of the Default\_VLAN. Before removing the Default\_VLAN from the VLAN table, make sure you have correct management VLAN and VLAN mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.

**Treatments of packets:**

**1. A untagged packet arrives at Port 1**

Untagged packets received on the Managed Switch will be forwarded out untagged. Therefore, in this example, the Managed Switch will look at the Port-Based forwarding table for Port 1 and forward untagged packets to member port 21, 23, and 48.

## **2. A untagged packet arrives at Port 2**

Untagged packets received on the Managed Switch will be forwarded out untagged. Therefore, in this example, the Managed Switch will look at the Port-Based forwarding table for Port 2 and forward untagged packets to member port 22, 23, and 48.

## **3. A tagged packet with any permissible VID arrives at Port 1**

Tagged packets received on the Managed Switch will be forwarded out tagged. Therefore, in this example, the Managed Switch will look at the Port-Based forwarding table for Port 1 and forward tagged packets to member port 21, 23, and 48.

## **4. A tagged packet with any permissible VID arrives at Port 2**


Tagged packets received on the Managed Switch will be forwarded out tagged. Therefore, in this example, the Managed Switch will look at the Port-Based forwarding table for Port 2 and forward tagged packets to member port 22, 23, and 48.



## II. Data VLAN

In networking environment, VLANs can carry various types of network traffic. The most common network traffic carried in a VLAN could be voice-based traffic, management traffic and data traffic. In practice, it is common to separate voice and management traffic from data traffic such as files, emails. Data traffic only carries user-generated traffic which is sometimes referred to a user VLAN and usually untagged when received on the Managed Switch.

In the network diagram provided, it depicts a data VLAN network where PC1 wants to ping PC2 in a remote network. Thus, it sends out untagged packets to the Managed Switch to be routed in Carrier Ethernet. For this example, IEEE 802.1Q tagging mechanism can be used to forward data from the Managed Switch to the destination PC.

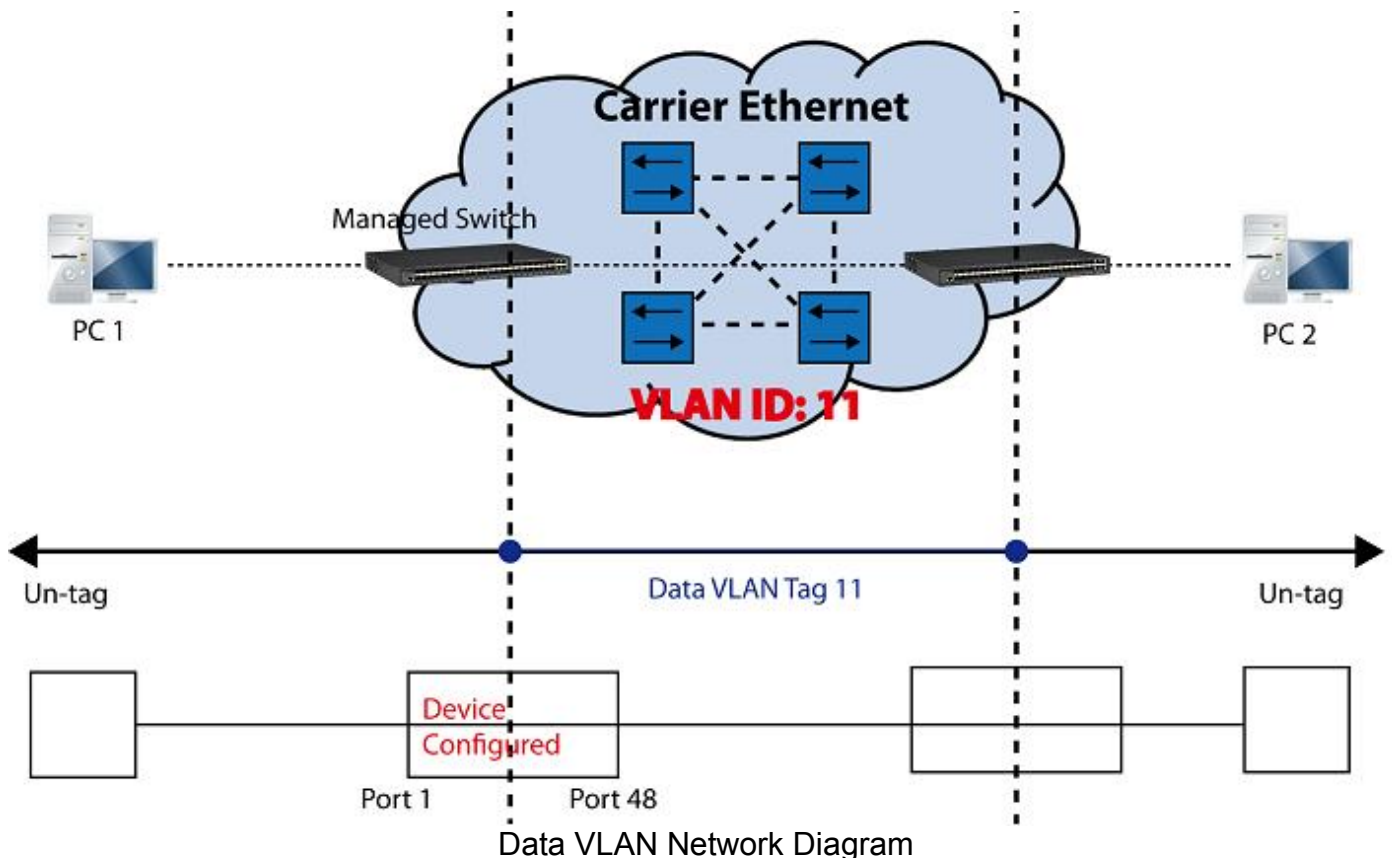

### CLI Configuration:

Steps...	Commands...
1. Enter Global Configuration mode.	SWH> enable Password: SWH# config SWH(config)#
2. Create VLAN 11 and assign Port 1 and Port 48 to VLAN 11.	SWH(config)# interface 1,48 SWH(config-if-1,48)# vlan dot1q-vlan trunk-vlan 11 OK ! SWH(config-vlan-11)# exit
3. Name VLAN 11 to DataVLAN.	SWH(config)# vlan dot1q-vlan 11 SWH(config-vlan-11)# name DataVLAN OK ! SWH(config-vlan-11)# exit
4. Show currently configured dot1q VLAN membership.	FOS-3148-1A(config)# show vlan dot1q-vlan trunk-vlan =====

	<pre>CPU VLAN ID      : 1 Management Priority : 0 VLAN Name        VLAN  1      8      41      48 CPU ----- Default_VLAN     1  VVVVVVVV ... VVVVVVVV  V DataVLAN         11  V-----  -----V  -</pre> <p><i>NOTE: By default, all ports are member ports of the Default_VLAN. Before removing the Default_VLAN from the VLAN table, make sure you have correct management VLAN and VLAN mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.</i></p>																																																												
5. Set Port 48 to trunk mode.	<pre>SWH(config)# interface 48 SWH(config-if-48)# vlan dot1q-vlan mode trunk OK ! SWH(config-if-48)# exit</pre>																																																												
6. Change Port 1's Access VLAN to "11".	<pre>SWH(config)# interface 1 SWH(config-if-1)# vlan dot1q-vlan access-vlan 11 OK ! SWH(config-if-1)# exit</pre>																																																												
7. Show currently configured VLAN tag settings.	<pre>SWH(config)# show vlan interface ===== IEEE 802.1q Tag VLAN Interface : =====</pre> <table><thead><tr><th>Port</th><th>Access-vlan</th><th>User Priority</th><th>Port</th><th>VLAN Mode</th><th>Trunk-vlan</th></tr></thead><tbody><tr><td>1</td><td>11</td><td></td><td>0</td><td>access</td><td>1,11</td></tr><tr><td>2</td><td>1</td><td></td><td>0</td><td>access</td><td>1</td></tr><tr><td>3</td><td>1</td><td></td><td>0</td><td>access</td><td>1</td></tr><tr><td></td><td></td><td>.</td><td></td><td></td><td></td></tr><tr><td></td><td></td><td>.</td><td></td><td></td><td></td></tr><tr><td>45</td><td>1</td><td></td><td>0</td><td>access</td><td>1</td></tr><tr><td>46</td><td>1</td><td></td><td>0</td><td>access</td><td>1</td></tr><tr><td>47</td><td>1</td><td></td><td>0</td><td>access</td><td>1</td></tr><tr><td>48</td><td>1</td><td></td><td>0</td><td>trunk</td><td>1,11</td></tr></tbody></table>	Port	Access-vlan	User Priority	Port	VLAN Mode	Trunk-vlan	1	11		0	access	1,11	2	1		0	access	1	3	1		0	access	1			.						.				45	1		0	access	1	46	1		0	access	1	47	1		0	access	1	48	1		0	trunk	1,11
Port	Access-vlan	User Priority	Port	VLAN Mode	Trunk-vlan																																																								
1	11		0	access	1,11																																																								
2	1		0	access	1																																																								
3	1		0	access	1																																																								
		.																																																											
		.																																																											
45	1		0	access	1																																																								
46	1		0	access	1																																																								
47	1		0	access	1																																																								
48	1		0	trunk	1,11																																																								

## Web Management Configuration:

### 1. Select "VLAN Interface" option in IEEE 802.1Q Tag VLAN menu.

Switch Management>VLAN Configuration>IEEE 802.1q Tag VLAN>VLAN Interface

- System Information
- User Authentication
- Network Management
- Switch Management
  - Switch Configuration
  - Port Configuration
  - Link Aggregation
  - Rapid Spanning Tree
  - 802.1X Configuration
  - MAC Address Management
  - VLAN Configuration
    - Port Based VLAN
      - Configure VLAN
    - IEEE 802.1q Tag VLAN
      - Trunk VLAN table
      - VLAN Interface**
      - Management VLAN
      - QinQ VLAN Configuration

#### VLAN Interface

Port	Mode	Access-vlan	Trunk-vlan
Port1	ACCESS	1	1
Port2	ACCESS	1	1
Port3	ACCESS	1	1
Port4	ACCESS	1	1
Port5	ACCESS	1	1
Port6	ACCESS	1	1
Port7	ACCESS	1	1
Port8	ACCESS	1	1
Port9	ACCESS	1	1
Port10	ACCESS	1	1

2. **Create a new Data VLAN 11 that includes Port 1 and Port 48 as members.**  
Switch Management>VLAN Configuration>IEEE 802.1q Tag VLAN>VLAN Interface

### VLAN Interface

Port	Mode	Access-vlan	Trunk-vlan
Port1	ACCESS	1	1,11
Port2	ACCESS	1	1
Port3	ACCESS	1	1
Port4	ACCESS	1	1
Port5	ACCESS	1	1
Port6	ACCESS	1	1
Port7	ACCESS	1	1
Port8	ACCESS	1	1
Port9	ACCESS	1	1
Port10	ACCESS	1	1
Port11	ACCESS	1	1
Port12	ACCESS	1	1
Port13	ACCESS	1	1
Port14	ACCESS	1	1
Port15	ACCESS	1	1
Port16	ACCESS	1	1
Port17	ACCESS	1	1
Port18	ACCESS	1	1
Port19	ACCESS	1	1
Port20	ACCESS	1	1
Port21	ACCESS	1	1
Port22	ACCESS	1	1
Port23	ACCESS	1	1
Port24	ACCESS	1	1
Port25	ACCESS	1	1
Port26	ACCESS	1	1
Port27	ACCESS	1	1
Port28	ACCESS	1	1
Port29	ACCESS	1	1
Port30	ACCESS	1	1
Port31	ACCESS	1	1
Port32	ACCESS	1	1
Port33	ACCESS	1	1
Port34	ACCESS	1	1
Port35	ACCESS	1	1
Port36	ACCESS	1	1
Port37	ACCESS	1	1
Port38	ACCESS	1	1
Port39	ACCESS	1	1
Port40	ACCESS	1	1
Port41	ACCESS	1	1
Port42	ACCESS	1	1
Port43	ACCESS	1	1
Port44	ACCESS	1	1
Port45	ACCESS	1	1
Port46	ACCESS	1	1
Port47	ACCESS	1	1
Port48	ACCESS	1	1,11

OK

Click "OK" to apply the settings.

3. **Edit a name for new Trunk VLAN 11 that includes Port 1 and 48 as member ports.**  
Switch Management>VLAN Configuration>IEEE 802.1q Tag VLAN>Trunk VLAN table

- System Information
- User Authentication
- Network Management
- Switch Management
  - Switch Configuration
  - Port Configuration
  - Link Aggregation
  - Rapid Spanning Tree
  - 802.1X Configuration
  - MAC Address Management
  - VLAN Configuration
    - Port Based VLAN
      - Configure VLAN
    - IEEE 802.1q Tag VLAN
      - Trunk VLAN table
      - VLAN interface
      - Management VLAN
      - QinQ VLAN Configuration

Trunk VLAN table

VLAN Name	VID	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	CPU	
Default_VLAN	1	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
	11	V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	V	-	

**Edit**

When CPU VLAN is changed, the port VLAN ID of all member ports in the new CPU VLAN will be changed to CPU's VID.

Click “Edit”, the following screen shows up. The VLAN Name is only the editable item.

### Configure VLAN

Current/Total/Max VLANs	2/ 2/2048							
VLAN ID	11 (1-4094)							
VLAN Name	DataVLAN							
Port Number	1	2	3	4	5	6	7	8
VLAN Members	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	9	10	11	12	13	14	15	16
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	17	18	19	20	21	22	23	24
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	25	26	27	28	29	30	31	32
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	33	34	35	36	37	38	39	40
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	41	42	43	44	45	46	47	48
VLAN Members	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Port Number	CPU							
VLAN Members	<input type="checkbox"/>							

**OK**

Click “OK” to apply the settings.

#### 4. Check Trunk VLAN 11 settings.

Switch Management>VLAN Configuration>IEEE 802.1q Tag VLAN>Trunk VLAN table

- System Information
- User Authentication
- Network Management
- Switch Management
  - Switch Configuration
  - Port Configuration
  - Link Aggregation
  - Rapid Spanning Tree
  - 802.1X Configuration
  - MAC Address Management
  - VLAN Configuration
    - Port Based VLAN
      - Configure VLAN
    - IEEE 802.1q Tag VLAN
      - Trunk VLAN table
      - VLAN interface
      - Management VLAN
      - QinQ VLAN Configuration

Trunk VLAN table

VLAN Name	VID	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	CPU
Default_VLAN	1	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
DataVLAN	11	V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	V	-		

**Edit**

When CPU VLAN is changed, the port VLAN ID of all member ports in the new CPU VLAN will be changed to CPU's VID.

VLAN Name	VID	1	2	3
Default_VLAN	1	V	V	V
DataVLAN	11	V	-	-

	45	46	47	48	CPU
	V	V	V	V	V
	-	-	V	-	-

## 5. Change Port 1's Access VLAN to 11, and set Port 48 to trunk mode.

Switch Management>VLAN Configuration>IEEE 802.1q Tag VLAN> VLAN Interface

### VLAN Interface

Port	Mode	Access-vlan	Trunk-vlan
Port1	ACCESS	11	1,11
Port2	ACCESS	1	1
Port3	ACCESS	1	1

Port46	ACCESS	1	1
Port47	ACCESS	1	1
Port48	TRUNK	1	1,11

OK

Click "OK" to apply the settings.

### Treatments of Packets:

#### 1. A untagged packet arrives at Port 1

When an untagged packet arrives at Port 1, port 1's Port VLAN ID (11) will be added to the original port. Because port 48 is set as a trunk port, it will forward the packet with tag 11 out to the Carrier Ethernet.

#### 2. A tagged packet arrives at Port 1

In most situations, data VLAN will receive untagged packets sent from the client PC or workstation. If tagged packets are received (possibly sent by malicious attackers), they will be dropped.


### III. Management VLAN

For security and performance reasons, it is best to separate user traffic and management traffic. When Management VLAN is set up, only a host or hosts that is/are in this Management VLAN can manage the device; thus, broadcasts that the device receives or traffic (e.g. multicast) directed to the management port will be minimized.

#### Web Management Configuration (Access Mode):

Supposed that we have the default Management VLAN whose VLAN ID is 1 for all ports, we can create new Management VLANs as required. This example is to demonstrate how to set up Management VLAN from 15 to 20 on specified ports under Access mode.

In **Management VLAN Network Diagram**, the management PC on the right would like to manage the Managed Switch on the left directly. You can follow the steps described below to set up the Management VLAN.

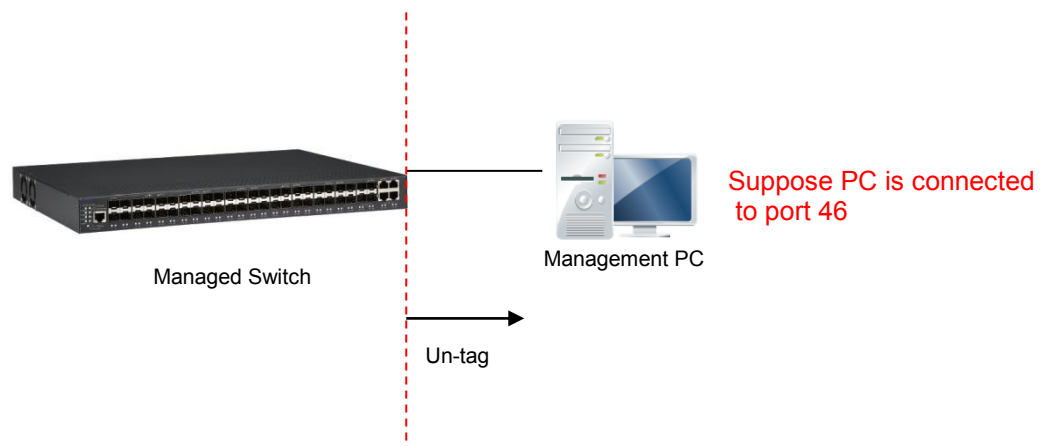

Management VLAN Network Diagram

1. Change the Management default VLAN 1 into VLAN 15 that includes Port 45, 46, 47 and 48 under Access mode.

Management VLAN

Management VLAN

CPU VLAN ID

15

VLAN Mode

Access

Management Port

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28	29	30	31	32
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
33	34	35	36	37	38	39	40
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
41	42	43	44	45	46	47	48
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

OK

Cancel

Click “OK” to apply the settings.

---

**Note1:** Make sure you have correct management VLAN and VLAN Mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you click “OK” to apply.

---

---

**Note2:** After clicking “OK”, the checked boxes will soon be emptied because this Management VLAN is for configuration only. To check the current status of Management VLAN, please refer to **IEEE 802.1q Tag VLAN Table or VLAN Interface**.

---

[illegible]

4	45	46	47	48	CPU
-	-	-	-	-	
V	V	V	V	V	

Port	Mode	VLAN ID	PVID
Port38	ACCESS	1	1
Port39	ACCESS	1	1
Port40	ACCESS	1	1
Port41	ACCESS	1	1
Port42	ACCESS	1	1
Port43	ACCESS	1	1
Port44	ACCESS	1	1
Port45	ACCESS	15	1
Port46	ACCESS	15	1
Port47	ACCESS	15	1
Port48	ACCESS	15	1



2. Now, change the Management VLAN 15 into VLAN 20 and includes Port 45, 46 and 47 under Access mode (It's necessary to include Port 46 to prevent the disconnection.)

**Management VLAN**

CPU VLAN ID	20
VLAN Mode	Access

**Management Port**

1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28	29	30	31	32
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
33	34	35	36	37	38	39	40
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
41	42	43	44	45	46	47	48
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

OK Cancel

Click "OK" to apply the settings.

---

**Note:** To check the current status of Management VLAN, please refer to **IEEE 802.1q Tag VLAN Table or VLAN Interface**.

---

IEEE 802.1q Tag VLAN Table

VLAN Name	VID	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	CPU
Default_VLAN	1	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	
Access-0015	15	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Access-0020	20	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	

VLAN Name | VID | 1

Default_VLAN	1	V
Access-0015	15	-
Access-0020	20	-

4 | 45 | 46 | 47 | 48 | CPU

-	-	-	-	-
-	-	-	V	-
V	V	V	-	V

System Information  
User Authentication  
Network Management  
Switch Management  
Switch Configuration  
Port Configuration  
Link Aggregation  
Rapid Spanning Tree  
802.1X Configuration  
MAC Address Management  
VLAN Configuration  
Port Based VLAN  
IEEE 802.1q Tag VLAN  
Trunk VLAN table  
VLAN Interface  
Management VLAN  
QinQ VLAN Configuration  
QoS Configuration  
IGMP/MLD Snooping  
Static Multicast Configuration  
Port Mirroring  
Security Configuration  
ACL Configuration  
LLDP Configuration  
Loop Detection  
Switch Monitor  
CPU & Memory Statistics  
Switch Port Status  
Port Traffic Statistics  
Port Packet Error Statistics  
Port Packet Analysis Statistics  
LACP Monitor  
RSTP Monitor  
802.1X Monitor  
IGMP/MLD Monitor  
SFP Information  
DHCP Snooping  
MAC Address Table  
LLDP Status  
Loop Detection Status  
IEEE 802.1q Tag VLAN T


System Information  
User Authentication  
Network Management  
Switch Management  
Switch Configuration  
Port Configuration  
Link Aggregation  
Rapid Spanning Tree  
802.1X Configuration  
MAC Address Management  
VLAN Configuration  
Port Based VLAN  
IEEE 802.1q Tag VLAN  
Trunk VLAN table  
VLAN Interface  
Management VLAN  
QinQ VLAN Configuration  
QoS Configuration

Port38	ACCESS	1	1
Port39	ACCESS	1	1
Port40	ACCESS	1	1
Port41	ACCESS	1	1
Port42	ACCESS	1	1
Port43	ACCESS	1	1
Port44	ACCESS	1	1
Port45	ACCESS	20	1
Port46	ACCESS	20	1
Port47	ACCESS	20	1
Port48	ACCESS	15	1

OK

## Web Management Configuration (Trunk Mode):

In **Management VLAN Network Diagram** shown below, the management PC on the right would like to manage the Managed Switch on the left remotely. You can follow the steps described below to set up the Management VLAN.

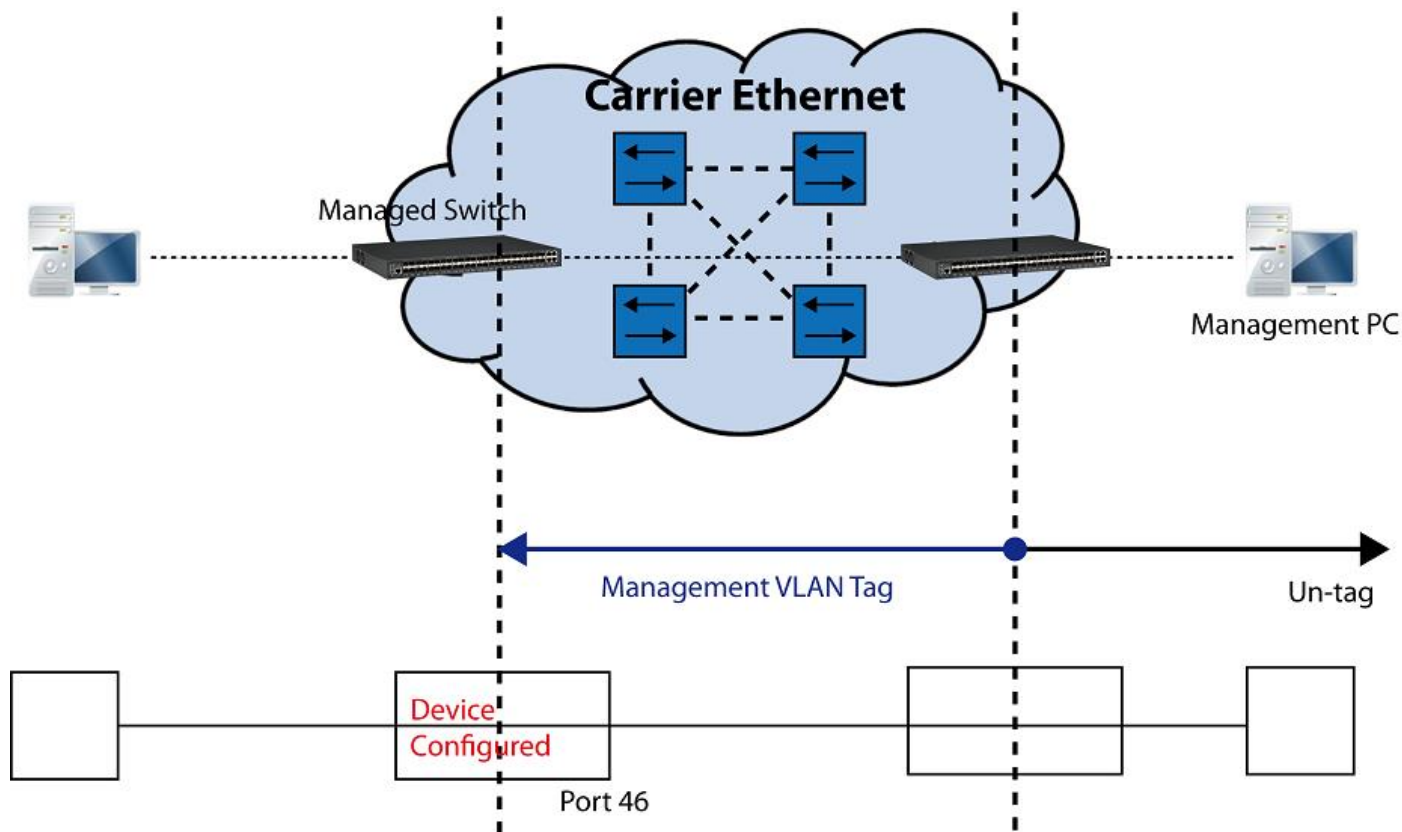

Management VLAN Network Diagram


Supposed that the Management PC is remotely connected to Managed Switch Port 46 as shown above while we have a various of existing trunk vlan and the Management VLAN 15 is set on Port 45,46,47,48 and CPU as shown below. We can create new Management VLAN 20 as required. This part is to demonstrate how to set up from Management VLAN 15 to VLAN 20 on specified ports under Trunk mode.

IEEE 802.1q Tag VLAN Table

VLAN Name	VID	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	CPU
Default_VLAN	1	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V		
	13	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
	14	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
	15	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
	16	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
	17	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
	18	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
	19	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		

IEEE 802.1q Tag VLAN Table

1. Change the Management VLAN 15 into VLAN 20 that includes Port 45, 46, 47 under Trunk mode.

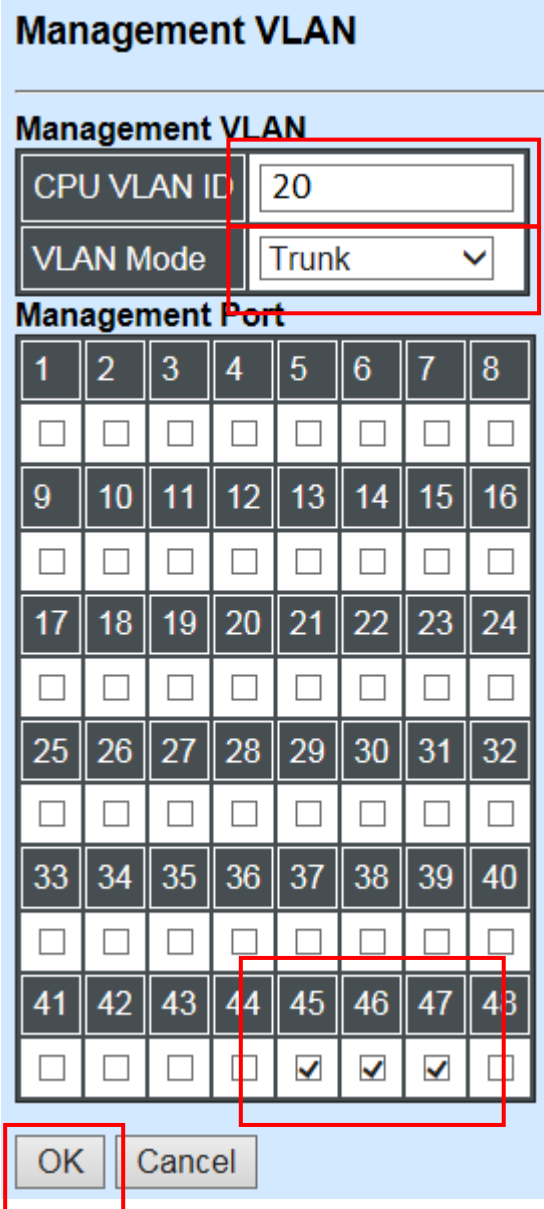

The image shows a 'Management VLAN' configuration window. It has a title bar 'Management VLAN'. Below the title bar, there are two sections. The first section is 'Management VLAN' and contains two fields: 'CPU VLAN ID' with the value '20' and 'VLAN Mode' with a dropdown menu set to 'Trunk'. The second section is 'Management Port' and contains a grid of 48 ports, arranged in 6 rows and 8 columns. The ports are numbered 1 through 48. The ports 45, 46, and 47 are checked. At the bottom of the window, there are two buttons: 'OK' and 'Cancel'. Red boxes highlight the 'CPU VLAN ID' field, the 'VLAN Mode' dropdown, the 'Management Port' grid, and the 'OK' button.

Management VLAN							
Management VLAN							
CPU VLAN ID	20						
VLAN Mode	Trunk ▼						
Management Port							
1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
25	26	27	28	29	30	31	32
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
33	34	35	36	37	38	39	40
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
41	42	43	44	45	46	47	48
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
OK Cancel							

Click “OK” to apply the settings.

---

**Note1:** Make sure you have correct management VLAN and VLAN Mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you click “OK” to apply.

---

---

**Note2:** After clicking “OK”, the checked boxes will soon be emptied because this Management VLAN is for configuration only.  
To check the current status of Management VLAN, please refer to **IEEE 802.1q Tag VLAN Table or VLAN Interface**.

---

Then, Management VLAN is changing to VLAN 20.

IEEE 802.1q Tag VLAN Table

VLAN Name	VID	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	CPU	
Default_VLAN	1	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V			
	13	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
	14	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-		
	15	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
	16	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
	17	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
	18	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
	19	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
	20	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

IEEE 802.1q Tag VLAN Table

Port37	ACCESS	1	1
Port38	ACCESS	1	1
Port39	ACCESS	1	1
Port40	ACCESS	1	1
Port41	ACCESS	1	1
Port42	ACCESS	1	1
Port43	ACCESS	1	1
Port44	ACCESS	1	1
Port45	TRUNK	1	14-20
Port46	TRUNK	1	15-20
Port47	TRUNK	1	15-20
Port48	TRUNK	1	13-19

VLAN Interface

### CLI Configuration(Access Mode):

Supposed that we have the default Management VLAN whose VLAN ID is 1 for all ports, we can create new Management VLANs as required. This example is to demonstrate how to set up Management VLAN 15 and then change VLAN 15 into VLAN 20 on specified ports under Access mode.

1. Change the Management default VLAN 1 into VLAN 15 that includes Port 45, 46, 47 and 48 under Access mode.

Steps...	Commands...
1. Enter Global Configuration mode.	Switch> enable Password: Switch# configure Switch(config)#
2. Assign VLAN 15 to Management VLAN and Port 45-48 to Management port.	Switch(config)# vlan management-vlan 15 management-port 45-48 mode access OK !  <b>NOTE:</b> Make sure you have correct management VLAN and VLAN mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.
3. Show currently configured dot1q settings and check CPU has been a member port in Management VLAN 15.	Switch(config)# show vlan dot1q-vlan tag-vlan =====
	Configure Trunk VLAN : =====
	CPU VLAN ID : 15
	Management Priority : 0
	VLAN Name            VLAN    1            8            41            48 CPU
	-----
	Default_VLAN            1    VVVVVVVV    ....    VVVVVVVV    -
	Access-0015            15    -----            ----VVVV    V

2. Now, change the Management VLAN 15 into VLAN 20 and includes Port 45, 46 and 47 to Access mode (It's necessary to include Port 46 to prevent the disconnection.)

Steps...	Commands...
1. Enter Global Configuration mode.	Switch> enable Password: Switch# configure Switch(config)#
2. Assign VLAN 20 to Management VLAN and Port 45-47 to Management port.	Switch(config)# vlan management-vlan 20 management-port 45-47 mode access OK !  <b>NOTE:</b> Make sure you have correct management VLAN and VLAN mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.
3. Show currently configured dot1q settings and check CPU has been a member port in Management VLAN 15 & 20.	Switch(config)# show vlan dot1q-vlan tag-vlan =====
	Configure Trunk VLAN : =====
	CPU VLAN ID : 20
	Management Priority : 0
	VLAN Name            VLAN    1            8            41            48 CPU
	-----
	Default_VLAN            1    VVVVVVVV    ....    VVVVVVVV    -
	Access-0015            15    -----            -----V    -
	Access-0020            20    -----            ----VVV-    V

## CLI Configuration(Trunk Mode):


This part is to demonstrate how to change Management VLAN 15 into VLAN 20 on specified ports under Trunk mode. Supposed that we have the existing Management VLAN 15 on Port 45,46,47,48 and CPU, we can create new Management VLAN 20 as required.

### 1. Change the Management VLAN 15 into VLAN 20 that includes Port 45, 46, 47 under Trunk mode.

Steps...	Commands...
1. Enter Global Configuration mode.	Switch> enable Password: Switch# configure Switch(config)#
2. Assign VLAN 20 to Management VLAN and Port 45-47 to Management port.	Switch(config)# vlan management-vlan 20 management-port 45-47 mode trunk OK !  <b>NOTE:</b> Make sure you have correct management VLAN and VLAN mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.
3. Show currently configured dot1q settings and check CPU has been a member port in Management VLAN 20.	Switch(config)# show vlan dot1q-vlan tag-vlan =====
	Configure Trunk VLAN : =====
	CPU VLAN ID : 20
	Management Priority : 0
	VLAN Name            VLAN    1            8            41            48            CPU
	-----
	Default_VLAN        1    VVVVVVVV    ....    VVVV----    -
	13    -----V    -
	14    -----V--V    -
	15    -----VVVV    -
	16    -----VVVV    -
	17    -----VVVV    -
	18    -----VVVV    -
	19    -----VVVV    -
	20    -----VVV-    V

## IV. Q-in-Q

The IEEE 802.1Q double tagging VLAN is also referred to Q-in-Q or VLAN stacking (IEEE 802.1ad). Its purpose is to expand the 802.1q VLAN space by tagging the inner tagged packets. In this way, a “double-tagged” frame is created so as to separate customer traffic within a service provider network. As shown below, the network diagram depicts the Switch A (on the left) carries a Customer tag 12. When tagged packets are received on the Managed Switch, they should be tagged with an outer Service Provider tag 15. To set up the network as provided, you can follow the steps described below.

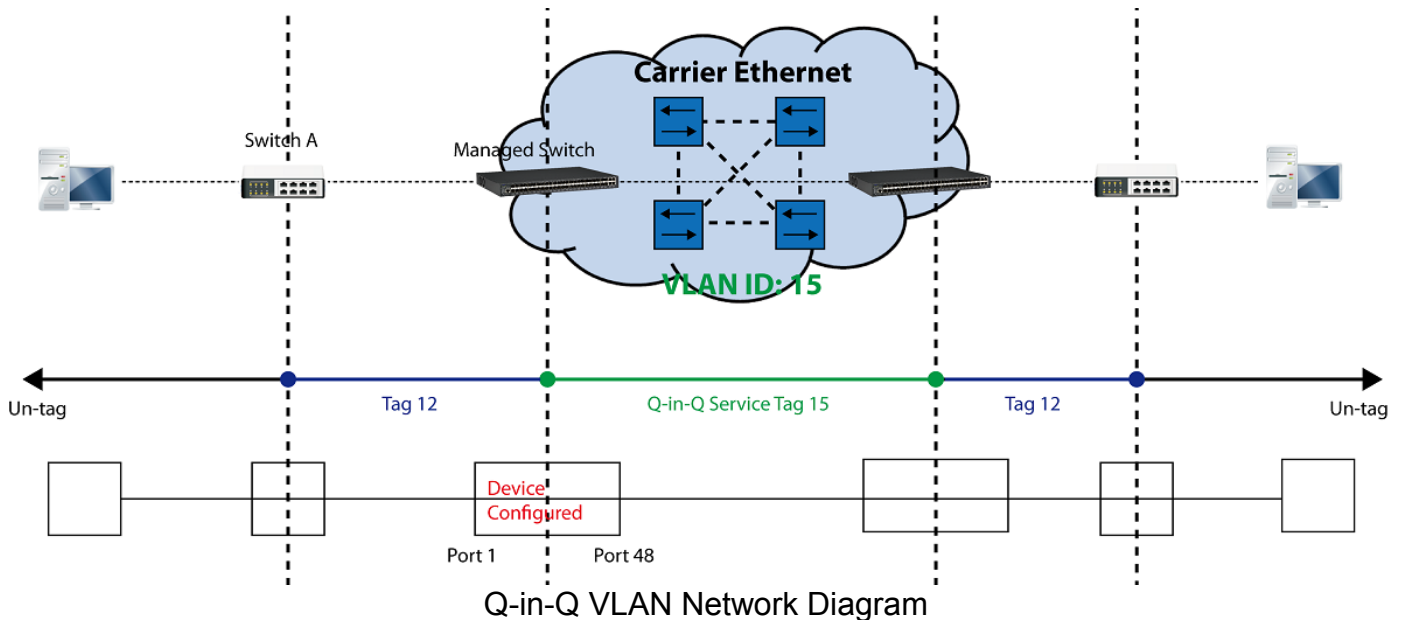

### CLI Configuration:

Steps...	Commands...
1. Enter Global Configuration mode.	SWH> enable Password: SWH# config SWH(config)#
2. Enable Q-in-Q VLAN	SWH(config)# vlan qinq-vlan OK !
3. Assign Port 48 to ISP port	SWH(config)# vlan qinq-vlan isp-port 48 OK !
4. Create S-Tag 15 on Port 1.	SWH(config)# interface 1 SWH(config-if-1)# vlan qinq-vlan stag-vid 15 OK ! SWH(config-if-1)# exit
5. Show currently configured dot1q VLAN membership.	SWH(config)# show vlan qinq-vlan =====
	Q-in-Q VLAN Configuration :
	=====
	QinQ VLAN : enable
	Stag Ethertype : 0x9100
	Management Stag : 15
	Port Stag VID ISP Port
	----
	1 15 disable
	2 1 disable
	.
	.
	46 1 disable
	47 1 disable
	48 1 enable
	NOTE: By default, all ports are member ports of the



Default\_VLAN. Before removing the Default\_VLAN from the VLAN table, make sure you have correct management VLAN and VLAN mode configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.

## Web Management Configuration:

### 1. Select “VLAN Interface” option in IEEE 802.1Q Tag VLAN menu.

Switch Management>VLAN Configuration>IEEE 802.1q Tag VLAN>VLAN Interface

**VLAN Interface**

Port	Mode	Access-vlan	Trunk-vlan
Port1	ACCESS	12	1
Port2	ACCESS	1	1
Port3	ACCESS	1	1
Port4	ACCESS	1	1
Port45	ACCESS	1	1
Port46	ACCESS	1	1
Port47	ACCESS	1	1
Port48	TRUNK	1	12

OK

Check the VLAN status. Supposed that Port 1 carries access VLAN 12 while Port 48 trunk VLAN 12

2. Create a new Service VLAN 15 that includes Port 1 and Port 48 as member ports.  
Switch Management>VLAN Configuration>IEEE 802.1q Tag VLAN>QinQ VLAN Configuration

- System Information
- User Authentication
- Network Management
  - Switch Management
    - Switch Configuration
    - Port Configuration
    - Link Aggregation
    - Rapid Spanning Tree
    - 802.1X Configuration
    - MAC Address Management
    - VLAN Configuration
      - Port Based VLAN
      - IEEE 802.1q Tag VLAN**
        - QinQ VLAN Configuration**
      - QoS Configuration
    - IGMP/MLD Snooping
    - Static Multicast Configuration
    - Port Mirroring
  - Security Configuration
    - ACL Configuration
    - LLDP Configuration
    - Loop Detection
- Switch Monitor
- System Utility
  - Save Configuration
  - Reset System
  - Logout

### QinQ VLAN Configuration

QinQ Mode: Disabled								
Ether Type: 8100 (0000-FFFF)								
Port Number	1	2	3	4	5	6	7	8
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	9	10	11	12	13	14	15	16
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	17	18	19	20	21	22	23	24
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	25	26	27	28	29	30	31	32
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	33	34	35	36	37	38	39	40
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	41	42	43	44	45	46	47	48
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	CPU							
Stag VID	1							
ISP Port								

**QinQ VLAN Configuration**

QinQ Mode: Enabled Click enable

Ether Type: 8100 (0000-FFFF)

Port Number	1	2	3	4	5	6	7	8
Stag VID	<span>15</span> <span>Specify S-tag VID</span>	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	9	10	11	12	13	14	15	16
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	17	18	19	20	21	22	23	24
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	25	26	27	28	29	30	31	32
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	33	34	35	36	37	38	39	40
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port Number	41	42	43	44	45	46	47	48
Stag VID	1	1	1	1	1	1	1	1
ISP Port	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Port Number	CPU							
Stag VID	1							
ISP Port								

OK Check ISP port

Click "OK" to apply the settings.

**NOTE:** By default, all ports are member ports of the Default\_VLAN. Before removing the Default\_VLAN from the VLAN table, make sure you have correct management VLAN and PVID configurations, otherwise, incorrect configurations may disconnect your management PC to the Managed Switch immediately when you enter the command.

## Treatments of Packets:

### 1. A tagged packet arrives at Port 1

When a packet with a tag 12 arrives at Port 1, the original tag will be kept intact and then added an outer tag 15 by Port 1, which is set as a tunnel port. When this packet is forwarded to Port 48, two tags will be forwarded out because Port 48 is set as a trunk port.

### 2. A untagged packet arrives at Port 1

If an untagged packet is received, it will also be added a tag 15. However, Q-in-Q function will not work.

*This page is intentionally left blank.*