



# **IPS-3110/IPS-3110-PB**

## **Managed Industrial PoE Ethernet Switch**

### **User's Guide**

Version: 1.0

## Revision History

| Version | Date       | Changes  |
|---------|------------|--|
| 0.90    | 10/07/2016 | First release  |
| 0.90    | 01/09/2017 | Remove Bluetooth   |
| 1.0     | 08/17/2018 | Add the description about IPS-3110-PB and CTS branches' contact information. |

## FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

## CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

## Trademarks

CTS is a registered trademark of Connection Technology Systems Inc.  
All trademarks belong to their respective proprietors.

Contents subject to change without prior notice.

## Copyright Statement

### Connection Technology Systems Inc Copyright © 1998-2018

This publication may not be reproduced as a whole or in part, in any way whatsoever unless prior consent has been obtained from Connection Technology Systems Inc.

# ***CTS Contact Information***

---

## **■ Headquarter/Manufacturer:**

### **Connection Technology Systems Inc.**

18F-6, No.79, Sec.1, Xintai 5th Rd.,  
XiZhi Dist., New Taipei City 221, Taiwan(R.O.C)  
Tel: +886-2-2698-9661  
Fax: +886-2-2698-9662  
Dir.Line:+886-2-2698-9201  
www.ctsystem.com

## **■ Global Authorized Representatives:**

### **Connection Technology USA Inc.**

40538 La Purissima Way, Fremont, CA 94539, USA  
Tel: +1-510-509-0304  
Sales Direct Line: +1-510-509-0305  
E-mail:cts\_us@ctsystem.com

### **Connection Technology Systems Japan**

Higobashi Bldg, No3 R201, 1-23-13, Edobori, Nisi-ku,  
Osaka 550-0002, Japan  
Tel: +81-6-6450-8890  
E-mail: cts\_japan@ctsystem.com

### **Connection Technology Systems NE AB**

August Barks Gata 21,  
421 32 Västra Frölunda, Sweden  
Tel: +46-31-221980  
E-mail: info@ctsystem.se

### **COMPONET Handels GmbH**

Hirschstettner Straße 19-21/Stiege I  
A-1220 Wien, Austria  
Tel: +43-1-2350-5660  
E-mail: office@componet.at

# ***Table of Contents***

---

|  |     |
|--|-----|
| Revision History .....   | ii  |
| CTS CONTACT INFORMATION .....  | III |
| TABLE OF CONTENTS .....  | IV  |
| CHAPTER 1. INTRODUCTION .....  | 2   |
| 1.1 OVERVIEW OF IPS-3110/IPS-3110-PB .....                               | 2   |
| 1.2 KEY FEATURES .....   | 3   |
| 1.3 FRONT & REAR & TOP PANELS .....                                      | 5   |
| 1.3.1 Front and Rear Panels .....  | 5   |
| 1.3.2 Top Panel .....  | 7   |
| 1.4 LED DEFINITIONS .....  | 8   |
| 1.5 CABLE SPECIFICATIONS .....   | 11  |
| CHAPTER 2. INSTALLATION.....   | 12  |
| 2.1 INSTALLATION REQUIREMENTS .....                                      | 13  |
| 2.2 CHECKING THE PACKAGE CONTENTS .....                                  | 13  |
| 2.3 INSTALLING THE MANAGED INDUSTRIAL PoE GIGABIT ETHERNET SWITCH .....  | 14  |
| 2.3.1 DIN-Rail Installation .....  | 14  |
| 2.3.2 Grounding the Managed Industrial PoE Gigabit Ethernet Switch ..... | 15  |
| 2.4 POWERING THE MANAGED INDUSTRIAL PoE GIGABIT ETHERNET SWITCH .....    | 16  |
| 2.5 CONNECTING THE SWITCH TO NETWORK.....                                | 18  |
| 2.6 INSTALLING AND REMOVING SFP MODULES .....                            | 18  |
| 2.6.1 Installing SFP Modules .....                                       | 18  |
| 2.6.2 Removing SFP Modules.....  | 18  |
| 2.7 CONNECTING THE SWITCH TO CONSOLE PORT .....                          | 19  |
| CHAPTER 3. OPERATION.....  | 20  |
| 3.1 NETWORK MANAGEMENT .....   | 20  |
| CHAPTER 4. MAINTENANCE .....   | 22  |
| 4.1 FAULT IDENTIFICATION .....   | 22  |
| 4.1.1 Local Check .....  | 22  |
| 4.1.2 Remote Check.....  | 23  |
| 4.2 HARDWARE REPLACEMENT PROCEDURES .....                                | 23  |
| 4.3 FIRMWARE AND CONFIGURATION UPGRADE.....                              | 23  |

# About this manual

In this user's guide, it will not only clearly introduce CTS IPS-3110/IPS-3110-PB Managed Industrial PoE Gigabit Ethernet Switch but tell you how to install this Switch with detailed instructions.

## Organization of the Manual

---

- Chapter 1 "Introduction" describes the features of the Managed Industrial PoE Gigabit Ethernet Switch
- Chapter 2 "Installing the Managed Industrial PoE Gigabit Ethernet Switch"
- Chapter 3 "Operation"
- Chapter 4 "Maintenance"

# 1

## Introduction

---

CTS's Managed Industrial Switch is designed to meet the emerging FTTX & Metro Ethernet requirements at the industrial environment. When massive fiber ports need to be deployed, this managed switch series provide the best performance and price ratio.

### 1.1 Overview of IPS-3110/IPS-3110-PB

IPS-3110/IPS-3110-PB, a Managed Industrial PoE Gigabit Ethernet Switch, has 8 x 10/100/1000Base-T up to 30W PoE ports and 2 combo ports (10/100/1000Base-T and 100/1000Base-X SFP) in the front panel. It is designed to meet the massive needs for Gigabit Ethernet network deployments and aim at industrial PoE applications that demand a wide range of operating temperature (-40°C ~ 75°C ). This Managed Industrial PoE Switch also provides high performance, store and forward switching capability plus other advanced features such as QoS, VLAN, Spanning Tree, LACP and so on.

LED indicators located on the front panel ease the users' effort to monitor and manage the network status. The built-in management module allows users to configure, control and monitor the system locally via console or remotely via SNMP\_ based management system.

In the harsh environment, this Managed Industrial PoE Gigabit Ethernet Switch is a reliable solution to the delivery of power over Ethernet for any network devices. With the power redundancy, users can prevent the network disconnection from the unexpected power outage. Besides, it can be used as a stand-alone switch. You can easily mount it with the provided DIN-rail at industrial sites as well.

## 1.2 Key Features

### ■ Interfaces

- 8 x 10/100/1000Mbps RJ-45 ports, Max.30W PoE/PSE
- 2 x Combo ports (10/100/1000Mbps RJ-45 + 100/1000Mbps SFP)
- 1 x USB port
- Console: 1 x RS-232 (RJ-45)

### ■ Standards

- Support IEEE802.3 10Base-T
- Support IEEE802.3u 100Base-TX/FX
- Support IEEE802.3ab 1000Base-T
- Support IEEE802.3az EEE
- Support IEEE802.3z 1000Base-X
- Support IEEE802.1p Priority
- Support IEEE802.1q Tag VLAN
- Support IEEE802.3x Flow Control
- Support IEEE802.1D/IEEE802.1w STP/RSTP
- Support IEEE802.3af Power over Ethernet
- Support IEEE802.3at Power over Ethernet Enhancements
- Support IEEE802.1x Authentication Network Access Control

### ■ H/W Specification

- Store and Forward Switching Mechanism
- Auto Crossover for MDI/MDI-X in TP Port
- Auto Negotiation in TP Port
- Support Auto-Sensing for fiber ports
- Half/Full Duplex Mode Operation
- Jumbo Frame up to : 9K Bytes
- MAC Address Table : 16K
- Non-Blocking Switching Fabric : 20Gbps
- VLANs support up to 4K VLAN Groups
- 1x Digital Alarm Output for fault alarm notification (Power, Digital Input)
- 6KV Surge Immunity on RJ-45 Copper Port (K.21\*)
- Dual Power Input (48~54 VDC) for IPS-3110; Dual Power Input (24~54 VDC) for IPS-3110-PB
- With the built-in Power Booster (Provided for IPS-3110-PB Only)

### ■ Switching Features

- Support IEEE802.1q Tag Based VLAN
- Support IGMP v1/v2 snooping
- IGMP Immediate leave
- Support QoS Based on P-bit
- QoS classification based on IEEE802.1p, TOS/DSCP
- Support Strict Priority Queuing(SPQ)
- Support Weighted Round Robin(WRR)

- Support Port Trunking
- Port Mirroring
- Loop Detection
- Broadcast Storm Control

### ■ Network Management

- Console
- Telnet/CLI
- Web
- RADIUS authentication
- SNMP v1/v2c/v3
- DHCP Client
- FTP/HTTP/TFTP/USB Firmware Upgrade
- Dual Image
- SNTP
- SSHv2
- Eventlog
- Syslog

### ■ Power Budget (For IPS-3110-PB Only)

- Max.120W for total powered devices' consumption @ 24-50 VDC input
- Max. 240W for total powered devices' consumption @ 50-54 VDC input

### ■ Operation Environment

- Operating Temperature: -40°C~75°C

### ■ Dimension

- IPS-3110: 110mm(L) x 73mm(W) x 135mm(H)
- IPS-3110-PB: 110mm(L) x 88mm(W) x 135mm(H)



## 1.3 Front & Rear & Top Panels

### 1.3.1 Front and Rear Panels

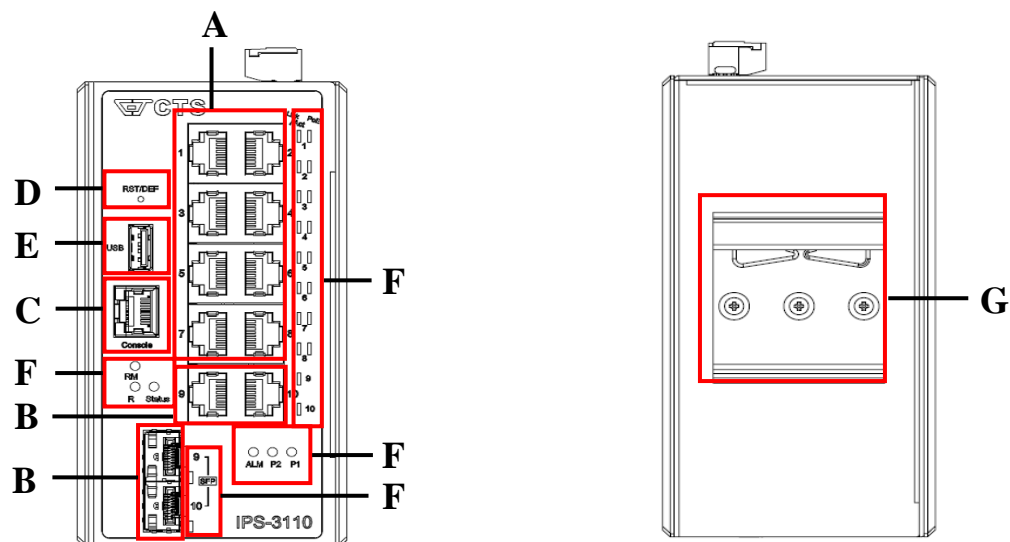


Figure 1-1. Front and Rear Panels of IPS-3110

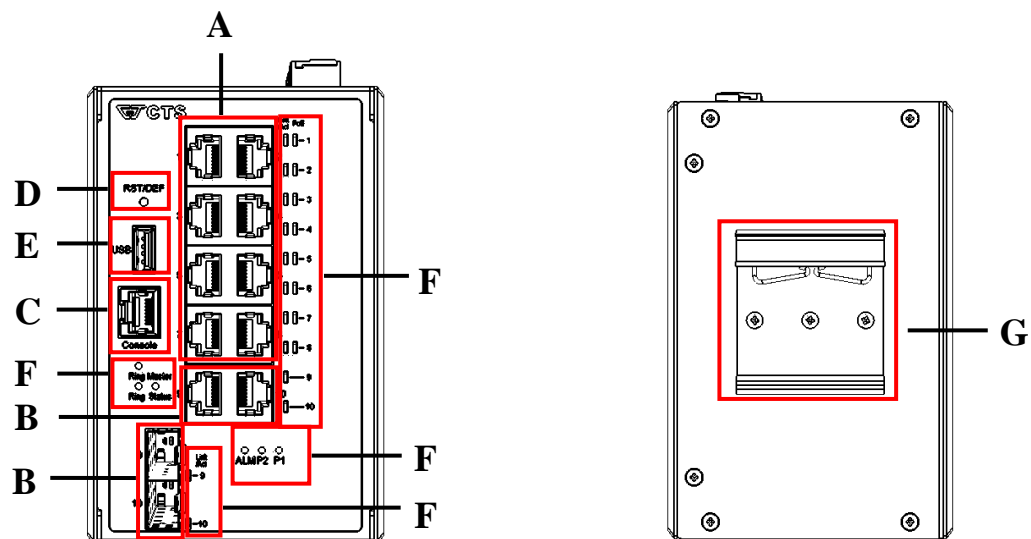


Figure 1-2. Front and Rear Panels of IPS-3110-PB

The interfaces on the front and rear panels of the Managed Industrial PoE Gigabit Ethernet Switch are described below:

**A. 8 x 10/100/1000Base-T RJ-45 Ports (Ports 1-8)**

**B. 2 x Gigabit Combo Ports (Ports 9-10):**

- 2 x 10/100/1000Base-T RJ-45 ports, or
- 2 x 100/1000Base-X SFP ports

**C. Console Port (RJ-45 to RS-232) :**

- An asynchronous serial console port supports the RS-232 electrical specification. The console port can be used to manage the device, and the serial console port settings should be configured as 9600, 8, n, 1.

**D. RST/DEF(Reset) Button :**

- Press the reset button for 5~10 seconds, then release it to restart the system.
- Press the reset button for more than 10 seconds, then release it to reset the Managed Switch. The settings will be back to the factory defaults and restart the system.

**E. USB Port :** (For more information, please refer to [Section 4.3](#))

**F. LEDs :**

- Includes Power LEDs of P1 and P2, Status LED, ALM(Alarm) LED, RM(Ring Master) LED, R(Ring) LED, Link/Act LEDs of 1~8 ports, PoE LEDs of 1~8 ports and Link/Act LEDs of TP & Fiber 9~10 ports. For more details on LEDs description, please refer to [Section 1.4 LED Definitions](#).

**G. Din-Rail Metal Spring** (For more information, please refer to [Section 2.3.1](#))

## 1.3.2 Top Panel

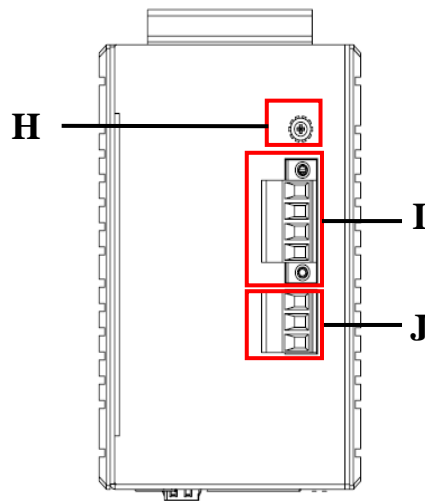


Figure 1-3. Top Panel of IPS-3110

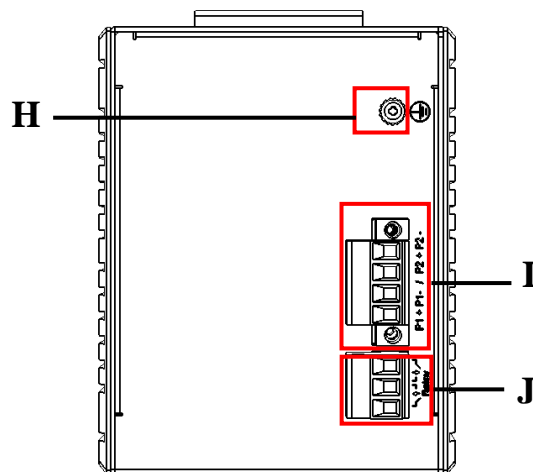


Figure 1-4. Top Panel of IPS-3110-PB

The interfaces on the top panel of the Managed Industrial PoE Gigabit Ethernet Switch are described below:

**H. Ground Screw** (For more information, please refer to [Section 2.3.2](#))

**I. Terminal Block for Power Supply** (For more information, please refer to [Section 2.4](#))

**J. Digital Alarm Output** (For more information, please refer to [Section 2.4](#))

## 1.4 LED Definitions

The Managed Industrial PoE Gigabit Ethernet Switch is Plug & Play compliant. The real-time operational status can be monitored through a set of LED indicators located on the front panel.

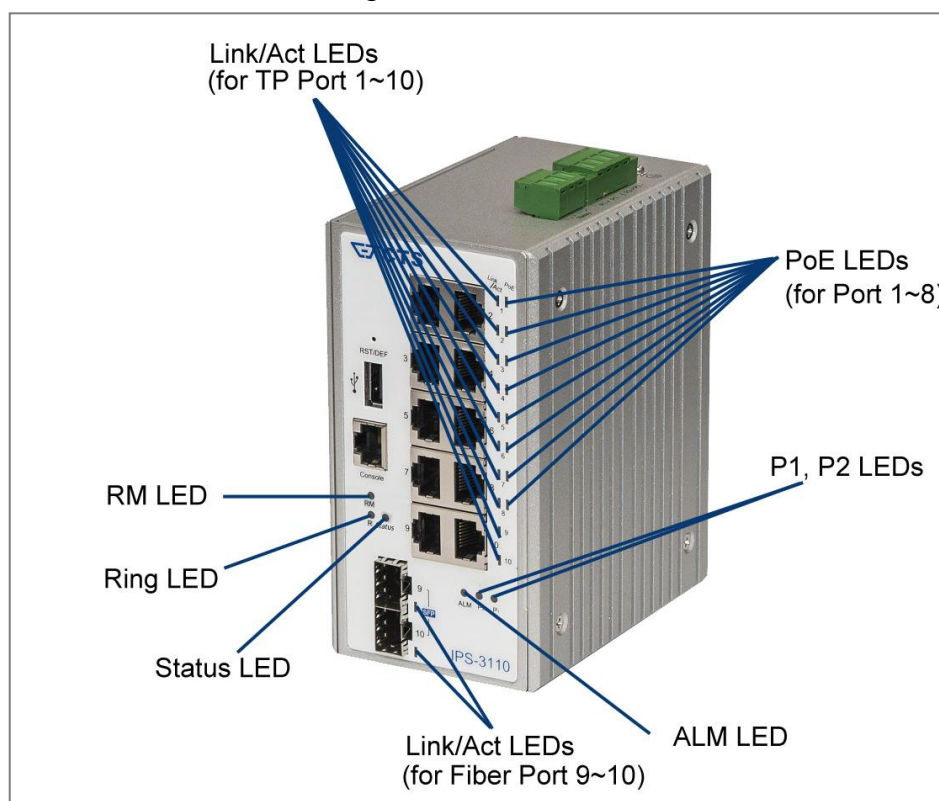


Figure 1-5. LEDs of IPS-3110

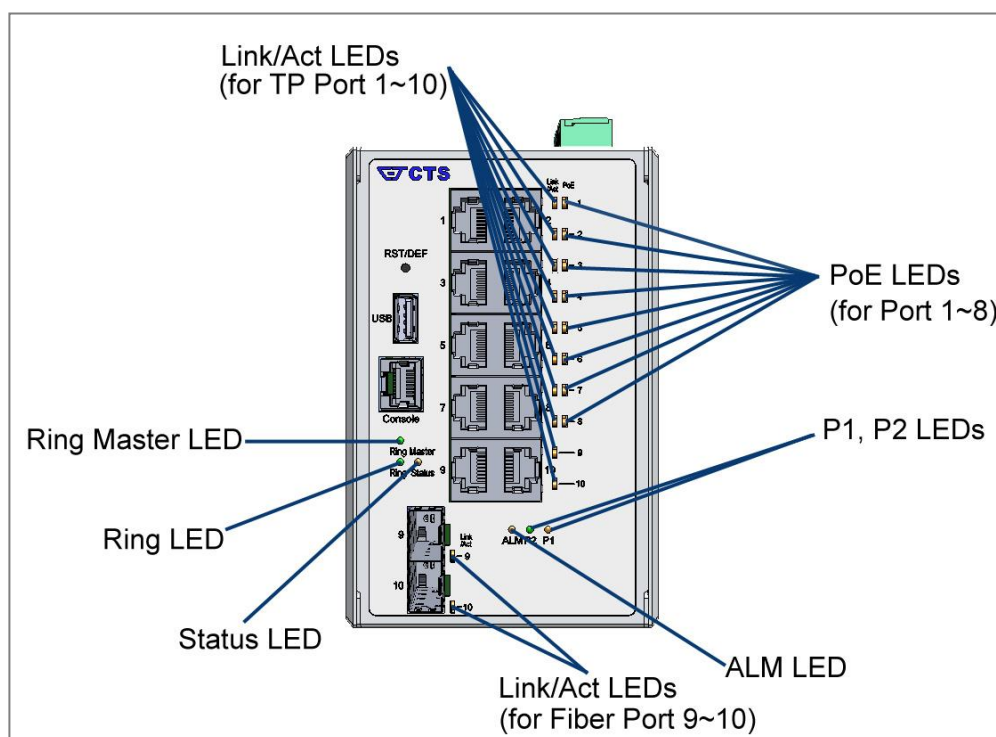


Figure 1-6. LEDs of IPS-3110-PB

| LED                            | Color  | Operation  |
|--------------------------------|--------|--|
| P1<br>(Power)                  | OFF    | Device is powered down or works abnormally.  |
|                                | Green  | Lit when this power is in normal operation.  |
| P2<br>(Power)                  | OFF    | Device is powered down or works abnormally.  |
|                                | Green  | Lit when this power is in normal operation.  |
| Status<br>(System Status)      | Green  | Lit when the system is working normally.   |
|                                | Orange | Blinking when press the Reset button for more than 10 seconds and then release to reset (return to factory default settings) and restart the system. The LED indicator will blink in orange color for three times. |
|                                |        | Lit when the device is booting up or press the Reset button for 5~10 seconds and then release to restart the system.   |
| ALM(Alarm)                     | OFF    | One or redundant power supply is up since the system is booted up.   |
|                                | Red    | One of redundant power supply is down since the system is booted up.   |
| R<br>(Ring)                    | OFF    | Ring Detection is disabled.  |
|                                | Green  | Lit when Ring Detection works normally and no ring port is link down.<br>Blinking when the ring port of another device is link down that results in abnormal Ring Detection.                                       |
|                                | Orange | Blinking when the ring port of this Switch is link down that results in abnormal Ring Detection.   |
| RM<br>(Ring Master)            | OFF    | Off when the role of this Switch is Slave in case Ring Detection is enabled.   |
|                                | Green  | Lit when the role of this Switch is Master in case Ring Detection is enabled.  |
| Link/ACT<br>(1~10 TP Ports)    | OFF    | No connection exists.  |
|                                | Orange | Lit when 10/100Mbps TP port link is up.<br>Blinking when TP port is receiving and transmitting data at the speed of 10/100Mbps.  |
|                                | Green  | Lit when 1000Mbps TP port link is up.<br>Blinking when TP port is receiving and transmitting data at the speed of 1000Mbps.  |
| Link/ACT<br>(9~10 Fiber Ports) | OFF    | No connection exists.  |
|                                | Orange | Lit when 100Mbps Fiber port link is up.<br>Blinking when Fiber port is receiving and transmitting data at the speed of 100Mbps.  |
|                                | Green  | Lit when 1000Mbps Fiber port link is up.<br>Blinking when Fiber port is receiving and transmitting data at the speed of 1000Mbps.  |

|                    |       |   |
|--------------------|-------|---|
| PoE<br>(1~8 Ports) | OFF   | PoE is disabled or no power is supplied with the PD when PoE is enabled.  |
|                    | Green | <p>Lit when PoE is enabled and starts supplying the power.</p> <p><b>(Note: Once PoE LED indicator that belongs to the specific PoE port without connecting any PD lights in green color, it stands that this PoE port is under the “Injector-30Watt” mode. It strongly recommends that please do not connect any network device (e.g. NIC) not supporting PoE function to this PoE port, it may cause great damage to your network device. For more details on PoE operation mode settings, please refer to IPS-3110/IPS-3110-PB Network Management User’s Manual. )</b></p> |

## 1.5 Cable Specifications

The following table contains various cable specifications for the Managed Industrial PoE Gigabit Ethernet Switch. Please make sure that you use the proper cable when connecting the Switch.

| Cable Type      | Description  |
|-----------------|--|
| 10Base-T        | UTP Category 3, 4, 5 (100 meters max.)<br>EIA/TIA- 568 150-ohm STP (100 meters max.)   |
| 100Base-TX      | UTP Cat. 5 (100 meters max.)<br>EIA/TIA-568 150-ohm STP (100 meters max.)  |
| 1000Base-T      | UTP Cat. 5e (100 meters max.)<br>UTP Cat. 5 (100 meters max.)<br>EIA/TIA-568B 150-ohm STP (100 meters max.)  |
| 100BASE-FX      | Multi-mode fiber module(2km) / Single-mode fiber module  |
| 1000BASE-SX     | Multi-mode fiber module (550m)   |
| 1000BASE-LX     | Single-mode fiber module (10km)  |
| 1000BASE-LH     | Single-mode fiber module (30km/50km)   |
| 1000BASE-ZX     | Single-mode fiber module (80km)  |
| SFP Transceiver | SFP Transceiver for 1000BASE-SX Multi-mode fiber module (550m)<br>SFP Transceiver for 1000BASE-LX Single-mode fiber module (10km)<br>SFP Transceiver for 1000BASE-LH Single-mode fiber module (30km/50km)<br>SFP Transceiver for 1000BASE-ZX Single-mode fiber module (80km) |

# 2

## Installation

---

To properly install IPS-3110/IPS-3110-PB Managed Industrial PoE Gigabit Ethernet Switch, please follow the procedures listed below. These procedures will be respectively described in detail in the following sections.

- Installation Requirements
- Checking the Package Contents
- Installing the Managed Industrial PoE Gigabit Ethernet Switch
- Powering on the Managed Industrial PoE Gigabit Ethernet Switch
- Connecting the Managed Industrial PoE Gigabit Ethernet Switch to the Network



## 2.1 Installation Requirements



### ATTENTION

Be sure to power off before installing or wiring your Managed Industrial PoE Gigabit Ethernet Switch.

Be sure to calculate the maximum possible current in each power wire and common wire. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

Be sure to read and follow important guidelines as below:

- Do not run signal or communications wiring and power wiring through the same wire conduit. Wires with different signal characteristics should be routed separately to avoid interference.
- It is recommended that wiring which shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate and label the wiring to all devices in the system if necessary.

## 2.2 Checking the Package Contents

Unpack the package carefully and check the package contents. The standard package should contain the following items:

- One set of Managed Industrial PoE Gigabit Ethernet Switch
- Documentation CD x 1

---

**Note:** *If any of the above items is found missing or damaged, please contact your local sales representative for support or replacement.*

---

## 2.3 Installing the Managed Industrial PoE Gigabit Ethernet Switch




### ATTENTION

This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.


### 2.3.1 DIN-Rail Installation

Just follow the steps below to complete the DIN-Rail installation for your IPS-3110/IPS-3110-PB if needed.

**STEP 1 :** Insert the top of the DIN-Rail into the slot just below the metal spring

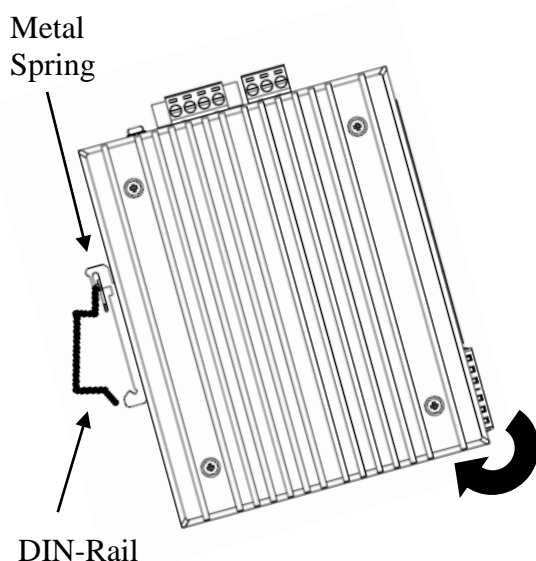

**STEP 2 :** The DIN-Rail attachment unit will be snapped into place as shown

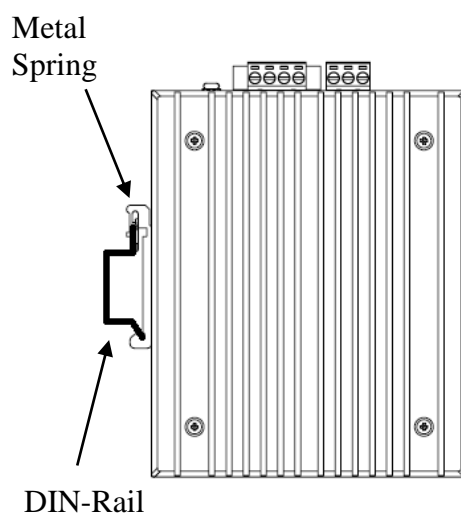

## 2.3.2 Grounding the Managed Industrial PoE Gigabit Ethernet Switch

Grounding helps to limit the effects of noise due to electromagnetic interference (EMI). Be sure to install the ground connection from the ground screw to the grounding surface before connecting devices.

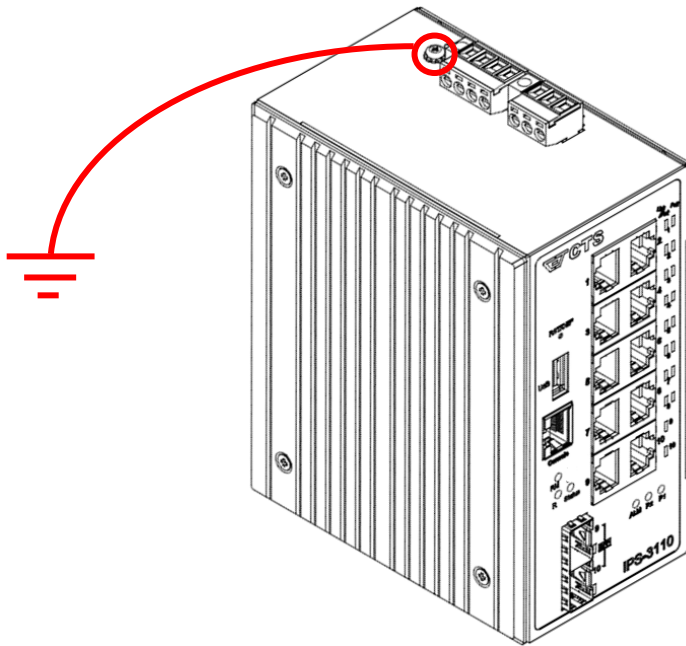


Figure 2-1 Grounding Wiring for IPS-3110/IPS-3110-PB

## 2.4 Powering the Managed Industrial PoE Gigabit Ethernet Switch

The Managed Industrial PoE Gigabit Ethernet Switch can be used with DC power (24~54 VDC for IPS-3110-PB; 48~54 VDC for IPS-3110) through the terminal block. The terminal block is located on the upper panel of this Switch. Before powering on the Managed Industrial PoE Gigabit Ethernet Switch, please make sure that network cables and power cables are securely connected.



### ATTENTION


Before connecting the Managed Industrial PoE Gigabit Ethernet Switch to the DC power inputs, make sure the DC power source voltage is stable.

### Wiring of the Terminal Block for Power Supply/Digital Alarm Output

- **P1 and P2 (Power Inputs):** Two sets of power inputs are located on the terminal block. For power redundancy purpose, both the P1 and P2 need to be configured. The redundant power input will take over seamlessly when one power source is down to protect your device or network from the loss of power.

#### Power Input Configuration:

Loosen the wire-clamping screws by using a flat-head screwdriver to insert the positive and negative wires of 14 AWG at least we suggest into the “+” and “-” contacts on the terminal block respectively. P1 and P2 allow the power input that ranges from 24~54 VDC for IPS-3110-PB and 48~54 VDC for IPS-3110. Tighten the wire-clamping screws to fix wires of 14 AWG by using a flat-head screwdriver.

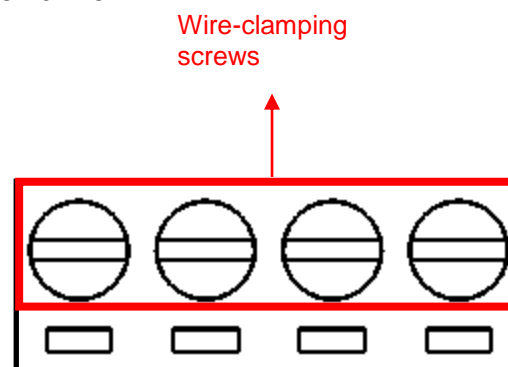

### ■ Digital Alarm Output Configuration:

Relay alarm has 3 contacts on the terminal block used to connect alarm devices such as speakers or LEDs to alert users when the digital input alarm or the redundant power failure occurs. The capacity of relay alarm is 1A/30VDC. The default right contact is normal closed, the default left contact is normal open, and the middle contact is shared together by N/O (Normal Open) and N/C (Normal Closed) alarm devices. (See Fig 2-2.)

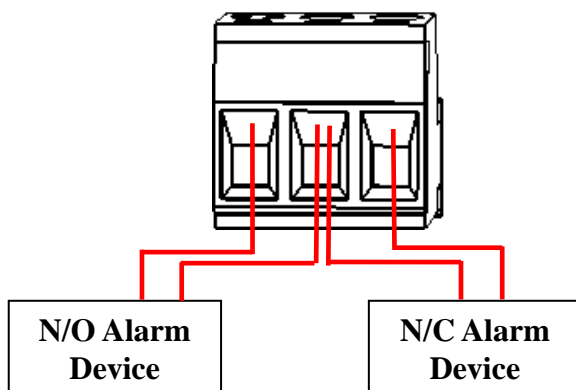


Figure 2-2

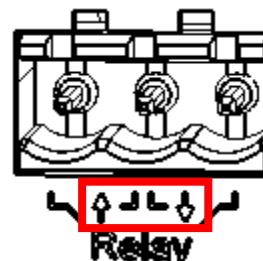


Figure 2-3

In Fig. 2-3, the arrow that directs inward for Digital Alarm Output indicates the relay circuit (left and middle contacts) is closed when it is triggered. The arrow that directs outward for Digital Alarm Output indicates the relay circuit (right and middle contacts) is opened when it is triggered.

Loosen/tighten the wire-clamping screws to insert/fix alarm-device wires by using a flat-head screwdriver as described above.

**Note:** If there is no power redundancy, the relay alarm is not available.

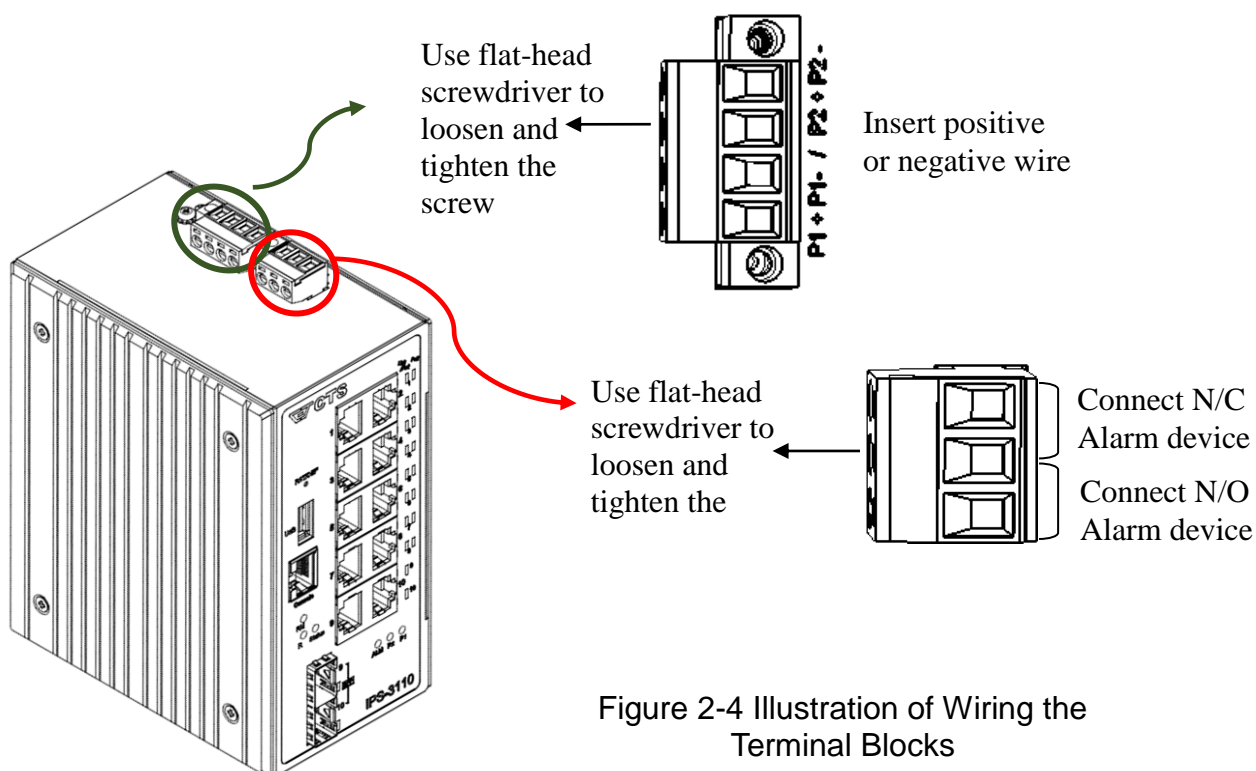


Figure 2-4 Illustration of Wiring the Terminal Blocks

## 2.5 Connecting the Switch to Network

### Connect to Network

This Managed Industrial PoE Gigabit Ethernet Switch has 8 RJ-45 ports and 2 combo ports for you to implement it in your Industrial PoE environment. All RJ-45 ports can be plugged with 10/100/1000Base-T UTP cable. The combo ports 9-10 can be plugged with 100Base-FX, 1000Base-X SFP Fiber transceiver or 10/100/1000Base-T UTP cable. The connection of the fiber port must be matched, i.e. Transmitter to Receiver, and vice versa.

## 2.6 Installing and Removing SFP Modules

### 2.6.1 Installing SFP Modules

To connect the fiber transceiver and LC cable, use the following guidelines:

1. Position the SFP transceiver with the handle on top.
2. Locate the triangular marking in the slot and align it with the bottom of the transceiver.
3. Insert the SFP transceiver into the slot until it clicks into place.
4. Make sure the module is seated correctly before sliding the module into the slot. A click sounds when it is locked in place.

---

**Note:** If you are attaching fiber optic cables to the transceiver, continue with the following step. Otherwise, repeat the previous steps to install the remaining SFP transceivers in the device.

---

1. Remove the protective plug from the SFP transceiver.

---

**Note:** Do not remove the dust plug from the transceiver if you are not installing the fiber optic cable at this time. The dust plug protects hardware from dust contamination.

---

2. Insert the fiber cable into the transceiver. The connector snaps into place and locks.
3. Repeat the previous procedures to install any additional SFP transceivers in the switch. The fiber port is now set up.

### 2.6.2 Removing SFP Modules

To disconnect an LC connector, use the following guidelines:

1. Press down and hold the locking clips on the upper side of the optic cable.
2. Pull the optic cable out to release it from the transceiver.
3. Hold the handle on the transceiver and pull the transceiver out of the slot.

## 2.7 Connecting the Switch to Console Port

The industrial switch supports a secondary means of management. By connecting the RJ45 to RS232 serial cable between a COM port on your PC (9-pin D-sub female) and the switch's RJ45 (RJ45) port, a wired connection for management can be established.



## 3

# Operation

A built-in management module of the Managed Industrial PoE Gigabit Ethernet Switch provides flexible interfaces for users to configure, control and monitor the system remotely and locally. To know the further information about the operation of this switch, please refer to IPS-3110/IPS-3110-PB Network Management User's Manual for the detailed management functions and required installation and operation procedures.

## 3.1 Network Management

The following is a list of management options available in this Managed Industrial PoE Gigabit Ethernet Switch:

- Local Console Management
- Telnet Management
- SNMP Management
- Web Management

### Local Console Management

Users may connect a Terminal or PC running the Terminal Emulation program (such as Putty or Tera Term) with the following serial console port settings, to the Managed Switch console port directly via RS-232 cable to configure , control and monitor the system. This is often referred to as Out-Of-Band management.

|                      |      |
|----------------------|------|
| <b>Baud rate:</b>    | 9600 |
| <b>Data bits:</b>    | 8    |
| <b>Parity:</b>       | none |
| <b>Stop bits:</b>    | 1    |
| <b>Flow control:</b> | none |

Console management is useful when there is no network connection to the Switch, for instance configuring the Managed Switch for the first time.

### Telnet Management

Telnet is done through the network. Once there is a network connection to the Managed Switch, users can use Telnet to configure, control and monitor the system. Using the network connection to



manage is often referred to as In-Band-Management.

### **SNMP Management**

SNMP is also In-Band-Management and requires a network connection to the Managed Switch. The Managed Switch private Management Information Bases (MIB) is provided for SNMP-based network management program to configure, control and monitor the system.

### **Web Management**

Web Management is done over the network. Once the Managed Switch is available on the network, you can login and monitor the status of it through a web browser remotely or locally. Local console-type Web management, especially for the first time use of the Managed Switch to set up the needed IP, can also be done through one of the 10/100/1000Base-T 8-pin RJ-45 ports located on the front panel of the Managed Switch. Direct RJ-45 LAN cable connection between a PC and the Managed Switch is required for this management.

# 4

## Maintenance

---

This Managed Industrial PoE Gigabit Ethernet Switch is easy to maintain. The procedures are suggested when you would like to identify faults, perform hardware replacement and do the firmware upgrade.

### 4.1 Fault Identification

Identifying faults can greatly reduce the time required to find problem and solution. Users may perform local check or remote check to find the problems.

#### 4.1.1 Local Check

Users can perform local check by observing LED indicators status or check system setup and configuration through console connection.

- When the whole system fails to function,
  1. Check Power LED status
  2. Check Power connection
  3. Reset power
- When certain network link fails to function,
  1. Locate the port of the switch
  2. Check LINK/ACT LED of the port
  3. Check Status LED of the port
  4. Check cable connection between the port and the connected device
  5. Reset power
- When local Console fails to function,
  1. Check Console port connection
  2. Check Console configuration
  3. Reset power

## 4.1.2 Remote Check

Users may check the Managed Industrial PoE Gigabit Ethernet Switch through SNMP manager remotely. For detailed procedures, please refer to the Network Management User's Manual.

## 4.2 Hardware Replacement Procedures



### **WARNING!**

The Managed Switch contains no user-serviceable parts. **DO NOT, UNDER ANY CIRCUMSTANCES, open and attempt to repair it.**

Failure to observe this warning could result in personal injury or death from electrical shock.


Failure to observe the above warning will immediately void any Warranty.

## 4.3 Firmware and Configuration Upgrades

This Managed Industrial PoE Gigabit Ethernet Switch may perform the firmware and configuration upgrade when required. The latest firmware can be obtained from your sales representative. For the detailed upgrade procedures, please refer to IPS-3110/IPS-3110-PB Network Management User's Manual.

### Automatic Firmware and Configuration Upgrades via USB Port

The Managed Industrial PoE Gigabit Ethernet Switch's firmware and configuration can also be upgraded automatically via USB port.

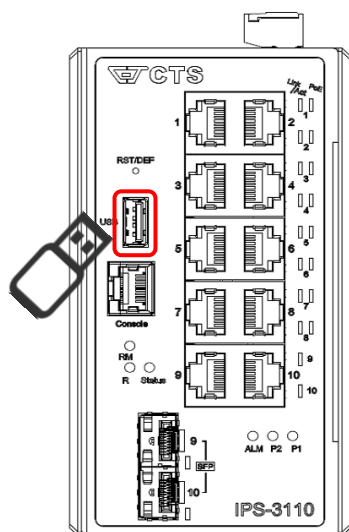

- Allow the network administrator for provisioning a device by just powering on and inserting disk
- Automatically upgrade firmware and/or configuration when plugging in an USB flash disk or hard disk

#### **USB support**


- Flash disk or hard disk (USB mass storage) with partition (Logic unit number, LUN)
- File system : FAT12, FAT16, FAT32, NTFS3.1(read-only) and before

## Process of Automatic Firmware and Configuration Upgrades



### Preparation steps before inserting the USB disk

- Rename the firmware name as:  
**cts-fw-<model\_name>.<admin\_user>.<password>**
- Rename the configuration file name as:  
**cts-cfg-<model\_name>.<admin\_user>.<password>**

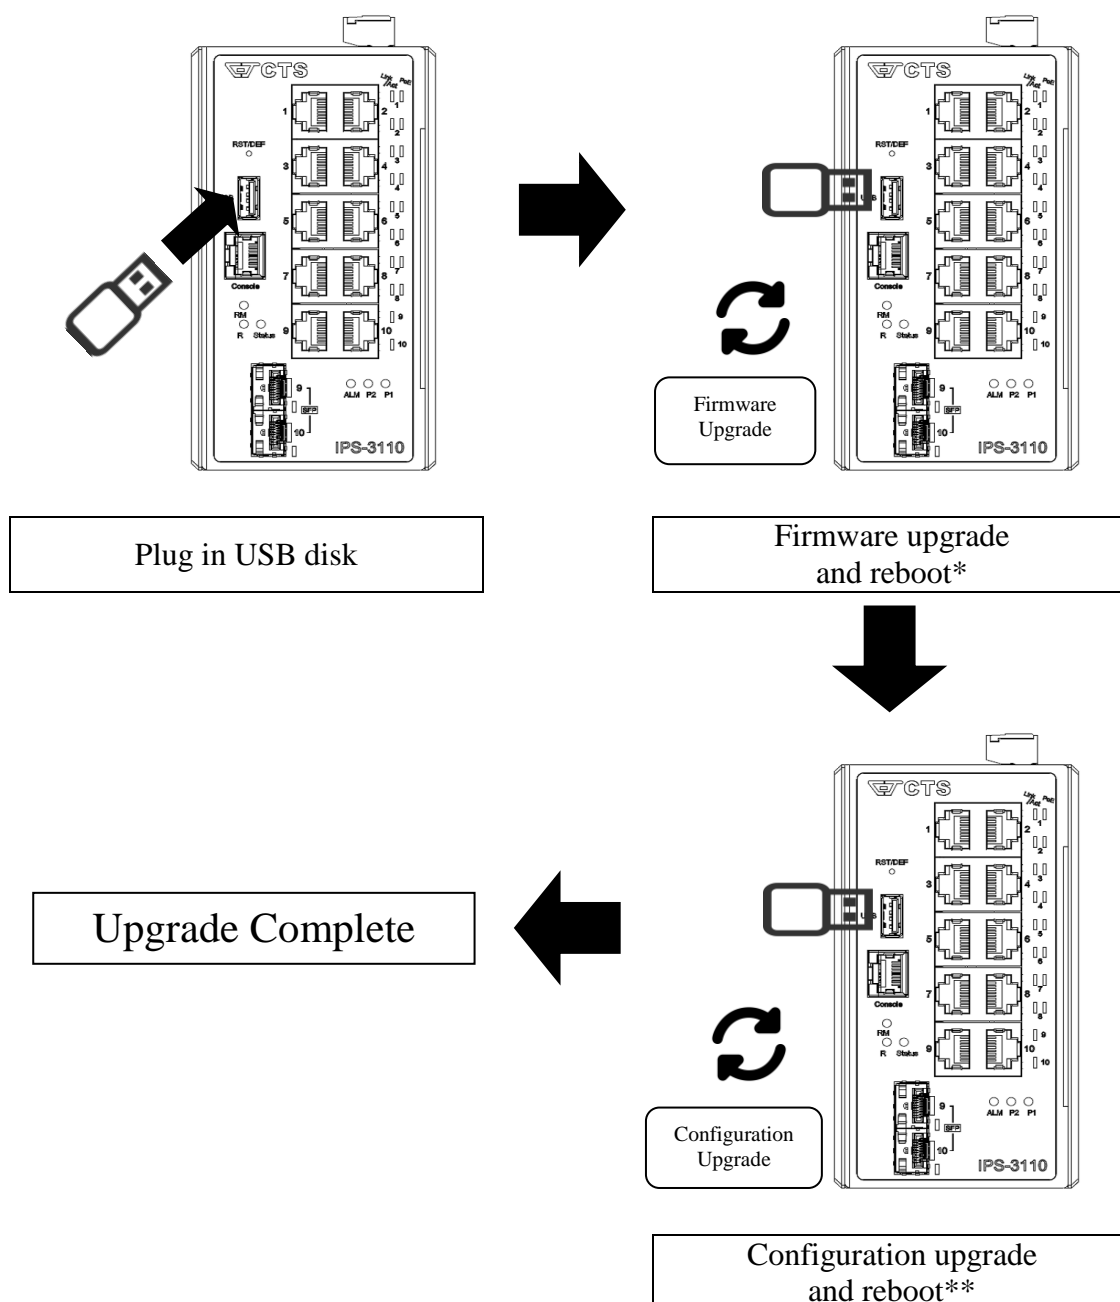

\*Firmware upgrade process would be skipped if:

- The firmware file is not authorized (wrong admin/password or unauthorized).
- The file is too big (>16MB).
- Firmware version = current firmware version

\*\*Configuration upgrade process would be skipped if:

- The configuration file is not authorized (wrong admin/password or unauthorized).
- Configuration = current configuration





**CONNECTION TECHNOLOGY SYSTEMS**

18F-6, No.79, Sec.1, Xintai 5th Rd.,  
XiZhi Dist., New Taipei City 221, Taiwan(R.O.C)

Tel: +886-2-2698-9661

Fax: +886-2-2698-9662

Dir.Line:+886-2-2698-9201

[www.ctsystem.com](http://www.ctsystem.com)