



ESW-5128 Series

L2 Managed Switch with 24-port 10/100/1000Mbps Downlink and 4-port 1/10Gbps SFP+ Uplink

User's Guide

Version: 1.0

Revision History

Version	Date	Changes
1.0	08/17/2022	First release

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Trademarks

CTS is a registered trademark of Connection Technology Systems Inc.
All trademarks belong to their respective proprietors.

Contents subject to change without prior notice.

Copyright Statement

Connection Technology Systems Inc Copyright © 1998-2022

This publication may not be reproduced as a whole or in part, in any way whatsoever unless prior consent has been obtained from Connection Technology Systems Inc.

CTS Contact Information

■ Headquarters/Manufacturer:

Connection Technology Systems Inc.

18F-6, No.79, Sec.1, Xintai 5th Rd.,

Xizhi Dist., New Taipei City 221,

Taiwan(R.O.C.)

Tel: +886-2-2698-9661

Fax: +886-2-2698-3960

Sales Direct Line: +886-2-2698-9201

www.ctsystem.com

■ Global Offices:

Connection Technology USA

40538 La Purissima Way,

Fremont, CA 94539, USA

Tel: +1-510-509-0304

Sales Direct Line: +1-510-509-0305

E-mail: cts_us@ctsystem.com

Connection Technology Systems Japan

Higobashi Bldg. No.3 R201, 1-23-13,

Edobori, Nishi-ku, Osaka 550-0002, Japan

Tel: +81-6-6450-8890

E-mail: cts_japan@ctsystem.com

Connection Technology Systems NE AB

August Barks Gata 21,

421 32 Västra Frölunda, Sweden

Tel: +46-31-221980

E-mail: info@ctsystem.se

Connection Technology Systems Central Europe (COMPONET Handels GmbH)

Hirschstettner Straße 19-21/Stiege I

A-1220 Vienna, Austria

Tel: +43-1-235 05 66-0

E-mail: cts_ce@ctsystem.com

Table of Contents

Revision History	ii
CTS CONTACT INFORMATION.....	III
TABLE OF CONTENTS.....	IV
CHAPTER 1. INTRODUCTION.....	2
1.1 OVERVIEW OF ESW-5128.....	2
1.2 KEY FEATURES	3
1.3 FRONT & REAR PANELS.....	5
1.3.1 FRONT PANEL	5
1.3.2 REAR PANEL	7
1.4 LED DEFINITIONS.....	8
1.5 CABLE SPECIFICATIONS	10
CHAPTER 2. INSTALLATION	11
2.1 INSTALLATION REQUIREMENTS.....	12
2.2 CHECKING THE PACKAGE CONTENTS.....	12
2.3 INSTALLING THE MANAGED SWITCH.....	13
2.3.1 DESKTOP INSTALLATION	13
2.3.2 RACK INSTALLATION	14
2.3.2.1 INSTALL THE MANAGED SWITCH IN A RACK.....	14
2.3.3 WALL-MOUNTING INSTALLATION	15
2.4 GROUNDING THE MANAGED SWITCH.....	17
2.5 POWERING ON THE MANAGED SWITCH	18
2.6 CONNECTING THE MANAGED SWITCH TO THE NETWORK	18
2.7 INSTALLING AND REMOVING SFP/SFP+ MODULES.....	18
2.7.1 INSTALLING SFP/SFP+ MODULES.....	18
2.7.2 REMOVING SFP/SFP+ MODULES.....	19
2.8 CONNECTING THE SWITCH TO CONSOLE PORT	19
CHAPTER 3. OPERATION.....	20
3.1 NETWORK MANAGEMENT	20
CHAPTER 4. MAINTENANCE.....	22
4.1 FAULT IDENTIFICATION	22

4.1.1 LOCAL CHECK	22
4.1.2 REMOTE CHECK.....	23
4.2 HARDWARE REPLACEMENT PROCEDURES	23
4.3 FIRMWARE UPGRADE.....	23

About this manual

In this user's guide, it will not only clearly introduce CTS ESW-5128 Managed Switch but tell you how to install this Managed Switch with detailed instructions.

Organization of the Manual

- Chapter 1 "Introduction" describes the features of the Managed Switch
- Chapter 2 "Installing the Managed Switch"
- Chapter 3 "Operation"
- Chapter 4 "Maintenance"

1

Introduction

CTS's Managed Switch is designed to meet the emerging FTTX & Metro Ethernet requirements. Besides the low profile appearance with 1U height and the standard rack-mounted size, the product also achieves hassle-free monitoring and comprehensive management for any network operator who desires to build up a reliable telecommunication network infrastructure. When it comes to FTTX deployment, the Managed Switch provides the best performance and price ratio.

1.1 Overview of ESW-5128

The product is a 19-inch and rack mountable Managed Switch, equipped with 24 Gigabit Ethernet ports (10/100/1000Base-T) and 4 SFP+ uplink ports (1/10GBase-R) on the front panel. This Managed Switch provides high performance, store and forward switching capability plus other advanced features such as QoS, VLAN, Spanning Tree, LACP and so on.

LED indicators located on the front panel ease the users' effort to monitor and manage the network status. The built-in management module also allows users to configure, control and monitor the system locally via console or remotely via SNMP-based management system.

This Managed Switch is a typical SFP/SFP+ solution to FTTX service implementation. Besides, it can be used as a stand-alone switch. With the height of 1U and the standard-size rack design in appearance, the network switch can be used in closet wiring as well.

1.2 Key Features

- **19 inch, 1U high**
- **24 x 10/100/1000Base-T ports**
 - IEEE 802.3/802.3u/802.3ab compliance
 - Support Auto-Negotiation
 - Support MDI/MDIX/Auto-Crossover
 - RJ-45 Interface
- **4 x 1/10GBase-R SFP+ ports**
 - IEEE 802.3z compliance
 - IEEE 802.3ae 10Gb/s Ethernet
 - Support Auto-Speed for fiber port
 - SFP+ Slot
- **Switching Features**
 - Store & forward switching
 - Non-blocking switching fabric:128Gbps
 - Mac address table:16K
 - Packet buffer total 12Mbit
 - VLANs support up to 4K VLAN Groups
 - 802.1Q Tunneling (QinQ)
 - VLAN Translation
 - Support jumbo frame on all ports up to 12K bytes size
 - QoS classification based on IEEE802.1p, TOS/DSCP
 - Rate limit control
 - NTP client
 - Static multicasting
 - IGMP v1/v2/v3 snooping
 - IGMP fast leave & query
 - MLD v1/v2 snooping
 - IGMP filtering via filtering profile
 - Multicast channel limitations per port
 - DHCP snooping
 - DHCP client and auto-provision
 - DHCP relay agent with option 82
 - Access Control List (ACL)
 - Rapid Spanning Tree Protocol (RSTP)
 - Link Layer Discovery Protocol (LLDP)
 - IEEE 802.1X Authentication
 - IPv6 over Ethernet
 - IPv6 Addressing Architecture
 - IPv6 Dual Stack
 - Storm Control
 - MAC Limiter
 - CPU temperature alarm notification
 - L2PT (Layer 2 Protocol Tunneling)
 - Sticky MAC Address function

- Support the internal power voltage monitoring for the system diagnostics
- Support MVR (Multicast VLAN Registration)

■ Management Functions

- Console
- Telnet & SSH/CLI
- Web (HTTP & HTTPS)
- RADIUS/TACACS+ for authentication
- SNMP v1/v2c/v3 and network management
- SNMP Power-Down Trap
- Private, RFC-1213, RMON MIBs
- Port mirroring
- FTP, TFTP, HTTP server and client firmware upgrade

■ Operation Environment

- Operating Temperature: 0°C~50°C

■ Power Requirement

- Input AC: 100V ~ 240V, 50/60Hz, 0.48 ~ 0.25A
- Input DC: 48V (Range: 44 ~ 52V), 0.5A
- Max. Power Consumption: 24W (81.8BTU/h)

■ Dimension & Weight

- Size: 440 x 231 x 44mm (W x D x H)
- Weight (Max.): 3.17kg

■ EMC/Safety

- FCC Class A, CE

1.3 Front & Rear Panels

1.3.1 Front Panel

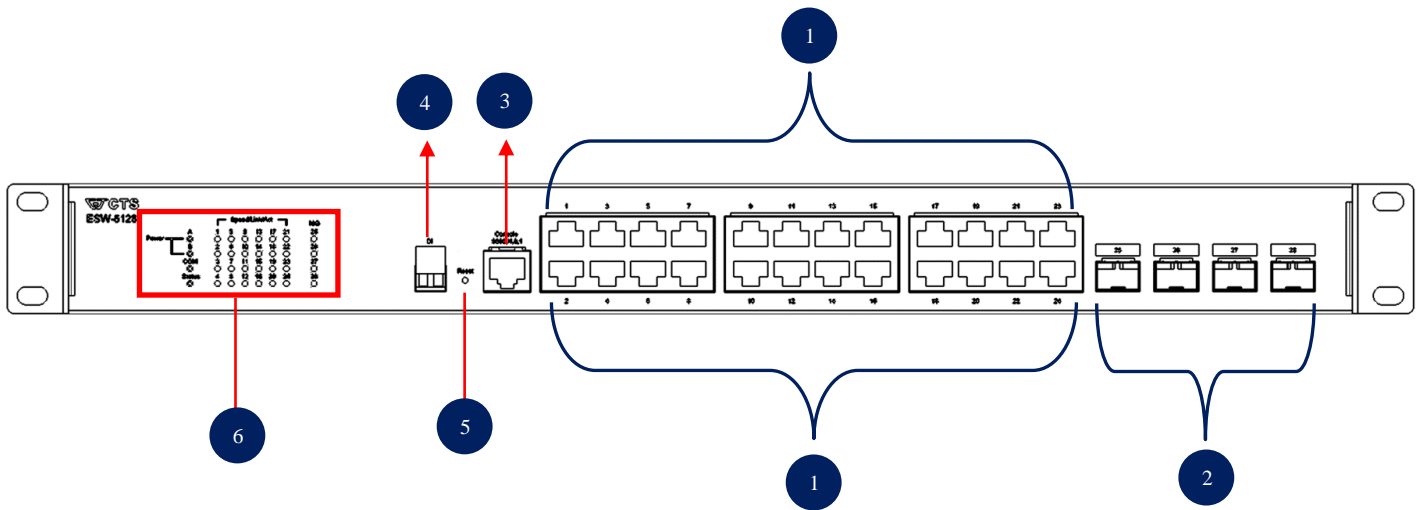


Figure 1-1. The Managed Switch Front Panel

The interfaces on the front panel of the Managed Switch are described below:

1. **24 x 10/100/1000Base-T RJ-45 downlink ports (Ports 1-24)**
2. **4 x 1/10GBase-R SFP+ uplink ports (Ports 25-28)**
3. **Console Port:**
 - An asynchronous serial console port supports the RS-232 electrical specification. The console port can be used to manage the device, and the serial console port settings should be configured as 9600, 8, n, 1.
4. **Digital Input (Dry Contact):**
 - A voltage-free connector that is used to decide whether the trigger occurs or not by detecting its open/close status. The configuration is as follows:
 - Open: Logic Level 0
 - Close: Logic Level 1
5. **Reset Button:**
 - Press the reset button for 5~10 seconds, then release it to restart the system.
 - Press the reset button for more than 10 seconds, then release it to reset the Managed Switch. The settings will be back to the factory defaults and restart the system.

6. LEDs:

- Includes Power LEDs, COM LED, Status LED, LEDs of TP 1~24 ports and LEDs of SFP+ 25~28 ports. For more details on LEDs description, please refer to Section [1.4 LED Definitions](#).

1.3.2 Rear Panel

The Managed Switch provides one fixed power module or two fixed power modules for redundancy purpose. Depending on your physical environment requirements, the type of power module is selectable and could be either AC input or DC input.



Figure 1-2. The Managed Switch Rear Panel

The interface on the rear panel of the Managed Switch is described below:

7. Power module and Connector:

- AC power connection: 100V ~ 240V, 50/60Hz, 0.48 ~ 0.25A
- DC power connection: 48V (Range: 44 ~ 52V), 0.5A

8. Ground Screw (For more information, please refer to [Section 2.4](#))

1.4 LED Definitions

The Managed Switch is Plug & Play compliant. The real-time operational status can be monitored through a set of LED indicators located on the front panel.

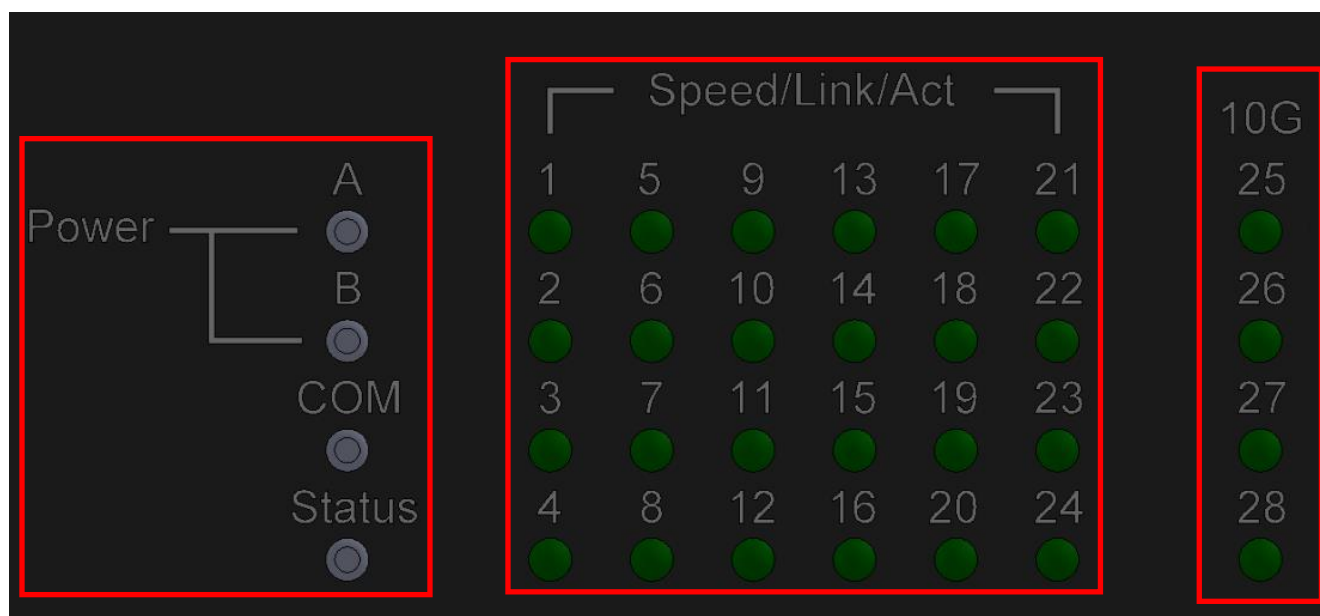


Figure 1-3. LEDs of the Managed Switch

Power A/B LED

The power status of the Managed Switch is indicated by the Power A/B LED on the front panel of the device.

LED	Color	Operation
Power A/B	OFF	No fixed-in power module exists or power is off.
	Green	Lit when power module is in normal operation.
	Orange	Fixed-in power module is no longer receiving power or DC output fails.

Status LED

The Managed Switch status is indicated by the Status LED on the front panel of the device.

LED	Color	Operation
Status	Green	Lit when the device is in normal operation.
	Orange	Lit when the device is booting up or press the Reset button for 5~10 seconds and then release to restart the system.
		Blinking when pressing the Reset button for more than 10 seconds and then release to reset (return to factory default settings) and restart the system. The LED indicator will blink in orange color for three times.

COM LED

The console status is indicated by the COM LED on the front panel of the device.

LED	Color	Operation
COM	OFF	Either the console port is not activated or no session exists.
	Green	Lit when the console port is activated and the session exists.

TP 1~24 Port LEDs

LED	Color	Operation
Link/ACT/ Speed	OFF	No connection exists.
	Green	Lit when the 10/100Mbps port link is up. Blinking when the port is receiving and transmitting data at the speed of 10/100Mbps.
	Orange	Lit when the 1000Mbps port link is up. Blinking when the TP port is receiving and transmitting data at the speed of 1000Mbps.

SFP+ 25~28 Port LEDs

LED	Color	Operation
Link/ACT/ Speed	OFF	No connection.
	Orange	Lit when the 1Gbps port link is up. Blinking when the port is receiving and transmitting data at the speed of 1Gbps.
	Blue	Lit when the 10Gbps port link is up. Blinking when the port is receiving and transmitting data at the speed of 10Gbps.

1.5 Cable Specifications

The following table contains various cable specifications for the Managed Switch. Please make sure that you use the proper cable when connecting the Managed Switch.

Cable Type	Description
100BASE-FX	Multi-mode fiber module(2km) / Single-mode fiber module
1000BASE-SX	Multi-mode fiber module (550m)
1000BASE-LX	Single-mode fiber module (10km)
1000BASE-LH	Single-mode fiber module (30km/50km)
1000BASE-ZX	Single-mode fiber module (80km)
SFP Transceiver	SFP Transceiver for 1000BASE-SX Multi-mode fiber module (550m) SFP Transceiver for 1000BASE-LX Single-mode fiber module (10km) SFP Transceiver for 1000BASE-LH Single-mode fiber module (30km/50km) SFP Transceiver for 1000BASE-ZX Single-mode fiber module (80km)
10GBASE-SR	Multi-mode fiber module (26m or 400m)
10GBASE-LR	Single-mode fiber module (10km)
10GBASE-ER	Single-mode fiber module (40km)
10GBASE-LRM	Multi-mode fiber module (220m)

2

Installation

To properly install the Managed Switch, please follow the procedures listed below. These procedures will be respectively described in detail in the following sections.

- Installation Requirements
- Checking the Package Contents
- Installing the Managed Switch
- Grounding the Managed Switch
- Powering on the Managed Switch
- Connecting the Managed Switch to the Network
- Installing and Removing SFP/SFP+ Modules
- Connecting the Switch to Console Port

2.1 Installation Requirements

Basic requirements for installation are as follows:

- Environmental conditions
 - One power outlet
 - Proper ventilation
 - Proper isolation to electrical noise, radio, etc.
- Required SFP/SFP+ Transceiver
- Rack mounting tools

2.2 Checking the Package Contents

Unpack the package carefully and check the package contents. The package should contain the following items:

- One set of the Managed Switch
- 19-inch rack-mount kit (fixed onto the Managed Switch when shipped)
 - Two pieces of rack ears
 - Eight pieces of M3 x 4mm flat head screws
- Four rubber feet with adhesive backing
- Console RS-232 cable with RJ-45 connector
- Documentation CD
- AC power cord (for AC power module only)

If any item is found missing or damaged, please contact your local sales representative for support or replacement.

2.3 Installing the Managed Switch

You can install the Managed Switch on a flat surface or mount it in a standard 19-inch network equipment rack.



CAUTION

To prevent any damage or failure of the Managed Switch, please **DO NOT** block the ventilation holes.

Use the following guidelines when choosing a place to install the switch:

- Firm and steady flat surface.
- Proper power outlet location, not too far from the device.
- Visually inspect the power cord and see that it is secured to the AC power connector.
- Make sure that there is proper heat dissipation from and adequate ventilation around the switch. Do not place heavy objects on the Managed Switch.

Note:

The product appearance in the following diagrams might differ from the actual device as different equipment is used to showcase the installation examples.

2.3.1 Desktop Installation

The switch can be placed in any flat and steady surface with proper air ventilation. Four rubber feet with adhesive backing are provided for this kind of installation.

Procedures

- ❶ Attach rubber feet on the bottom at each corner of the device.
- ❷ Select a flat and steady surface to place the switch.
- ❸ Allow adequate space for ventilation between the device and the objects around it.

2.3.2 Rack Installation

In the following section, we will take a Managed Switch for example to install a 19-inch switch in a standard 19-inch network equipment rack.



WARNING!

Please mount the Switch firmly in rack, otherwise it may fall and cause the system damage and possible injury to personnel.

2.3.2.1 Install the Managed Switch in a Rack

The Managed Switch can be mounted in an EIA standard-sized, 19-inch rack, which can be placed in a wiring closet with other equipment. Rack mounting brackets are provided to mount the Switch. Just follow the procedures listed below for step-by-step instructions to install your switch in this rack space:

Step 1. Plan the rack position.

Step 2. Align the mounting holes in the brackets with the desired holes in the rack, and insert suitable screws (not provided along with the Managed Switch) through each bracket and into the rack. (See Figure 2-1)

Step 3. Then, tighten the screws with the screwdriver to secure mounting brackets to the rack.

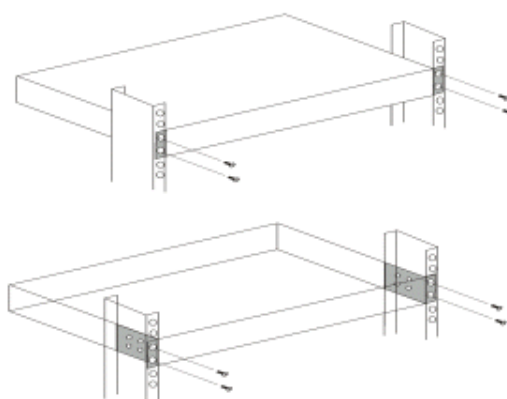


Figure 2-1. Switch Rack-mounting

Step 4. Please ensure that the ventilation holes are not blocked.

2.3.3 Wall-Mounting Installation

Besides the aforementioned methods, to mount the Managed Switch on the wall is quite easy, please also follow the procedures listed below for step-by-step instructions.

Step 1. Remove the supplied rack mounting brackets from the switch:

1.1. Unscrew the screws from each bracket at both sides of the switch. (See Figure 2-2)

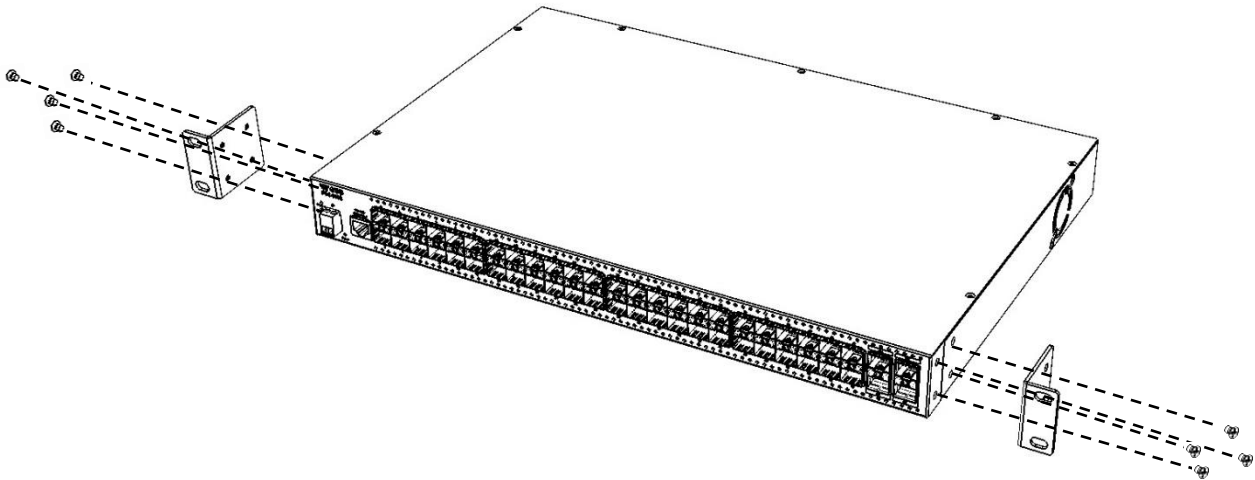


Figure 2-2. Remove brackets for the Managed Switch Wall-mounting

Step 2. Attach the supplied rack mounting brackets to the switch in the direction shown on the figure 2-3:

2.1. Refer to the figure 2-3 to attach the supplied rack mounting bracket to one side of the switch that you would like to install on the wall.

2.2. Also refer to the figure 2-3 to attach the supplied rack mounting bracket to the other side of the switch.

Step 3. Insert the M3 x 4mm flat head screws provided in the rack-mount kit through each bracket and into the bracket mounting holes in the switch. (See Figure 2-3)

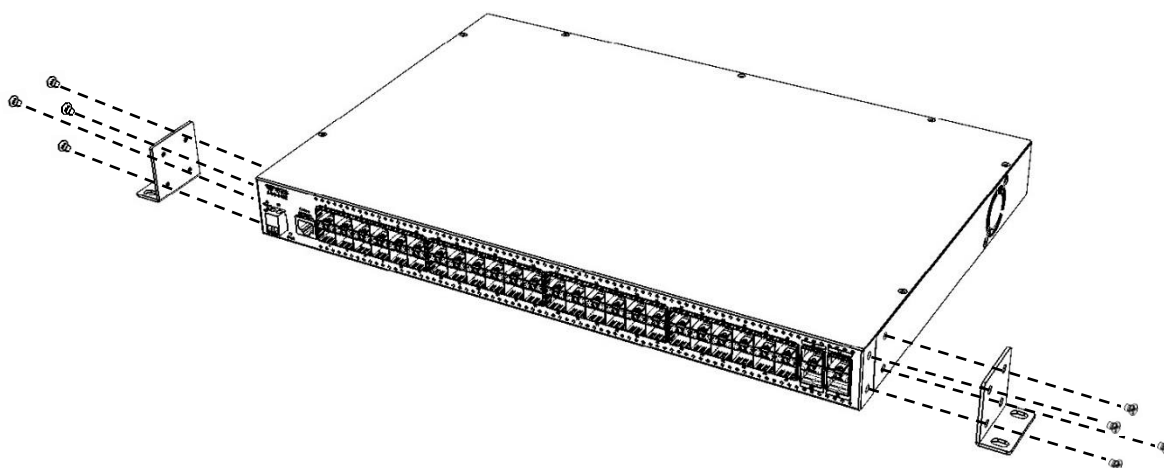


Figure 2-3. The Managed Switch Wall-mounting

- Step 4.** Select a proper space to drill 2 holes on the wall upon the distance between mounting holes of the brackets at both sides of the switch.
- Step 5.** Align the mounting holes in the brackets with the holes you drill on the wall, and insert suitable screws (not provided along with the Managed Switch) through the mounting bracket and into the holes on the wall.
- Step 6.** Then, tighten the screws with the screwdriver to secure mounting brackets to the wall.
- Step 7.** Please ensure that the ventilation holes are not blocked.

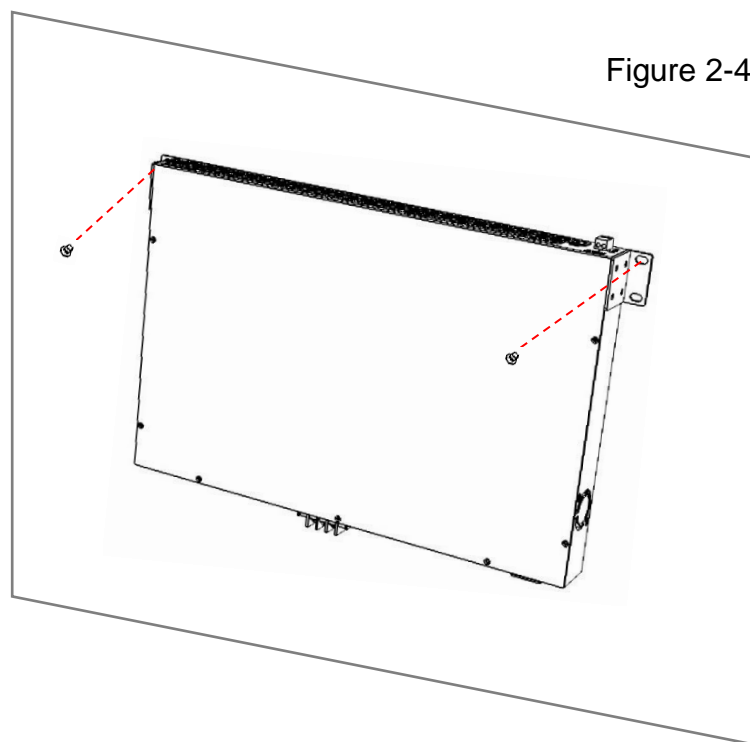


Figure 2-4. Mount on the wall

Note: Wall-mounting installation is only for the new short-sized brackets.

2.4 Grounding the Managed Switch

Grounding helps to limit the effects of noise due to electromagnetic interference (EMI). Be sure to install the ground connection from the ground screw to the grounding surface before connecting devices.

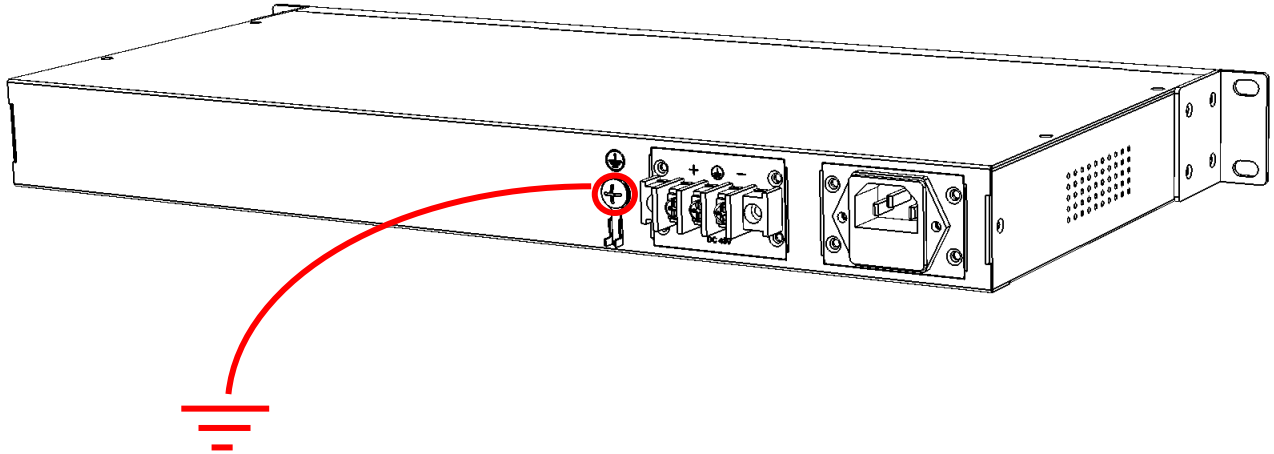


Figure 2-5 Grounding Wiring for the Managed Switch

2.5 Powering on the Managed Switch

The Managed Switch can be used with AC power supply 100-240V, 50–60Hz, 0.48-0.25A or DC power supply 48V (Range: 44~52V), 0.5A. After the Managed Switch is turned on, the Power LED indicators should light in green color. For more details about the power LED description, please refer to Section [1.4 LED Definitions](#).

Power Failure

In the event of power failure, unplug the power that is plugged into the switch. When power is resumed, plug the power back to the switch.

2.6 Connecting the Managed Switch to the Network

Connect to Network

The Managed Switch has 24 TP ports and 4 SFP+ ports on the front panel. The 24 TP ports can be plugged with 10/100/1000Base-T UTP cable, whereas the uplink ports 25-28 can be plugged with 1000Base-X SFP Fiber transceiver or 10GBase-R SFP+ Fiber transceiver. The connection of the fiber port must be matched, i.e. Transmitter to Receiver, and vice versa.

2.7 Installing and Removing SFP/SFP+ Modules

2.7.1 Installing SFP/SFP+ Modules

To connect the fiber transceiver and LC/SC cable, use the following guidelines:

1. Position the SFP/SFP+ transceiver with the handle on top.
2. Locate the triangular marking in the slot and align it with the bottom of the transceiver.
3. Insert the SFP/SFP+ transceiver into the slot until it clicks into place.
4. Make sure the module is seated correctly before sliding the module into the slot. A click sounds when it is locked in place.

Note: If you are attaching fiber optic cables to the transceiver, continue with the following step. Otherwise, repeat the previous steps to install the remaining SFP/SFP+ transceivers in the device.

1. Remove the protective plug from the SFP/SFP+ transceiver.

Note: Do not remove the dust plug from the transceiver if you are not installing the fiber optic cable at this time. The dust plug protects hardware from dust contamination.

2. Insert the fiber cable into the transceiver. The connector snaps into place and locks.
3. Repeat the previous procedures to install any additional SFP/SFP+ transceivers in the switch. The fiber port is now set up.

2.7.2 Removing SFP/SFP+ Modules

To disconnect an LC/SC connector, use the following guidelines:

1. Press down and hold the locking clips on the upper side of the optic cable.
2. Pull the optic cable out to release it from the transceiver.
3. Hold the handle on the transceiver and pull the transceiver out of the slot.

2.8 Connecting the Switch to Console Port

The switch supports a secondary means of management. By connecting the RJ45 to RS232 serial cable between a COM port on your PC (9-pin D-sub female) and the switch's RJ45 (RJ45) port, a wired connection for management can be established.



3

Operation

A built-in management module of Managed Switch provides users flexible interfaces to configure, control and monitor the system remotely and locally. To know the further information about the operation of Managed Switch, please refer to Network Management User's Manual for the detailed management functions and required installation and operation procedures.

3.1 Network Management

The following is a list of management options available in this Managed Switch:

- Local Console Management
- Telnet Management
- SNMP Management
- Web Management

Local Console Management

Users may connect a Terminal or PC running the Terminal Emulation program (such as Putty or Tera Term) with the following serial console port settings, to the Managed Switch console port directly via RS-232 cable to configure, control and monitor the system. This is often referred to as Out-Of-Band management.

Baud rate:	9600
Data bits:	8
Parity:	none
Stop bits:	1
Flow control:	none

Console management is useful when there is no network connection to the Switch, for instance configuring the Managed Switch for the first time.

Telnet Management

Telnet is done through the network. Once there is a network connection to the Managed Switch, users can use Telnet to configure, control and monitor the system. Using the network connection to manage is often referred to as In-Band-Management.

SNMP Management

SNMP is also In-Band-Management and requires a network connection to the Managed Switch. The Managed Switch private Management Information Bases (MIB) is provided for SNMP-based network management program to configure, control and monitor the system.

Web Management

Web Management is done over the network. Once the Managed Switch is available on the network, you can login and monitor the status of it through a web browser remotely or locally. Web management in the local site, especially for the first time use of the Managed Switch to set up the needed IP, can also be done through one of the SFP/SFP+ ports located on the front panel of the Managed Switch. A converter and direct RJ-45 LAN cable connection between a PC and the Managed Switch are required for this management.

4

Maintenance

This Managed Switch is easy to maintain. The procedures are suggested when you would like to identify faults, perform hardware replacement and firmware upgrade.

4.1 Fault Identification

Identifying faults can greatly reduce the times required to find problem and solution. Users may perform local check or remote check to find the problems.

4.1.1 Local Check

Users can perform local check by observing LED indicators status or check system setup and configuration through console connection.

- When the whole system fails to function,
 1. Check Power LED status
 2. Check Power connection
 3. Reset power
- When certain network link fails to function,
 1. Locate the port of the switch
 2. Check LINK/ACT/Speed LED of the port
 3. Check Status LED of the port
 4. Check cable connection between the port and the connected device
 5. Reset power
- When local Console fails to function,
 1. Check COM LED status
 2. Check Console port connection
 3. Check Console configuration
 4. Reset power

4.1.2 Remote Check

Users may check the Managed Switch through SNMP manager remotely. For detailed procedures, please refer to the Network Management User's Manual.

4.2 Hardware Replacement Procedures



WARNING!

The Managed Switch contains no user-serviceable parts. DO NOT, UNDER ANY CIRCUMSTANCES, open and attempt to repair it.

Failure to observe this warning could result in personal injury or death from electrical shock.

Failure to observe the above warning will immediately void any Warranty.

4.3 Firmware Upgrade

This Managed Switch may perform the firmware upgrade when required. The latest firmware can be obtained from your sales representative. For the detailed upgrade procedures, please refer to Network Management User's Manual.



CONNECTION TECHNOLOGY SYSTEMS

18F-6, No.79, Sec.1, Xintai 5th Rd.,
XiZhi Dist., New Taipei City 221, Taiwan(R.O.C)

Tel: +886-2-2698-9661

Fax: +886-2-2698-9662

Dir.Line:+886-2-2698-9201

www.ctsystem.com